

Installation Instructions

Ambassador Lite

for use with vinyl walls

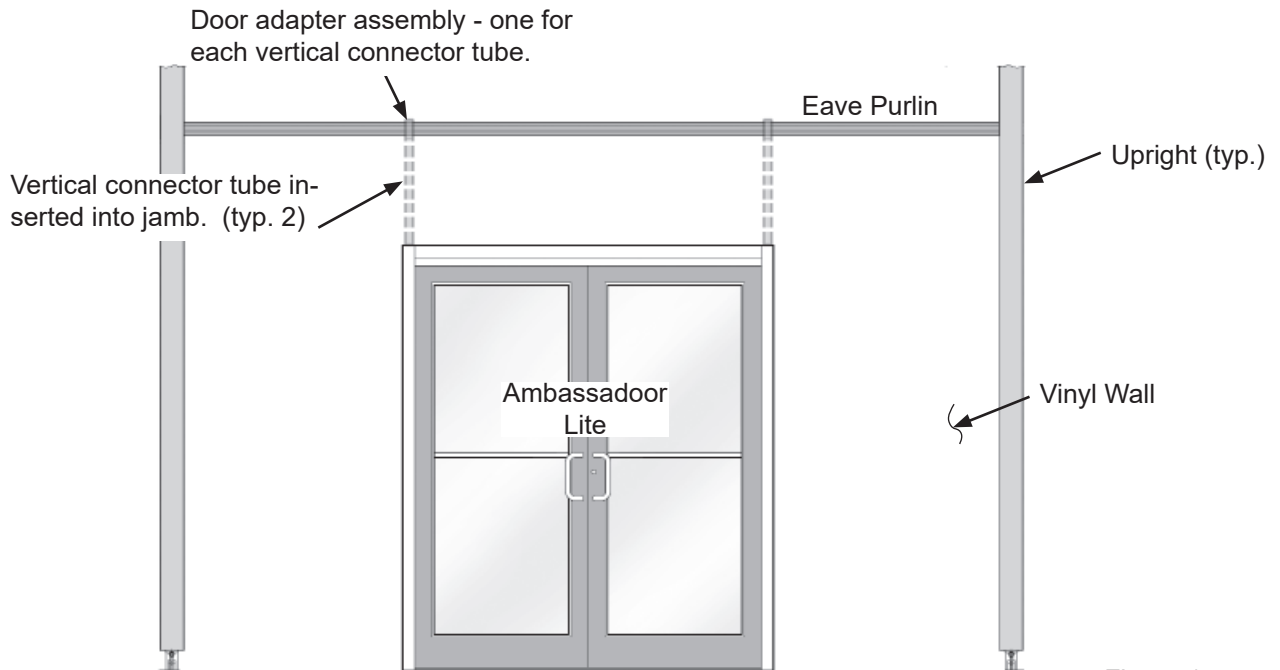


Figure 1

ELEVATION
Outside View

Step 1: Door Preparation Assembly

1. Remove door from wood crate utilizing the nylon lifting straps provided and place face-up (as positioned in crate) on platform floor. (Figure 2)
2. Remove two (2) vertical connector tubes shipped loose in the wood crate and insert one into the top of each jamb. The holes in the connector tube must be toward the top and aligned with the interior/ exterior of the frame. (Figure 5)
3. Loosely bolt one door adapter assembly through the two holes at the top of each connector tube with the wing nuts and bolts provided. (Figure 3) See Figure 3 for different types of adapter assemblies.
4. Position the Ambassador Lite upright directly below the centerline of the eave purlin. Extend each connector tube upward until the door adapters can be clamped to the eave purlin. Tighten the wing nuts.
5. Level and plumb the Ambassador Lite. The door is leveled and plumbed correctly when the bottom of each door leaf aligns and both doors swing without rubbing the threshold.
6. Stake the threshold to the ground with the four (4) galvanized nail stakes provided in the vinyl hardware bag.
7. Keys for the cylinder lock and allen tool for dogging the panic bars are packed in the hardware bag.
8. Door alignment may need periodic adjustments during normal use.


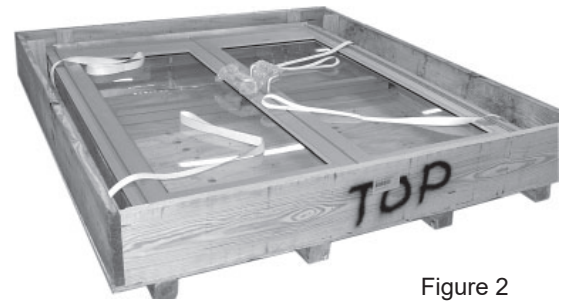


Figure 2

Adapter Types



Door adapter for pole tents.
7'-6" pole spacing (8143605)
10'-0" pole spacing (8143606)

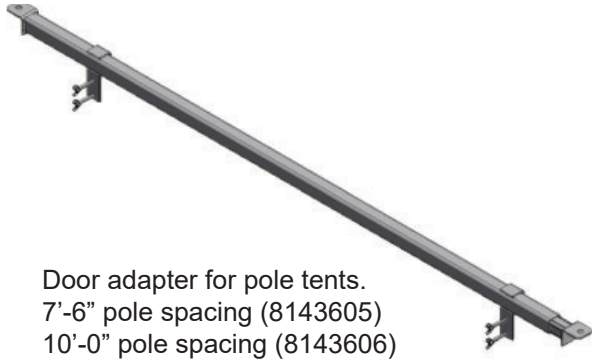

A.S. Venue Mid Adapter Kit (8125469)



A.S. Event & Expo End Adapter Kit (8143604)



A.S. Event & Expo Mid Adapter Kit (8125468)



Navi-Trac Adapter Kit (8004295)



Navi-Trac Lt Adapter Kit (8004587)



Century Frame/Anchor Span Adapter Kit (8143604)

Figure 3

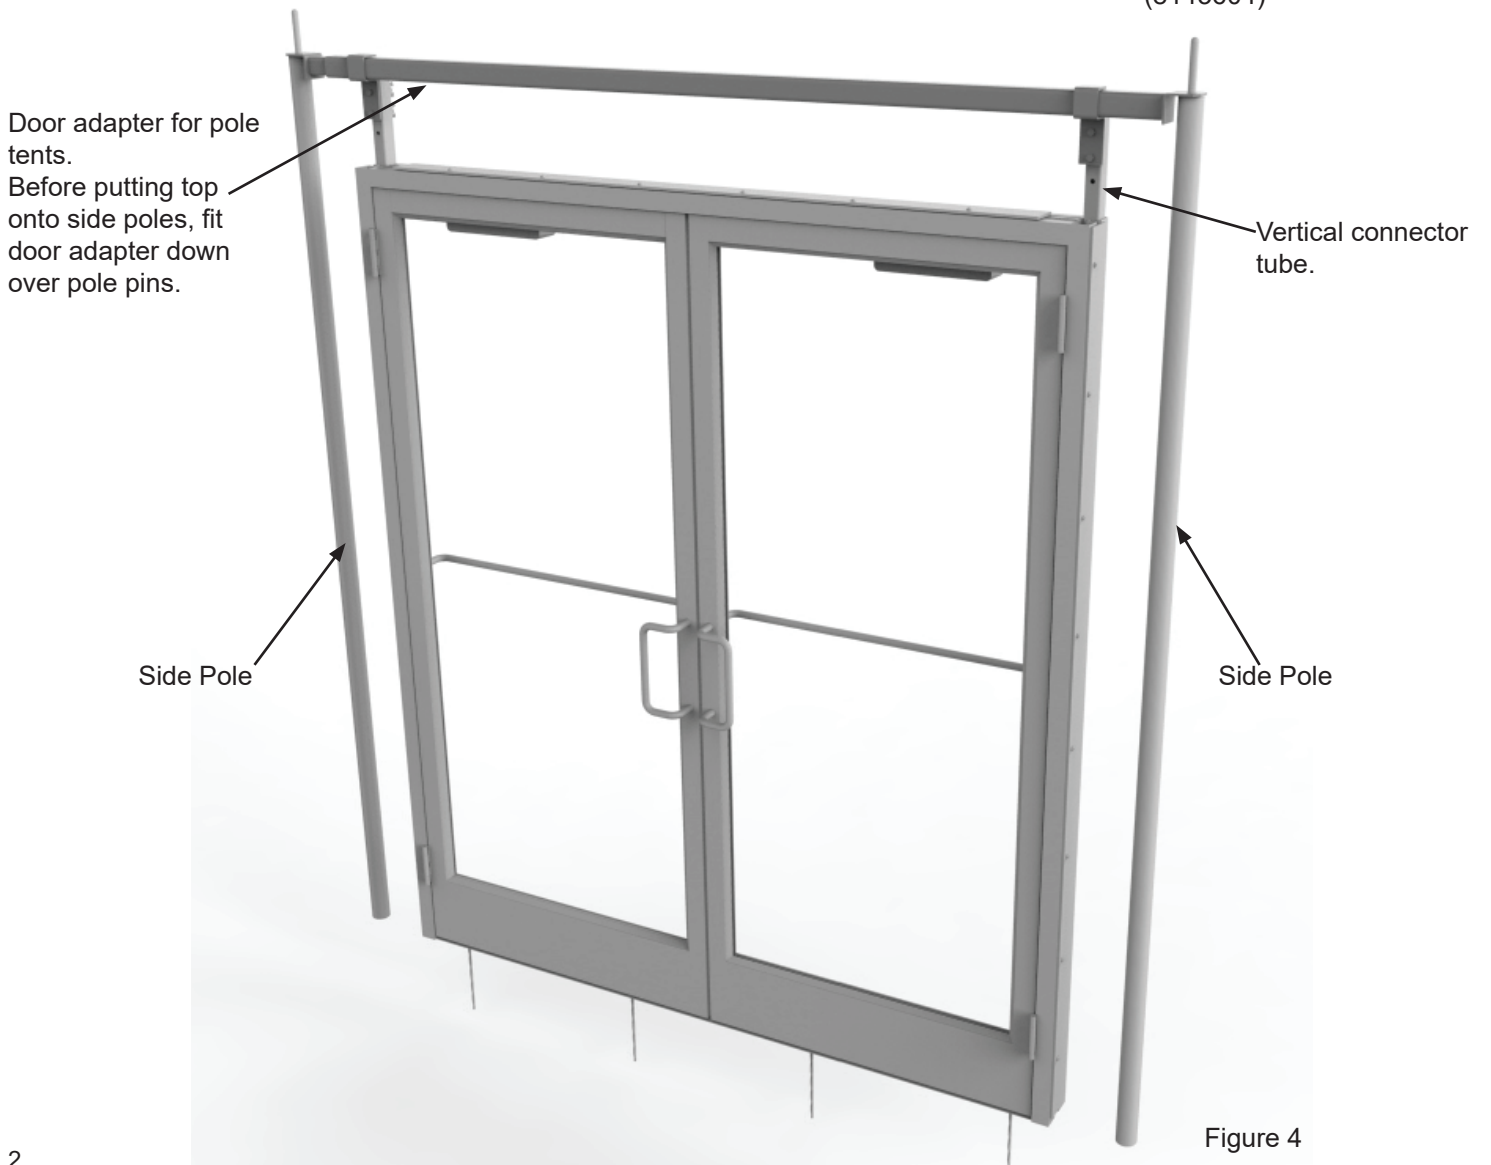


Figure 4

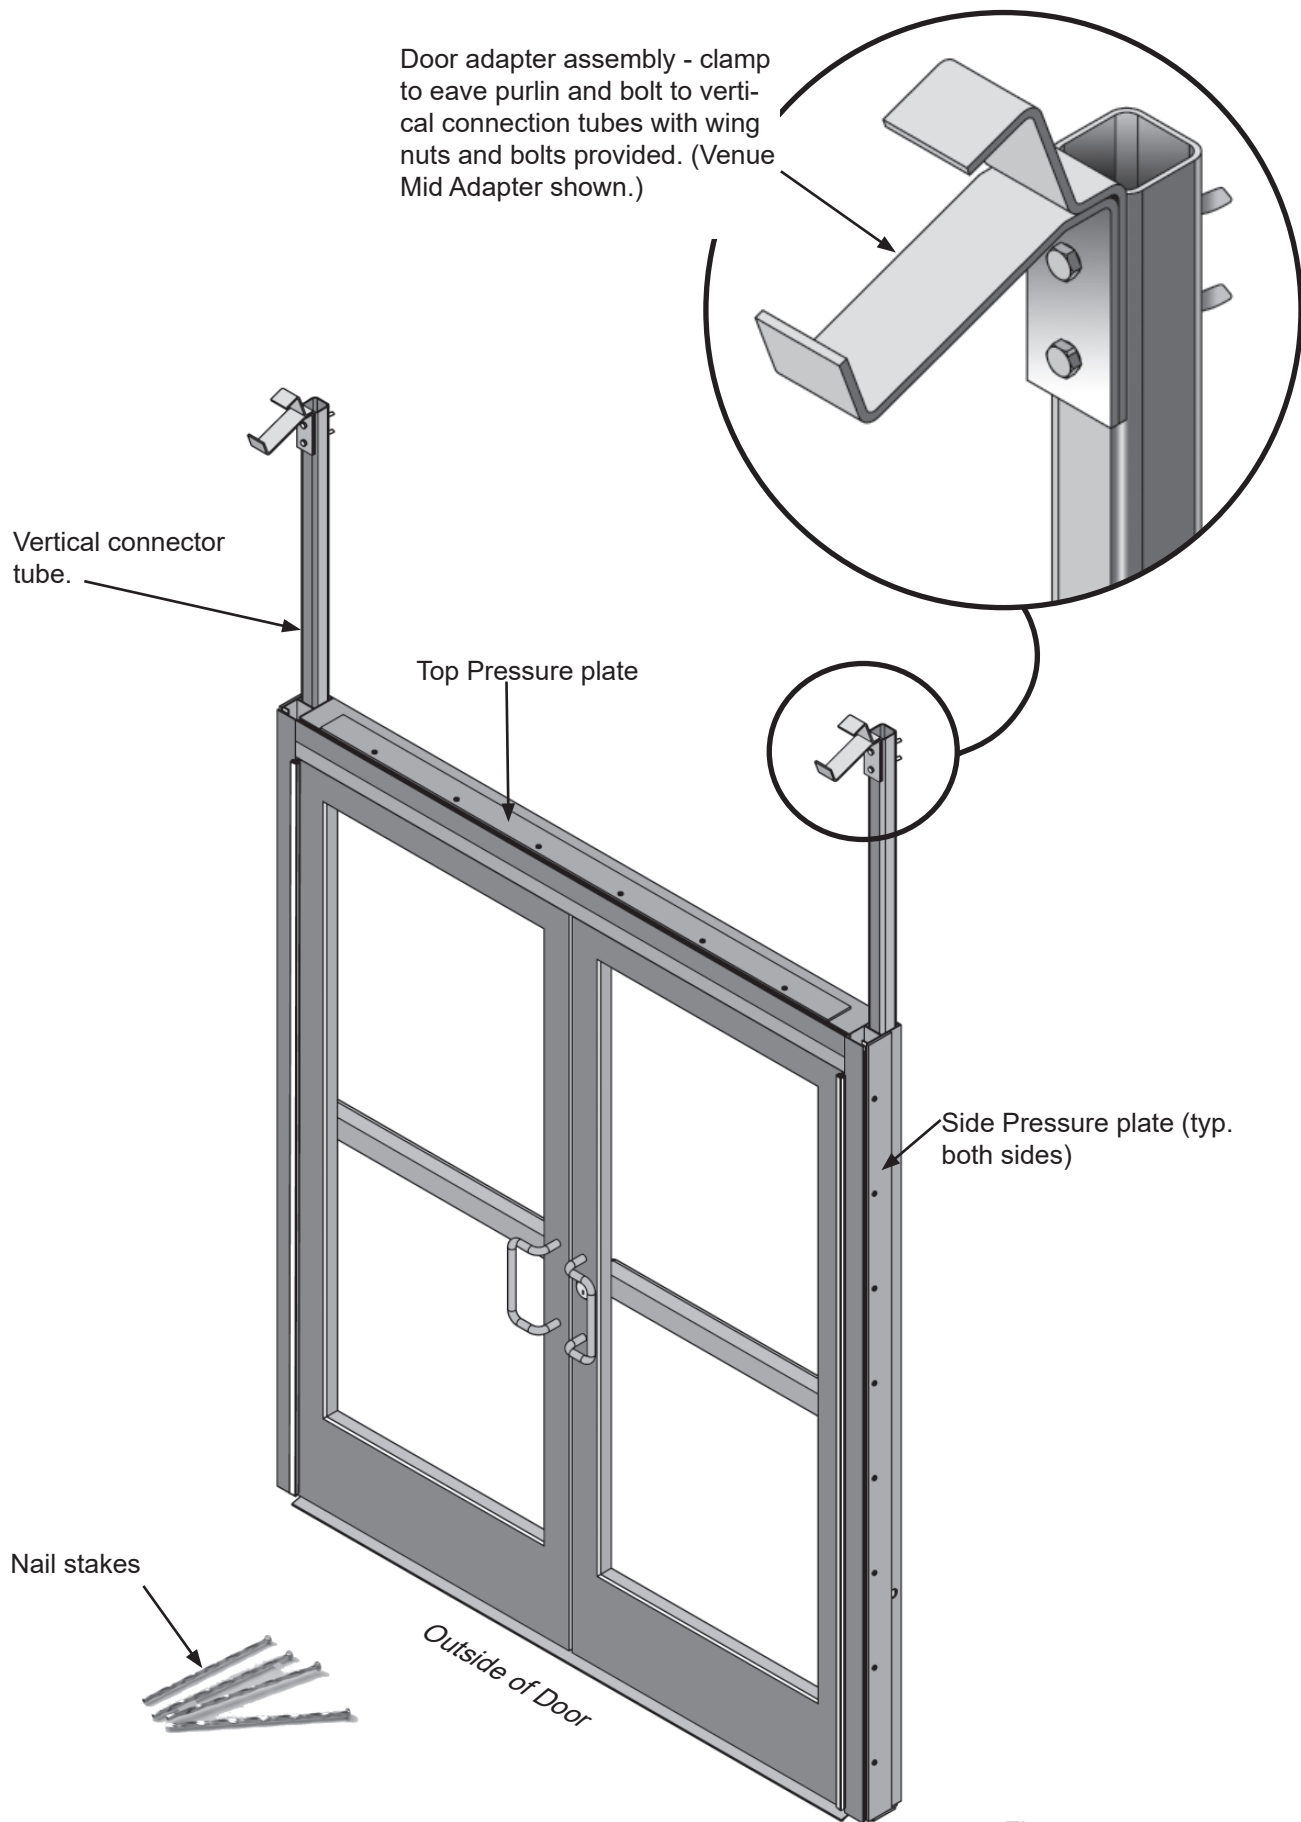


Figure 5

Step 2: Vinyl Wall Installation

1. Use a side lace wall.
2. Install wall on outside of where door will be placed.
3. Remove pressure plates from ambassador lite
4. Stand Door up (on inside)
5. Place in position (where you require).
6. Feel for upper right outside corner of door and cut wall diagonally across to lower left outside corner of door, using a razor knife.

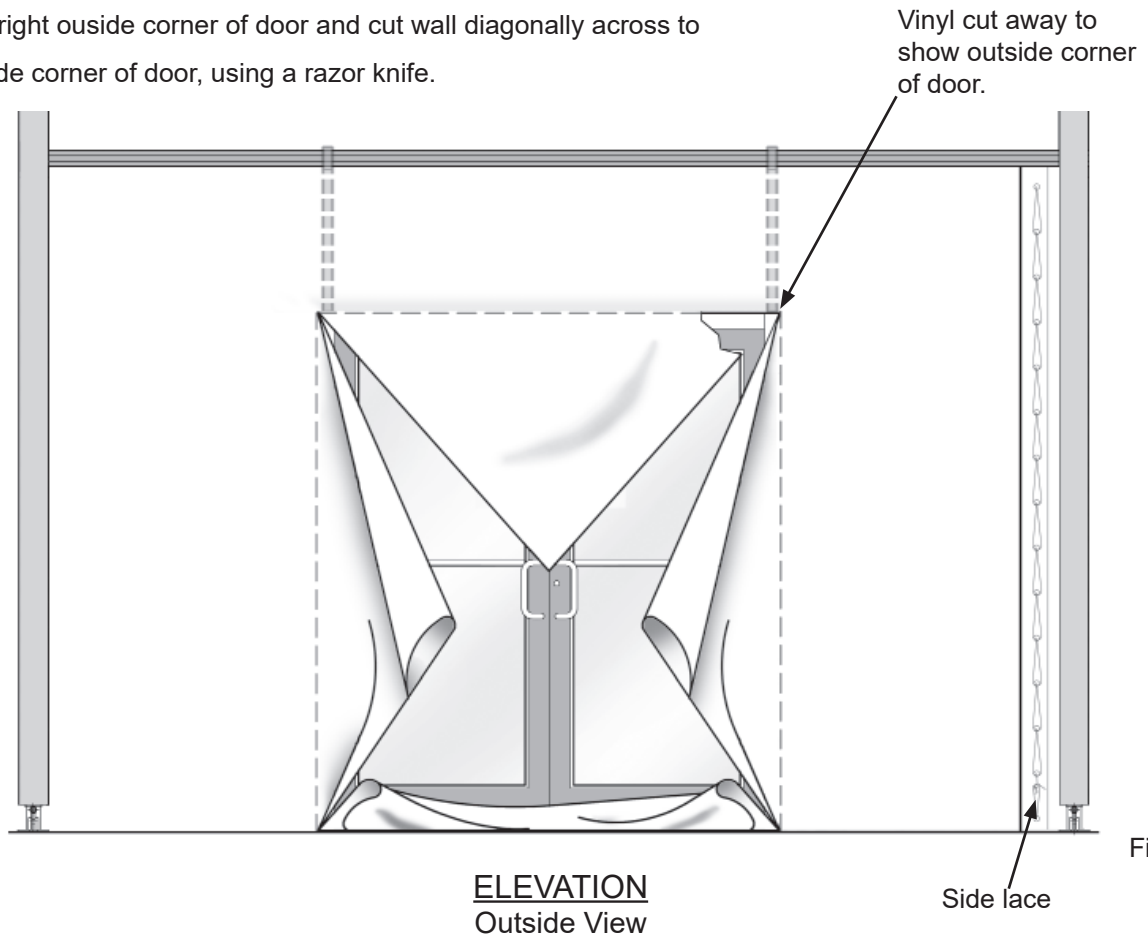


Figure 6

7. Then feel for upper left outside corner of door and cut wall diagonally across to lower right outside corner of door.
8. You will now have 4 triangles with the bottom one falling away.
9. Put pressure plate in place trapping vinyl underneath
10. Pull vinyl triangles back toward inside of tent.
11. When you are satisfied with the how vinyl is fitting, screw the pressure plates in place.
12. Then cut vinyl off at edge of pressure plates.
13. Plum door and stake.



PHONE NUMBER
812 · 867 · 2421

FAX NUMBER
812 · 867 · 1429

Anchor products are of superior design and operate best within the parameters of these instructions. It is imperative that the instructions be carefully read and **COMPLETELY FOLLOWED**. Please read installation instructions before the installation or removal of this product. Installation instructions are available online at www.anchorinc.com or by calling 1-800-544-4445.



1. For each installation, the installer is solely responsible for evaluating the site and the proper securing method determined. Some soils require different staking or securing than that provided with the tent. Due to this variety of soil conditions, these are the manufacturer's suggested sequence of installation procedures. Anchor's responsibility is limited to the manufacture of the tent parts and materials. We are not responsible for methods that installers may choose to erect and secure the tent to the ground.
2. The number of stakes suggested in the installation instructions do not necessarily meet all or any relevant codes on the site of the tent installation. The number of stakes suggested **will, in many cases, keep the tent erected**, however, due to various soil conditions; these stakes will be insufficient **to keep the tent secure in high winds**. It is the tent installer's responsibility, not the manufacturer, to determine the appropriate number of stakes to meet the necessary wind loads on the site. Regardless of the number of stakes we suggest, we make no representation or warranty as to whether this specific number of stakes will meet the local tent code. Anchor does not, nor can it make any suggestions, representation, or warranties about the adequate staking required at each specific installation site. Staking information provided in the installation instructions **is not a suggestion about what is necessary to meet a site-specific load**.

For additional important information, consult: "The IFAI Procedural Handbook For the Safe Installation and Maintenance of Tentage" and the IFAI Pocket Guide "Pullout Capacity of Tent Stakes", both available from the IFAI Tent Rental Division on their website (www.ifai.com).

3. Inasmuch as the weather is unpredictable, good judgment and common sense must be incorporated within installation guidelines. It is the responsibility of the tent installer/maintainer to determine the severity of the weather, proper time and method of installation and/or erection and disassembly. **Note: We recommend that snow and ice be removed from the tent surface as soon as possible because accumulation will damage the tent or fabric structure. Please consult with our Engineering Department about the maximum loads for each product.**

This product has been manufactured for use as a temporary structure. For the safety of all occupants, evacuation is recommended if threatening weather occurs, or if there is any doubt concerning the safe use of this product.

4. Proper safety equipment should be used at all times to insure a safe installation and take down. We suggest a careful evaluation be made to determine safety equipment needed, such as hard hats, steel-toe shoes, safety glasses and other as required. It is our desire that all installations are safe. Please be aware of hidden dangers both underground, i.e., gas lines, water lines, electrical lines, etc. and above the tent such as power lines and telephone lines.
5. Anchor stands behind its products in accordance with its standard Terms and Conditions of sale. A copy of our Terms and Conditions of Sale can be obtained by contacting Anchor at the telephone number and/or address on this document.