

Installation Instructions Fiesta® Frame Tent 24' through 30' Wide Systems with Expandable Kits

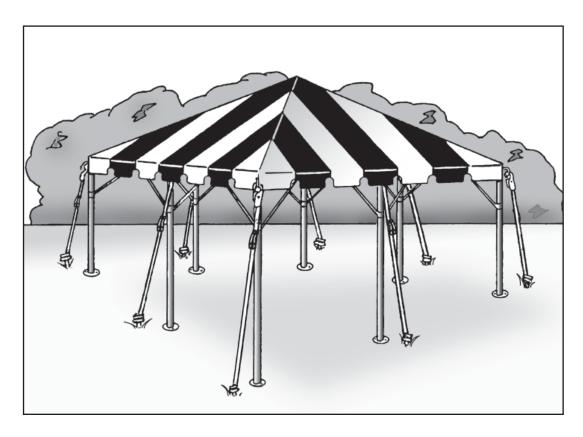

Please read all assembly / installation instructions before the installation or removal of this product.



 
7701 Highway 41 N Evansville, IN 47725 Phone: 812-867-2421 Fax: 812-867-1429 1-800-544-4445 email: tents@anchorinc.com www.anchorinc.com

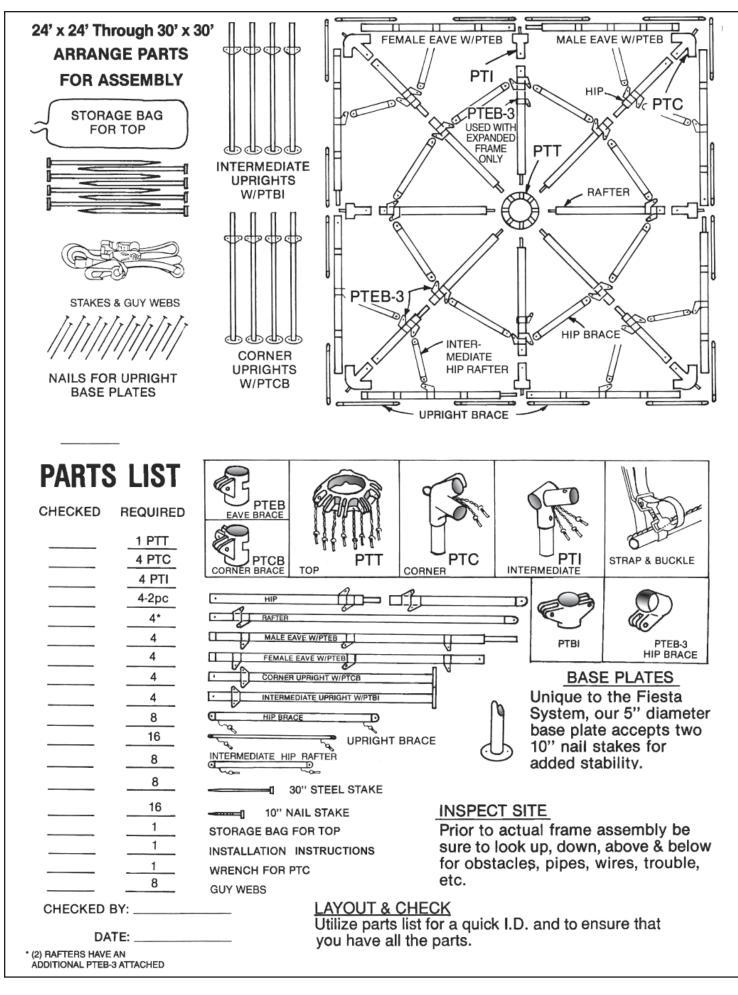

EAVE ASSEMBLY*

Begin by placing PTI casting over Female Eave Bar. Then join Male Eave Bar with long pin from PTI through bars only. Do not pin through PTI. Nut holding PTEB must be on top of bar.

Insert complete eaves into PTC casting and hand tighten PTC nut. Use Fiesta wrench for a $\frac{1}{4}$ to $\frac{1}{2}$ additional turn. Do <u>not</u> over tighten.







3

HIP & PEAK

Join male and female ends of two-piece Hip and secure with pin. Insert Hip Bar into PTC Corner Casting. Fasten with short pin. Insert opposite end into PTT Peak Casting and fasten with pin.

A second installer should support the PTT while hips are being attached.

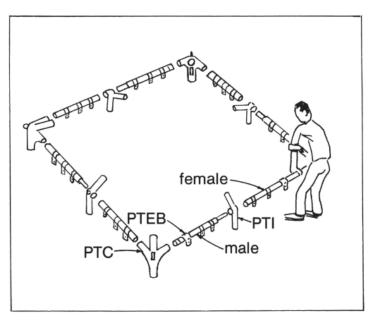

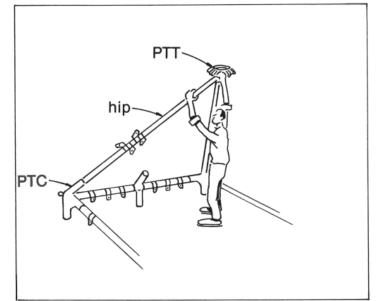


RAFTERS & BRACES*

Insert Rafter Bar into PTI Casting; fasten with short pin. Insert opposite end into PTT Casting and fasten with pin.

Connect Hip Brace to PTEB-3's on Hip and Rafter using pins attached.

Connect Intermediate Rafter to PTEB-3's on Hip and Eave using pins attached.


*For 10'-0" starter kit and extension parts and instructions, see pages 5 & 6.

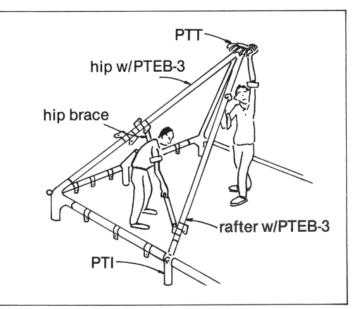

1

PUT TOP ON

 Spread drop cloths. Lay out two piece top with lace edges together and top side up. Matching centerlines, push first loop up through corresponding grommet. Continue lacing process and cover lacing with protective flap and snap to rings. Tie off last long lacing loop. Repeat steps on opposite side starting with second loop from ridge. Place top over frame. Fasten a Fiesta® buckle at each side of corners and at center of each side (more if required) to keep top from blowing off.




LIFT ONE SIDE Lift one side of frame, insert both Corner Uprights into PTC Corner

Corner Uprights into PTC Corner Castings and fasten with long pin. Then insert Intermediate Upright into PTI Casting and fasten with long pin.

CAUTION:

Braces at both corners and intermediate upright "MUST" be in position before lifting other side.

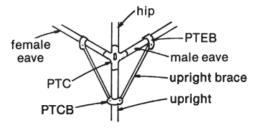


6

LIFT OTHER SIDE


Lift other side of frame, insert both Corner Uprights into PTC Corner Castings and fasten with long pin. Then insert Intermediate Upright into PTI Casting and fasten with long pin.


CAUTION:

Braces at both corners and intermediate upright "MUST" be in position before lifting other side.

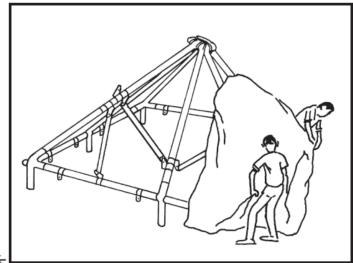


Warning: <u>Do not drag</u> fabric tent top across hard or rough surfaces as abrasion from tent hardware is possible.

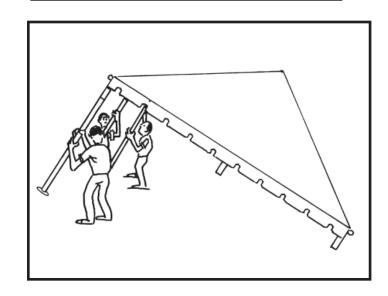

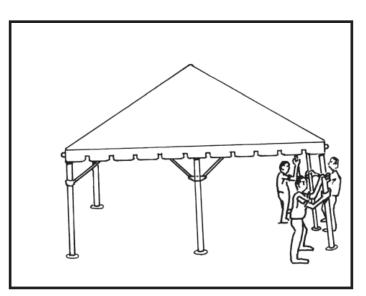

4


5

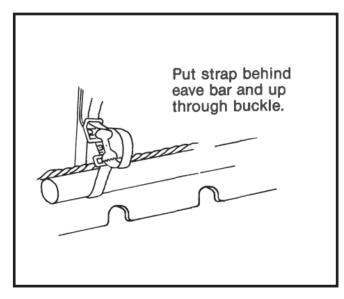

7

SECURE TOP TO FRAME

Starting at center of opposite sides, fasten Fiesta buckles to frame, wrap web strap around eave bar and wall rope, then tension with buckle.

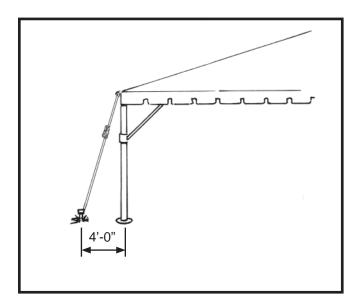

8

WEBS & STAKES


Position tent as desired. (If uprights adjustable, raise to proper height.) Attach guy web and stakes as shown. Periodically check to make sure all are secure and taut.

Protective covers are recommended for all stakes.

"See caution on back page."

IMPORTANT:

Guy webs must be in place at all times.

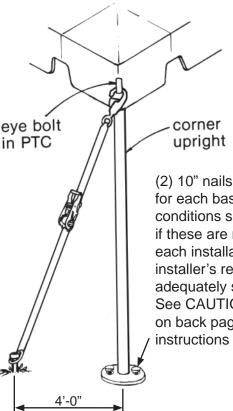

(2) 10" nails are supplied for each baseplate. Site conditions should dictate if these are required for each installation. It is the installer's responsibility to adequately stake the tent. See CAUTION statement on back page of these instructions for reference.

9

TAKE DOWN

- 1. Release straps and buckles.
- Remove intermediate uprights on three sides. Leave installed on side to be taken down last.
- 3. "Loosen" all guy webs.
- 4. Starting on one side remove all braces.

CAUTION:

Do not remove braces from opposite side until first side is lowered to ground.


- 5. Remove (2) corner uprights and lower one side to ground.
- 6. Repeat assembly steps #1-#6 in reverse for disassembly.

MANPOWER REQUIRED:

Three experienced installers should be able to assemble in less than one and one-half hours.

TOOLS REQUIRED:

Sledge Hammer Fiesta Wrench (supplied)

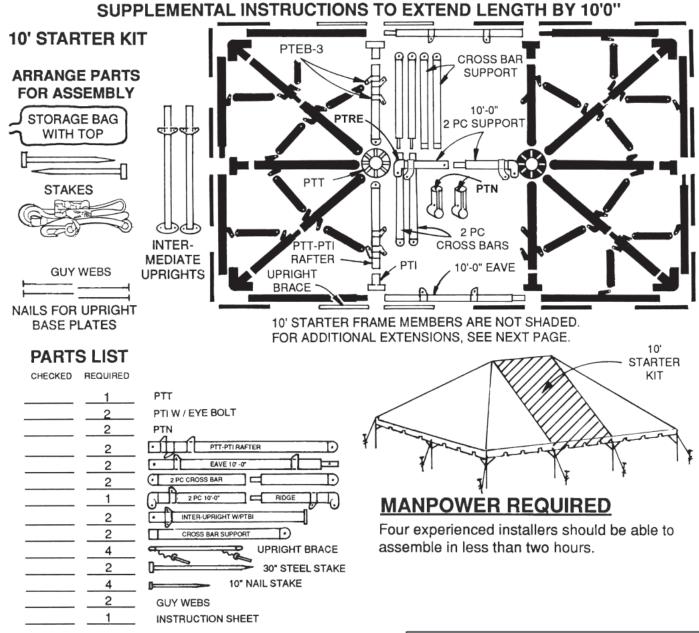



3a

RIDGE & CROSS BARS

Connect 2-pc ridge and pin to PTTs using the PTRE pointed downward so that the ridge is elevated.

Pin cross bars together and attach to frame as shown.

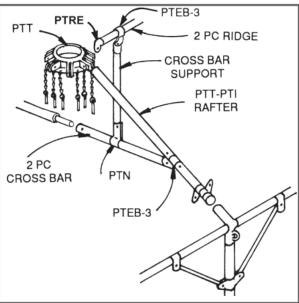


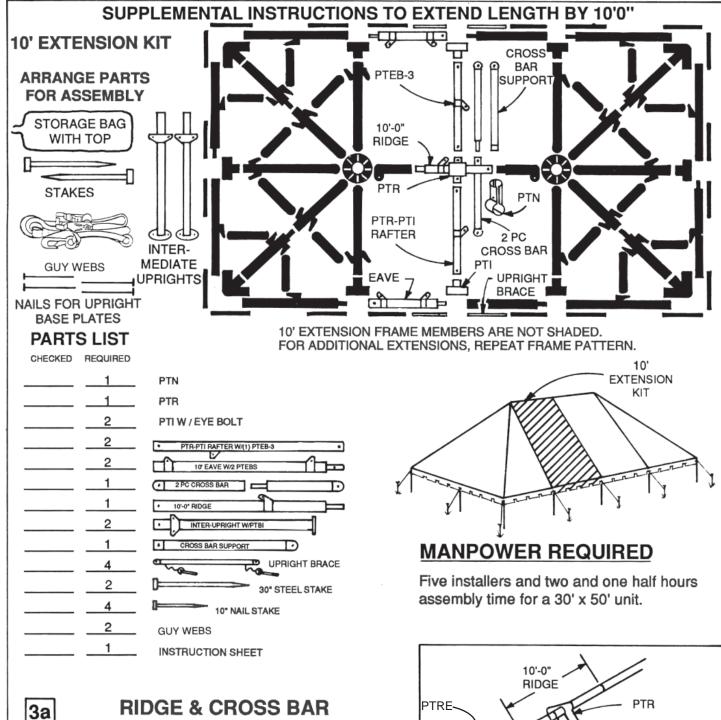

Slide PTR on to 10'-0" ridge. Align with hole at center of ridge and pin. Repeat for each 10'-0" ridge. Pin 10'-0" ridges together and add existing ridges to each end. Lift and pin assembled ridges to PTT's, using the PTRE pointed downward so that ridges are elevated.

Insert PTR-PTI rafters into PTRs and PTIs and pin.

Pin Cross Bars together and attach to frame as shown.

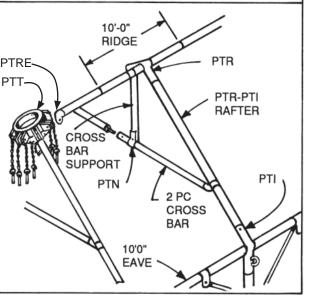



PHONE NUMBER 812 · 867 · 2421

FAX NUMBER 812 · 867 · 1429

Anchor products are of superior design and operate best within the parameters of these instructions. It is imperative that the instructions be carefully read and **COMPLETELY FOLLOWED**. Please read installation instructions before the installation or removal of this product. Installation instructions are available online at <u>www.anchorinc.com</u> or by calling 1-800-544-4445.

CAUTION:

- For each installation, the installer is solely responsible for evaluating the site and the proper securing method determined. Some soils require different staking or securing than that provided with the tent. Due to this variety of soil conditions, these are the manufacturer's suggested sequence of installation procedures. Anchor's responsibility is limited to the manufacture of the tent parts and materials. We are not responsible for methods that installers may choose to erect and secure the tent to the ground.
- 2. The number of stakes suggested in the installation instructions do not necessarily meet all or any relevant codes on the site of the tent installation. The number of stakes suggested will, in many cases, keep the tent erected, however, due to various soil conditions; these stakes will be insufficient to keep the tent secure in high winds. It is the tent installer's responsibility, not the manufacturer, to determine the appropriate number of stakes to meet the necessary wind loads on the site. Regardless of the number of stakes we suggest, we make no representation or warranty as to whether this specific number of stakes will meet the local tent code. Anchor does not, nor can it make any suggestions, representation, or warranties about the adequate staking required at each specific installation site. Staking information provided in the installation instructions is not a suggestion about what is necessary to meet a site-specific load.

For additional important information, consult: "The IFAI Procedural Handbook For the Safe Installation and Maintenance of Tentage" and the IFAI Pocket Guide "Pullout Capacity of Tent Stakes", both available from the IFAI Tent Rental Division on their website (<u>www.ifai.com</u>).

3. Inasmuch as the weather is unpredictable, good judgment and common sense must be incorporated within installation guidelines. It is the responsibility of the tent installer/maintainer to determine the severity of the weather, proper time and method of installation and/or erection and disassembly. Note: We recommend that snow and ice be removed from the tent surface as soon as possible because accumulation will damage the tent or fabric structure. Please consult with our Engineering Department about the maximum loads for each product.

This product has been manufactured for use as a temporary structure. For the safety of all occupants, evacuation is recommended if threatening weather occurs, or if there is any doubt concerning the safe use of this product.

- 4. Proper safety equipment should be used at all times to insure a safe installation and take down. We suggest a careful evaluation be made to determine safety equipment needed, such as hard hats, steel-toe shoes, safety glasses and other as required. It is our desire that all installations are safe. Please be aware of hidden dangers both underground, i.e., gas lines, water lines, electrical lines, etc. and above the tent such as power lines and telephone lines.
- 5. Anchor stands behind its products in accordance with its standard Terms and Conditions of sale. A copy of our Terms and Conditions of Sale can be obtained by contacting Anchor at the telephone number and/or address on this document.