


Assembly Instructions

ANCHOR STRUCTURE EVENT SERIES

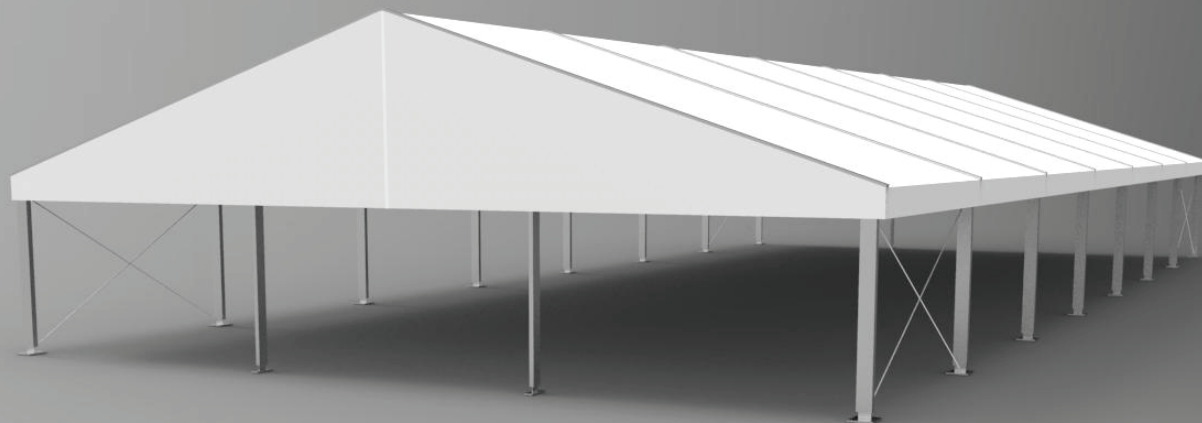

Please read all assembly / installation instructions before the installation or removal of this product.



PHONE: 812-867-2421
FAX: 812-867-0547
1-800-544-4445
EMAIL: tents@anchorinc.com
www.anchorinc.com


Index

Introduction	3
Safety notes	3
EVENT Sizes and Configurations	4
Cable Configurations.....	7
General Notes	6
Construction Tools	6
1 Squaring Tent and Setting Base Plates	10
1.1 Squaring the Tent Layout.....	10
1.2 Setting Base Plates.....	12
2 Assembling Arches	14
2.1 Pre-assembly of Arch Components	14
2.2 Assembly of Uprights and Rafters (& Rafter Extensions, if applicable)	14
2.3 Assembly of Cable Bracing.....	17
3 Erecting the Structure	19
3.1 Preparation for Raising Arches	19
3.2 Raising the End Arch (First Arch).....	19
3.3 Raising the Second Arch.....	19
3.4 Completing Installation of Uprights and Roof Cable Bracing	22
3.5 Installing Gable End Framing.....	23
4 Installing Fabric Panels	25
4.1 Installing Mid Fabric Panels	25
4.2 Installing Gable End Fabric Panels	26
4.3 Installing Optional Fabric Walls.....	23
5 Dismantling	28
6 Routine Inspection and Maintenance	29
6.1 Installation Period.....	29
6.2 Visual Inspection of Components.....	29
7 Specifications	30

Introduction

The following instructions describe a logical plan for the construction and erection of the 10M to 25M Anchor Structure tent using the 220 x 100 x 4mm aluminum profile for the uprights and rafters. Note that the standard 3M side height (up to 3.5M side height) may be constructed without knee braces, however, if the structure is modified for the 3.5M side height, then knee braces must be used on all beams. See pages 4 thru 6 for configurations.

Please pay particular attention to the allowable X-cable patterns and the correct positioning of 6-holed and 4-holed baseplates shown in the manual. These patterns must be followed. Also please refer to the footprint drawings provided by Anchor Industries, Inc. These indicate the base load reactions that must be met by proper anchoring that is appropriate to the site and soil conditions in order for the unit to meet its engineering certification under ASCE-7-10.

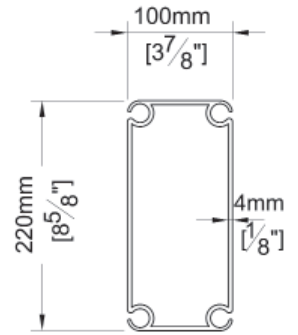

Always follow these instructions. Work from step to step. Do not skip any steps. There may be other steps necessary depending on your application. Be aware of these steps and pay close attention to the details needed.

PLEASE PAY SPECIAL ATTENTION TO SAFETY WARNINGS AND CAUTIONS FOR PREVENTION OF ACCIDENTS.

Regarding the contents of this installation manual:

The illustrations and photos are made to show clearly the construction and dismantling procedures and also for identification of the components. Not all illustrations/photos correspond to the actual dimensions and size. Explanations and/or notes have been added to these illustrations/photos.

If you have questions, please call your sales representative at the phone number listed on the front or back of this manual.


Safety Notes:

- Please read through the installation manual completely before beginning your installation. Be sure the proper equipment and safety precautions are in place.
- Consult your local utility locator service or the National Utility Locating Contractors Association (NULCA) prior to installation.
- Prior to actual tent assembly, be sure to look up, down, above & below for obstacles, pipes, wires, trouble, etc.
- Be alert to avoid contact of frame sections with any overhead power lines near the site.
- Keep site clear of debris to avoid tripping, especially while carrying frame parts or bundles of fabric.
- When moving frame sections by hand, use proper lifting techniques to protect the back, and avoid pinching fingers while making hardware connections.
- The installation method described in the installation manual requires coordination of tasks between workers. A safe installation is dependent on that coordination. Work cooperatively as a team.
- Be sure all pins and bolts are installed and secured correctly during assembly.
- Ensure that all purlin hooks are correctly seated in their rafter brackets.
- Cables must be tensioned as directed in the installation manual. Never remove cables except at time of disassembly of frame.
- Replace damaged or worn components with original Anchor components. Failure to use original Anchor components may void product warranties.
- To prevent injuries, wear suitable protective clothing such as hard hats, steel toed shoes, etc.
- Do not drag bundle of fabric on concrete, asphalt, or ground as this can cause damage to the fabric from abrasion through the bag.
- This tent is manufactured for use as a temporary structure. Evacuation is recommended if threatening or windy weather occurs. See caution on back page of this manual.

EVENT SIZES AND CONFIGURATIONS


NOTE: 3 METER UPRIGHTS THIS PAGE AND NEXT PAGE

10 METER

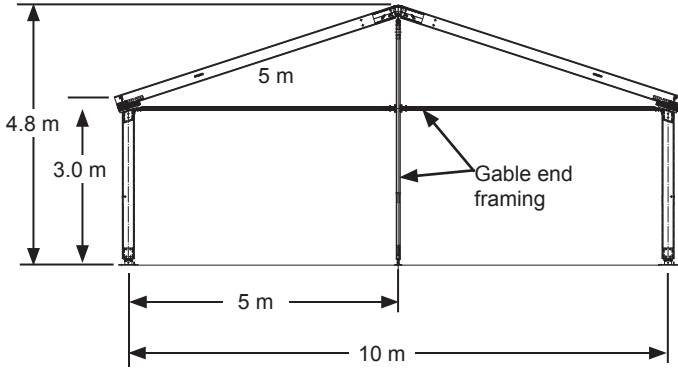


10 METER

12 METER

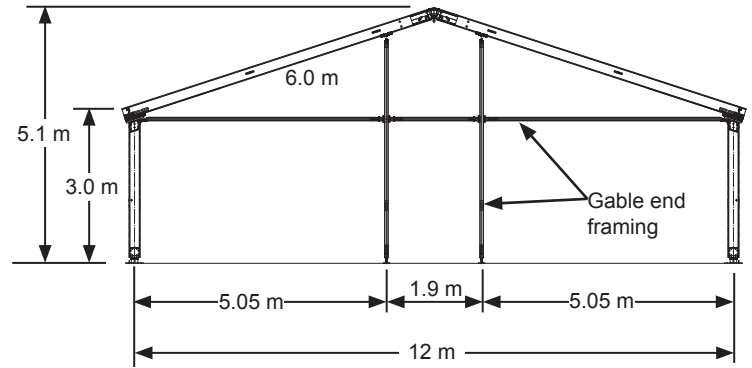


12 METER

15 METER

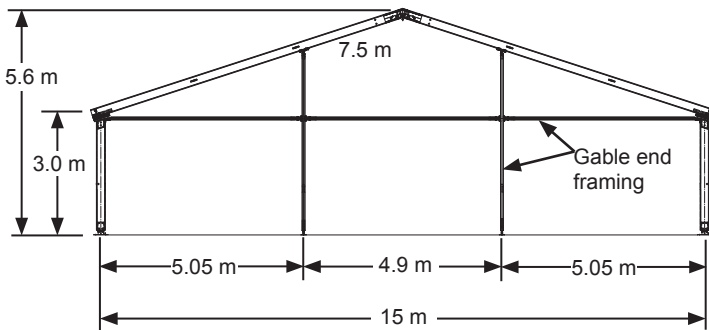


15 METER

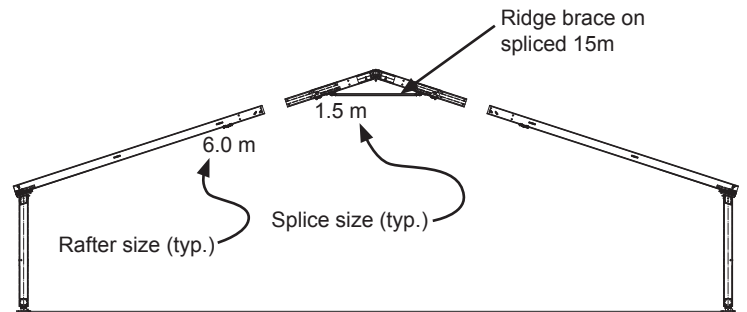


15-12 METER

18 METER

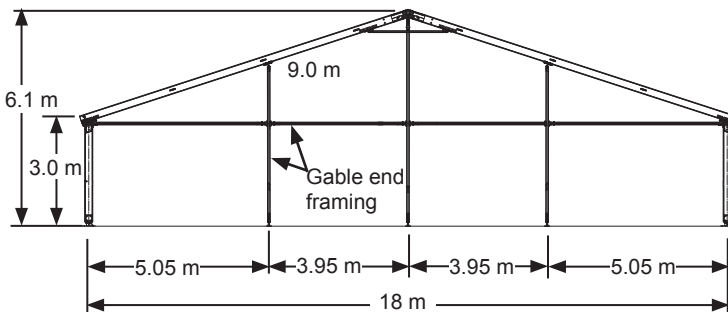


18 METER

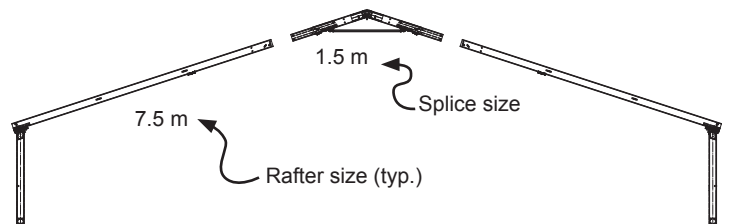


18-15 METER

EVENT SIZES AND CONFIGURATIONS (cont'd)

20 METER

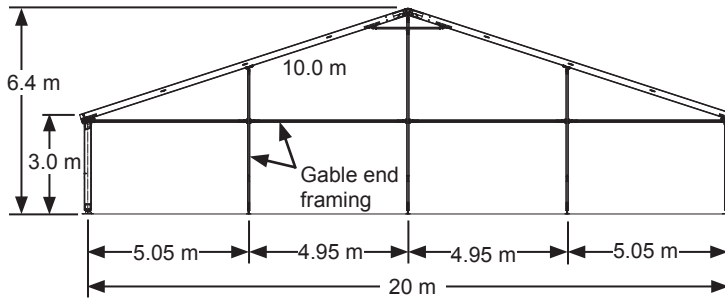


20 METER

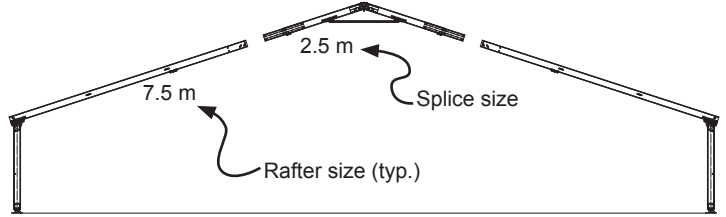


20-15 METER


25 METER

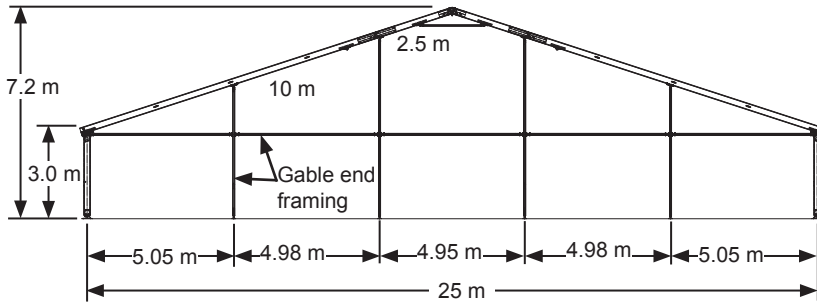

25 METER

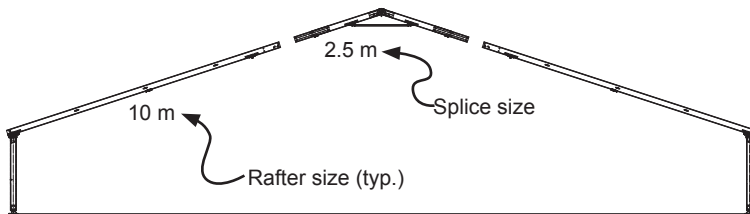

25-20 METER

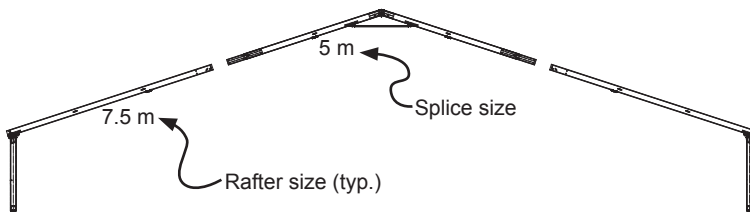


25-15 METER


EVENT SIZES AND CONFIGURATIONS

NOTE: 4 METER UPRIGHTS THIS PAGE


10 METER

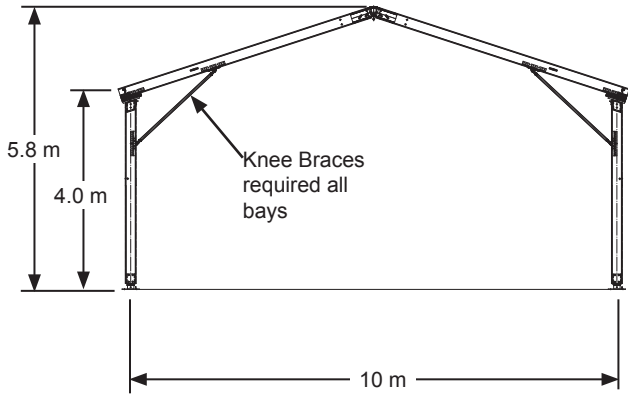


12 METER

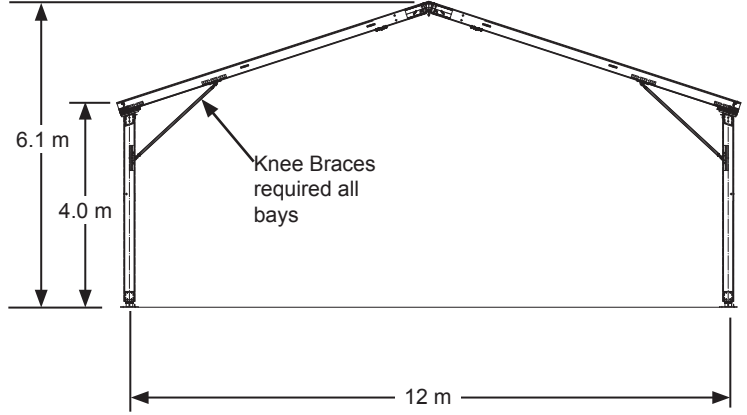


15 METER

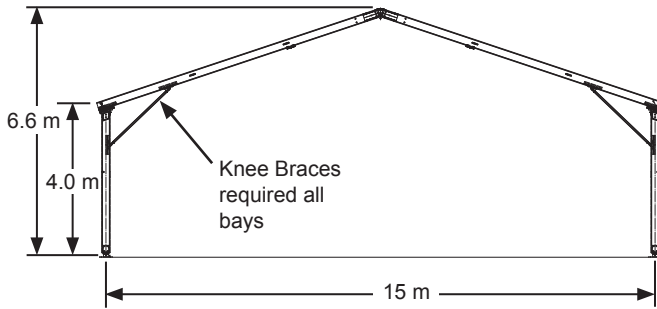


18 METER

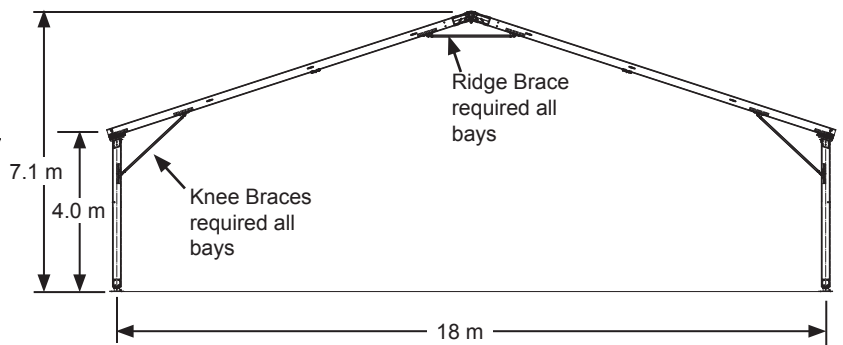

20 METER

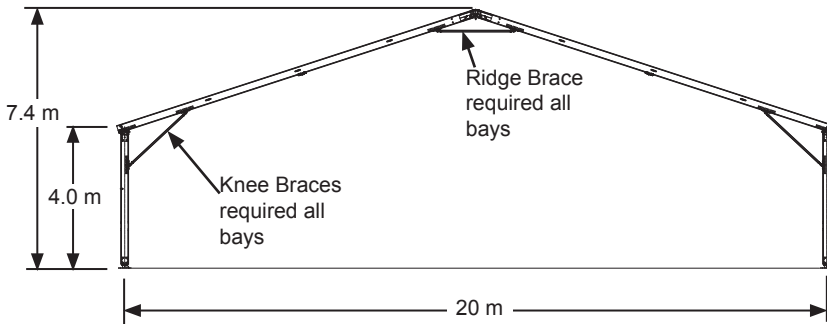

25 METER

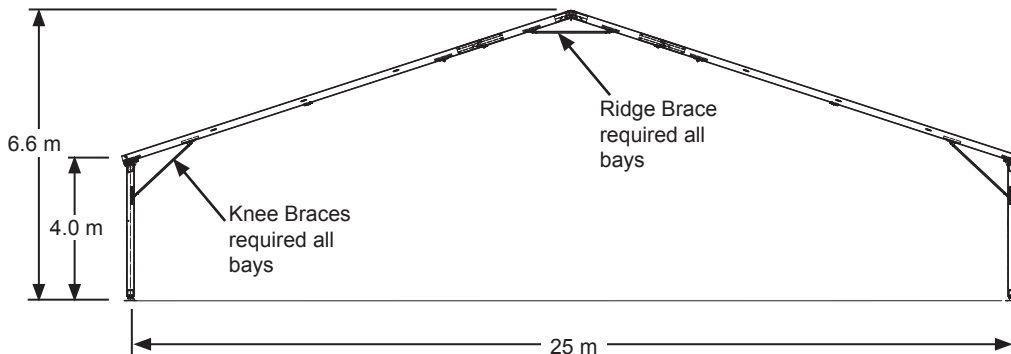

Event Series Cable Configurations

Side Elevations

	3m Eave	4m Eave
15m & Under		
18m & 20m		
20/15m		
25/15m		
25/20m		

Notes:

1. Upright and Roof Cable Bracing is required in the first and last bays of the structure and additionally at not more than SIX open bays between braced bays.
2. All cables are 3/8" Galvanized 7 x 19 aircraft cable.

General notes

Read this manual thoroughly before beginning construction. If the steps are clear and the building components are identified and ready, then begin assembly and follow the instructions step by step.

Pay attention to the safety warnings and regulations for prevention of accidents. Lack of knowledge and understanding of regulations can endanger the crew.

For best results and for safety, follow the sequence given.

A minimum of Six (6) installers are required for the assembly and erection of this tent.

Caution:

Relevant safety features and standard specifications, according to OSHA safety standards, must be maintained. Construction laborers should be instructed about the possible dangers before construction begins. As stated above, a qualified supervisor familiar with the proper assembly technique and required safety procedures should be present during the installation.

Construction Tools


Installation and dismantling should be done the correct installation tools.

Special tools provided for installation:

Diagonal Beam Brace (2)	Measuring Rod
Purlin Forks	Push Pole
(3) Pull Ropes	(3) R Clips

Other construction tools needed during installation and dismantling:


- (2) Mid Panel Guide (Optional)
- (3) Pull Ropes (25' longer than tent width)
- (3) Folding Ladders equivalent to the Tent's Eave Height
- (1) 17 mm combination wrench
- (2) 24mm combination wrenches
- (1) Tapered Centering tool
- (2) Sledge Hammers (12 lb.)
- (1) Power Stake Driver
- (10) Pieces of 4" x 4" x 18" wood blocks for Shims
- (1) Pair of Pliers
- (2) Measuring Tapes (30M)
- (2) Screw Drivers
- (1) Socket Set
- (1) Small Mallet
- (1) Cordless Drill
- (1) Stake Puller
- (1) Hand Truck (dolly)
- (1) Fork Lift with telescoping capabilities
- (1) String Line
- (1) Level
- Drop cloths
- Chalk/Spray paint

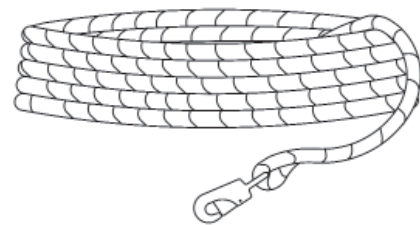


Pull Rope




R Clip

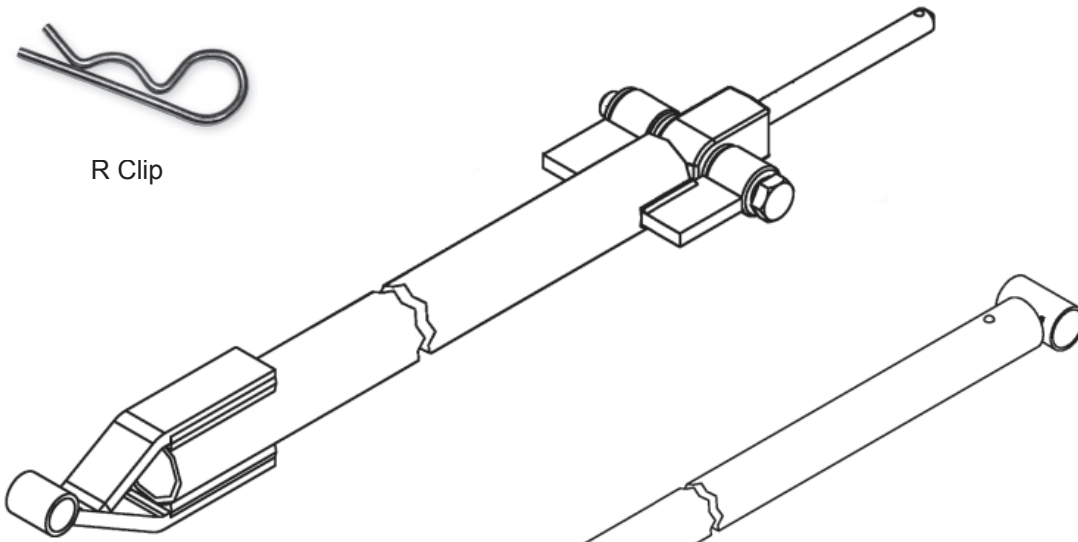



Diagonal Beam Brace (2)

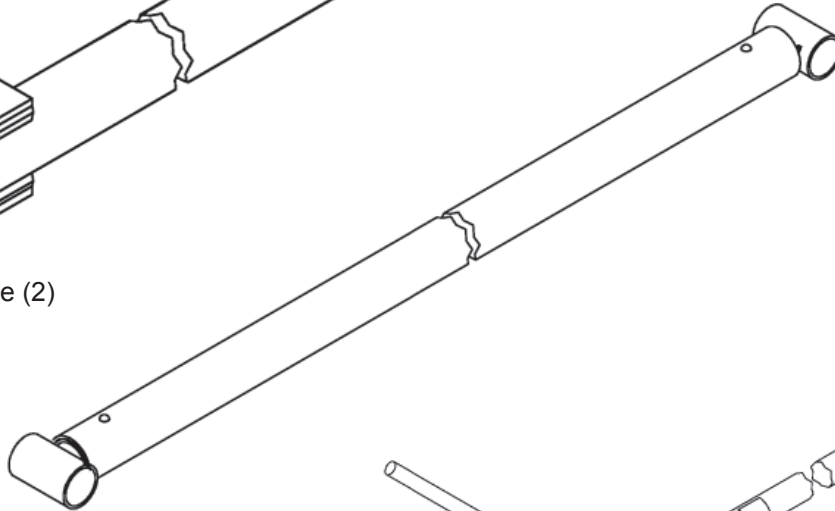


Measuring Rod

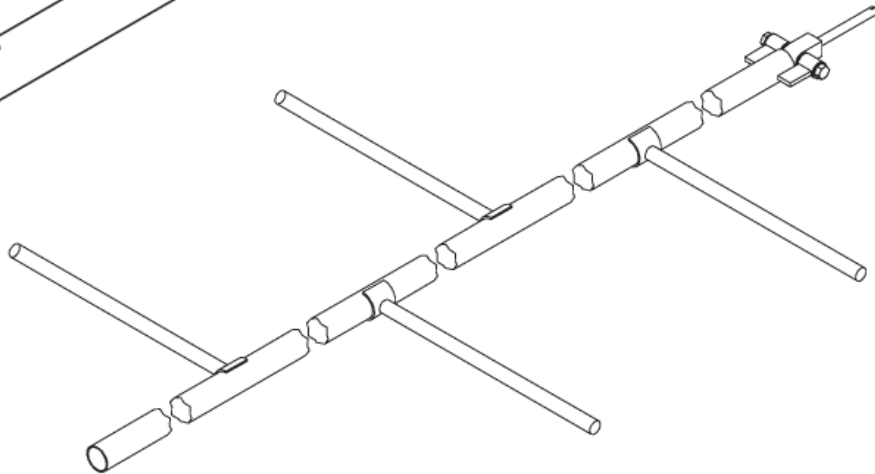

Push Pole

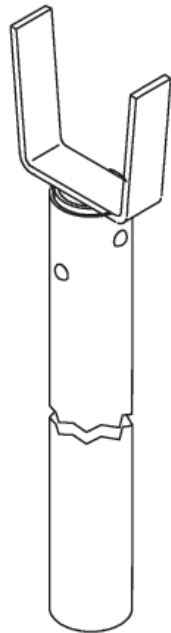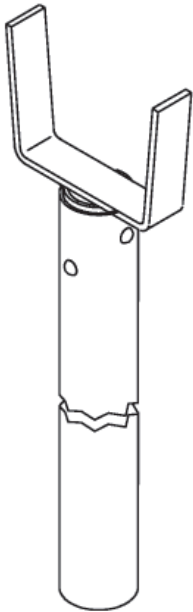



Purlin Forks

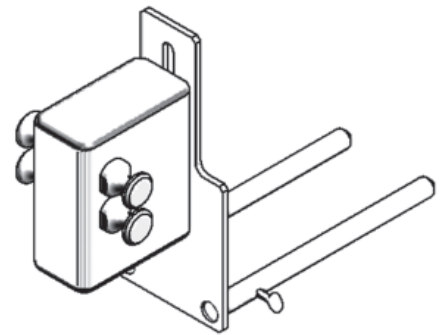

Mid Panel Guide (2)
(OPTIONAL)

Step 1: Squaring Tent and Setting Base Plates

- 1.1 Squaring the Tent Layout:** The area in which the tent is to be installed should be as level as possible. Any deviation in the surface may result in difficulties when installing the tent. Consult the Local Code Official for required clearances and setbacks from any adjoining structures. Site the tent and establish the front and one side of the tent that will be used to square the first corner of the tent.
- 1.1.1 Stretch a string line along the tent's length plus 2m past each end using stakes to establish the baseline A-B (side of tent) as shown in **Figure 1.1a**. The edges of side base plates must align with this string line.
 - 1.1.2 From point A, measure 3 meters along the string line toward point B and mark this point D. See **Figure 1.1b**.
 - 1.1.3 From point A, measure in the direction of Point C a distance of 4 meters. Mark on the ground an arch on a 4 meter radius from point A. See **Figure 1.1b**.
 - 1.1.4 From point D, measure toward the arc just made in step 1.1.3 a distance of 5 meters. Mark on the ground another arc on a 5 meter radius from point D and intersecting with the first arc made in step 1.1.3. Where these two arcs intersect, mark this point E. See **Figure 1.1b**.
 - 1.1.5 Stretch another string line along the tent's front from point A toward point E. This string line will be 90 degrees to string line A-B. Without changing the angle, extend this string line 2m past width of tent to establish point C. Check to make sure the string line from A to C still passes thru the intersection of the two arcs at point E. This line establishes the front of the tent. See **Figure 1.1c**.
- 1.2 Setting Base Plates:** Incorrect placement of base plates will create problems for the rest of the installation. Each hole of each base plate requires stakes for proper installation. **IMPORTANT:** Safety Tabs on all base plates must be oriented toward the interior of the tent. See **Figure 1.2a**. 6-Hole base plates use **48" stakes**, 4-Hole and 2-Hole base plates use **31 1/2" stakes**.
- 1.2.1 Starting at point A, place the outside corner of 6-Hole base plate #1 at point A, making sure the edges along the front and side of the base plate align with the front and side string lines, respectively. Anchor with two (2) stakes. See **Figure 1.2a**.
 - 1.2.2 Connect the measuring rod with base plate L-Pin to base plate #1. Connect other end of the Measuring Rod to base plate #2 with base plate L-Pin. See **Figure 1.2a**.
 - 1.2.3 Adjust base plate #2 so that the outer edge of the base plate is aligned with the string line and anchor with two (2) stakes.
 - 1.2.4 Measure the width from the midpoint of base plate #1 to the midpoint of 6-Hole base plate #3 as shown in **Figure 1.2b**. While maintaining the center line distance, orient the front edge of base plate #3 with the front string line. Check the measurement again for the tent width between base plates #1 and #3 and anchor base plate #3 with two (2) stakes.
 - 1.2.5 To locate 4-Hole base plate #4, remove the base plate L-Pin from base plate #1, lift the Measuring Rod and rotate about L-Pin in base plate #2 until it reaches the position of base plate #4. Adjust base plate #4 so that the outer edge of the base plate is aligned with the side string line and mount the Measuring Rod using the base plate L-Pin. See **Figure 1.2c**. Anchor the base plate with two (2) stakes. Repeat this procedure until all baseplates on this side are fixed. **IMPORTANT:** All cable braced bays require 6-Hole base plates.
 - 1.2.6 To locate the 6-Hole base plate in-line with base plate #3 (designated as base plate #7 in **Figure 1.2c**), mount the Measuring Rod to base plate #3 and base plate #7 as described in step 1.2.5. Measure the width from the midpoint of base plate #2 to the midpoint of base plate #7 similar to that shown in **Figure 1.2b**. Anchor the base plate with two (2) stakes.
 - 1.2.7 Repeat step 1.2.6 until all base plates on this side of the tent are anchored.
 - 1.2.8 Finally, check the diagonal dimension at the midpoint of the four outer base plates. These dimensions should be equal. Once the diagonal dimensions have been verified, return to each base plate and install the remaining stakes. Stakes must be fully seated for proper installation.

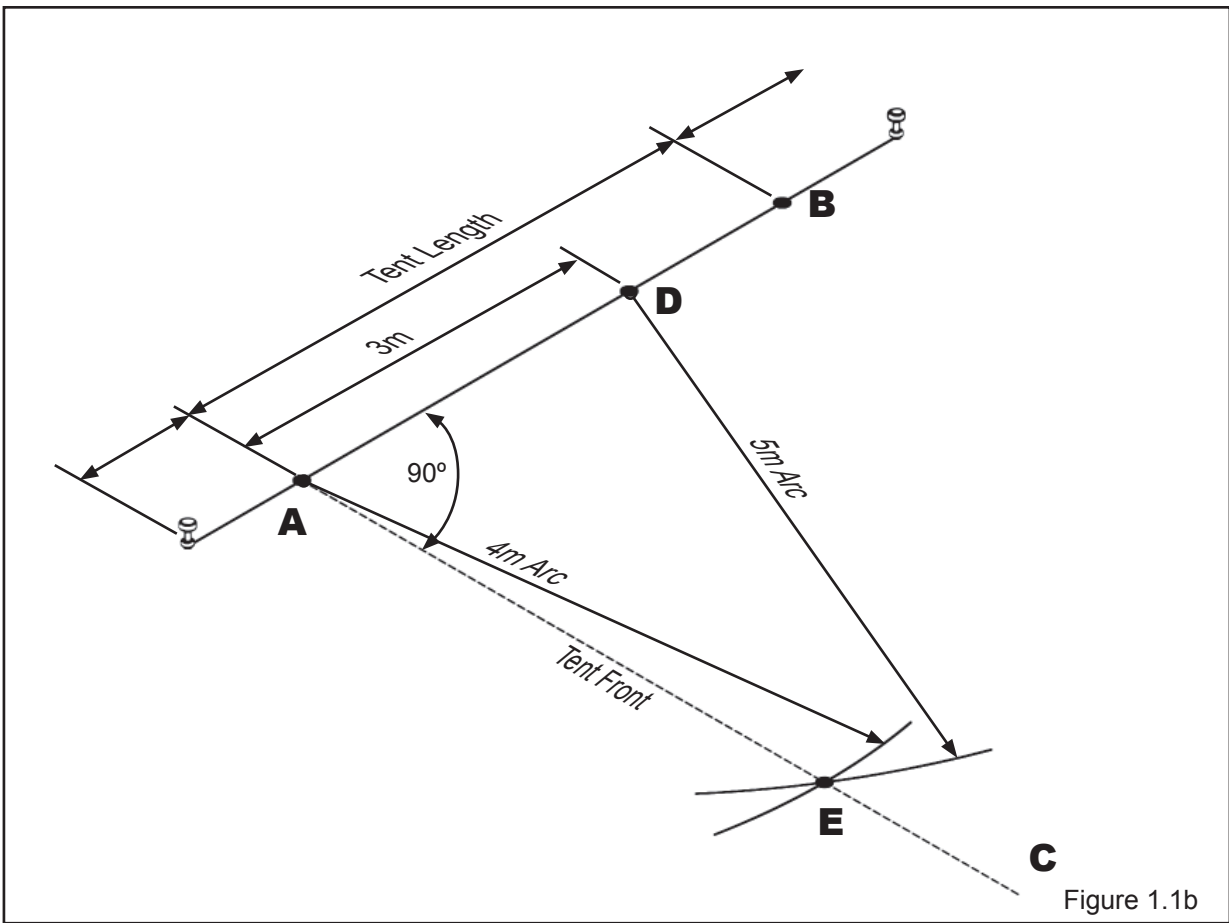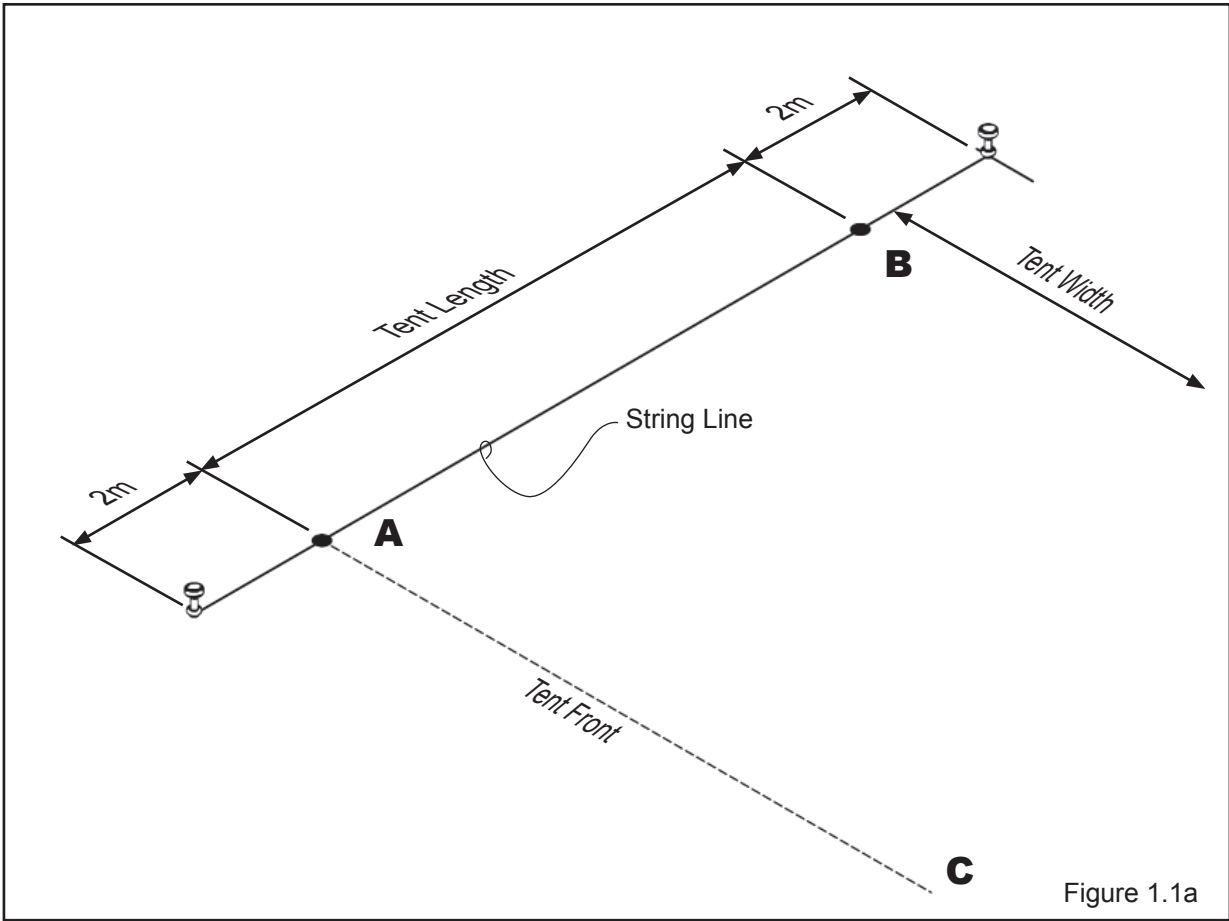

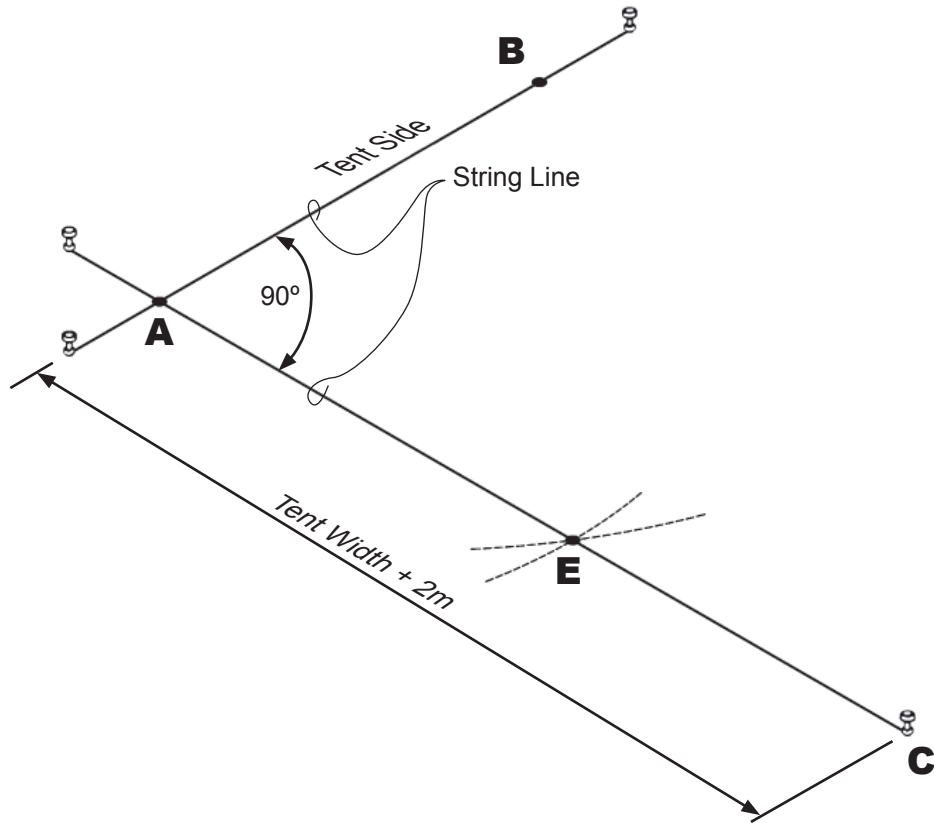


Figure 1.1c

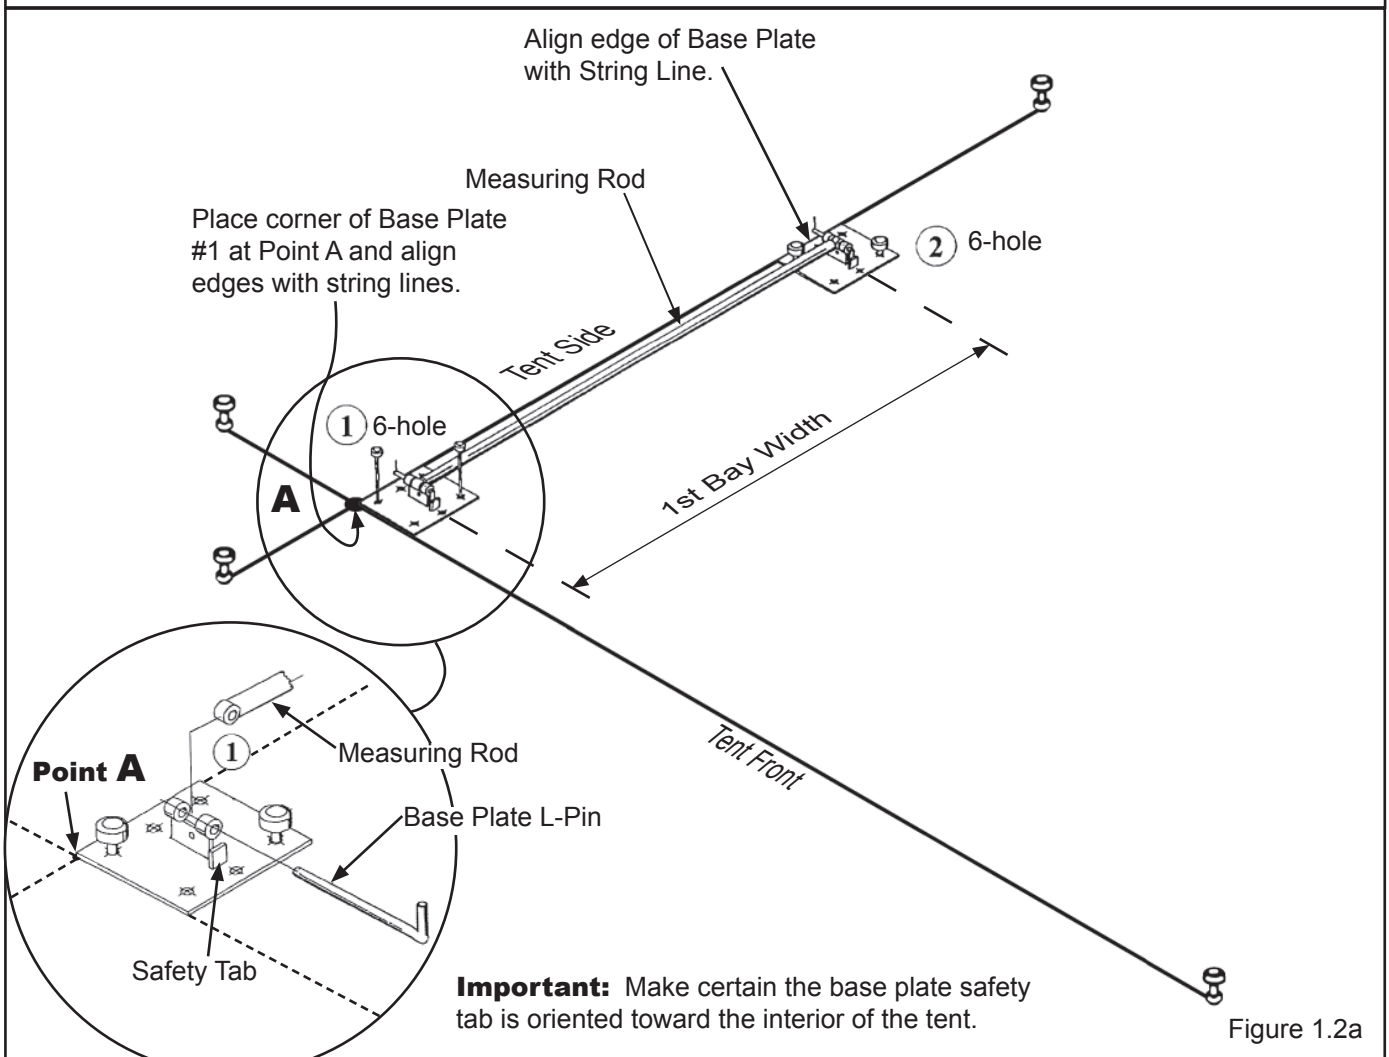


Figure 1.2a

Step 2: Assembling Arches

2.1 Pre-assembly of arch components: Identify and layout all components according to **Figure 2.1** for the entire structure. NOTE: Setting uprights and rafters on 4 x 4 wood blocking (or whatever blocking may be available) will make the insertion of the pins and bolts easier.

2.1.1 The following is a list of components required for each arch:

Quantity	Description
2	Base Plate L-Pins 16mm x 230mm (9") & R-Clips NOTE: 5/8" x 200mm (7 7/8") L-Pins are used at the Gable End base plates (Quantity is one per upright)
2	Uprights
2	Base Plates
2	Rafter/Upright Pin with Flat 14mm x 140mm (5 1/2")
4 (8)	16mm x 132mm (5 3/16") Locking L-Pin with stop. (quantity in parenthesis is required if Rafter Extensions are used) NOTE: Also used at Gable End uprights.
1	Ridge Insert
2	Rafter Extensions (if applicable)

2.1.2 Identify and layout Pins with R-Clip (as required) as shown in **Figure 2.1**.

2.1.6 If laying out components for a cable braced bay, refer to Section 2.3 for substitute components required.

2.2 Assembly of Uprights and Rafters (and Rafter Extensions if applicable): The assembly of the arches is easier if working from one side to the opposite side.

2.2.1 Starting at Base Plate "1", connect the bottom of the Upright Connection Insert to the Base Plate using the L-Pin as shown in **Figure 2.2**. The R-Clip will be inserted later when the Wall Ground Bars are installed. **IMPORTANT:** The short leg of the L-Pin must be turned down and behind the Safety Tab on the Base Plate to keep the L-Pin from sliding out.

2.2.2 Connect Rafter to the Upright Assembly by sliding the Rafter onto the slide connector on top of the upright. Secure the connection by inserting the Flat L-pin into the hole located inside the end of the rafter, see **Figure 2.2a**.


2.2.3 If installing Rafter Extensions, connect the Rafter Extension to the Rafter using Locking L-Pins. Ensure L-Pin is turned so the stop collar is locked behind tab on rafter. **IMPORTANT:** At the gable ends, the head of the pin must be on the exterior side of the rafter to minimize any snagging possibilities when installing the gable end fabric.

2.2.4 Insert Ridge Weldment into end of rafter and secure using Locking L-Pins. Ensure L-Pin is turned so the stop collar is locked behind tab on rafter. See **Figure 2.2b**. **IMPORTANT:** At the gable ends, the head of the pin must be on the exterior side of the rafter to minimize any snagging possibilities when installing the gable end fabric.

2.2.5 Complete the Arch assembly by connecting the opposite Rafter (or Rafter Extension) to the Ridge Weldment, Rafter Extension to Rafter (if applicable), Rafter to Upright and Upright to Base Plate according to steps 2.2.1 thru 2.2.4.

2.2.6 Assemble the remaining arches according to steps 2.2.1 thru 2.2.5.

2.2.7 When Ridge and Knee Braces are required as shown in the configuration drawing, install as shown in Figures 2.2a & 2.2b.

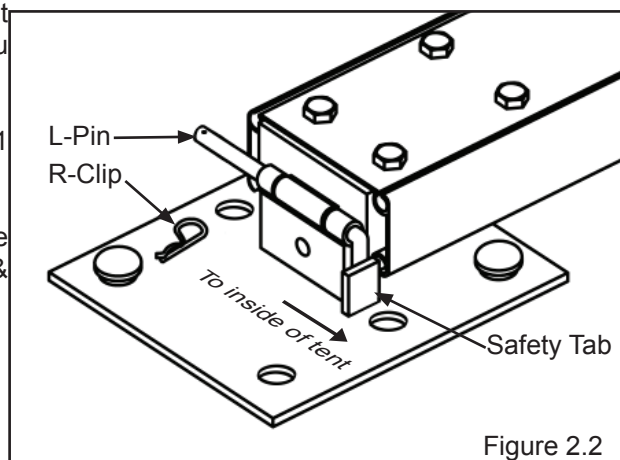

Note: See pages 4 to 6 for actual configuration of your structure. Shown for example here is a 25m.

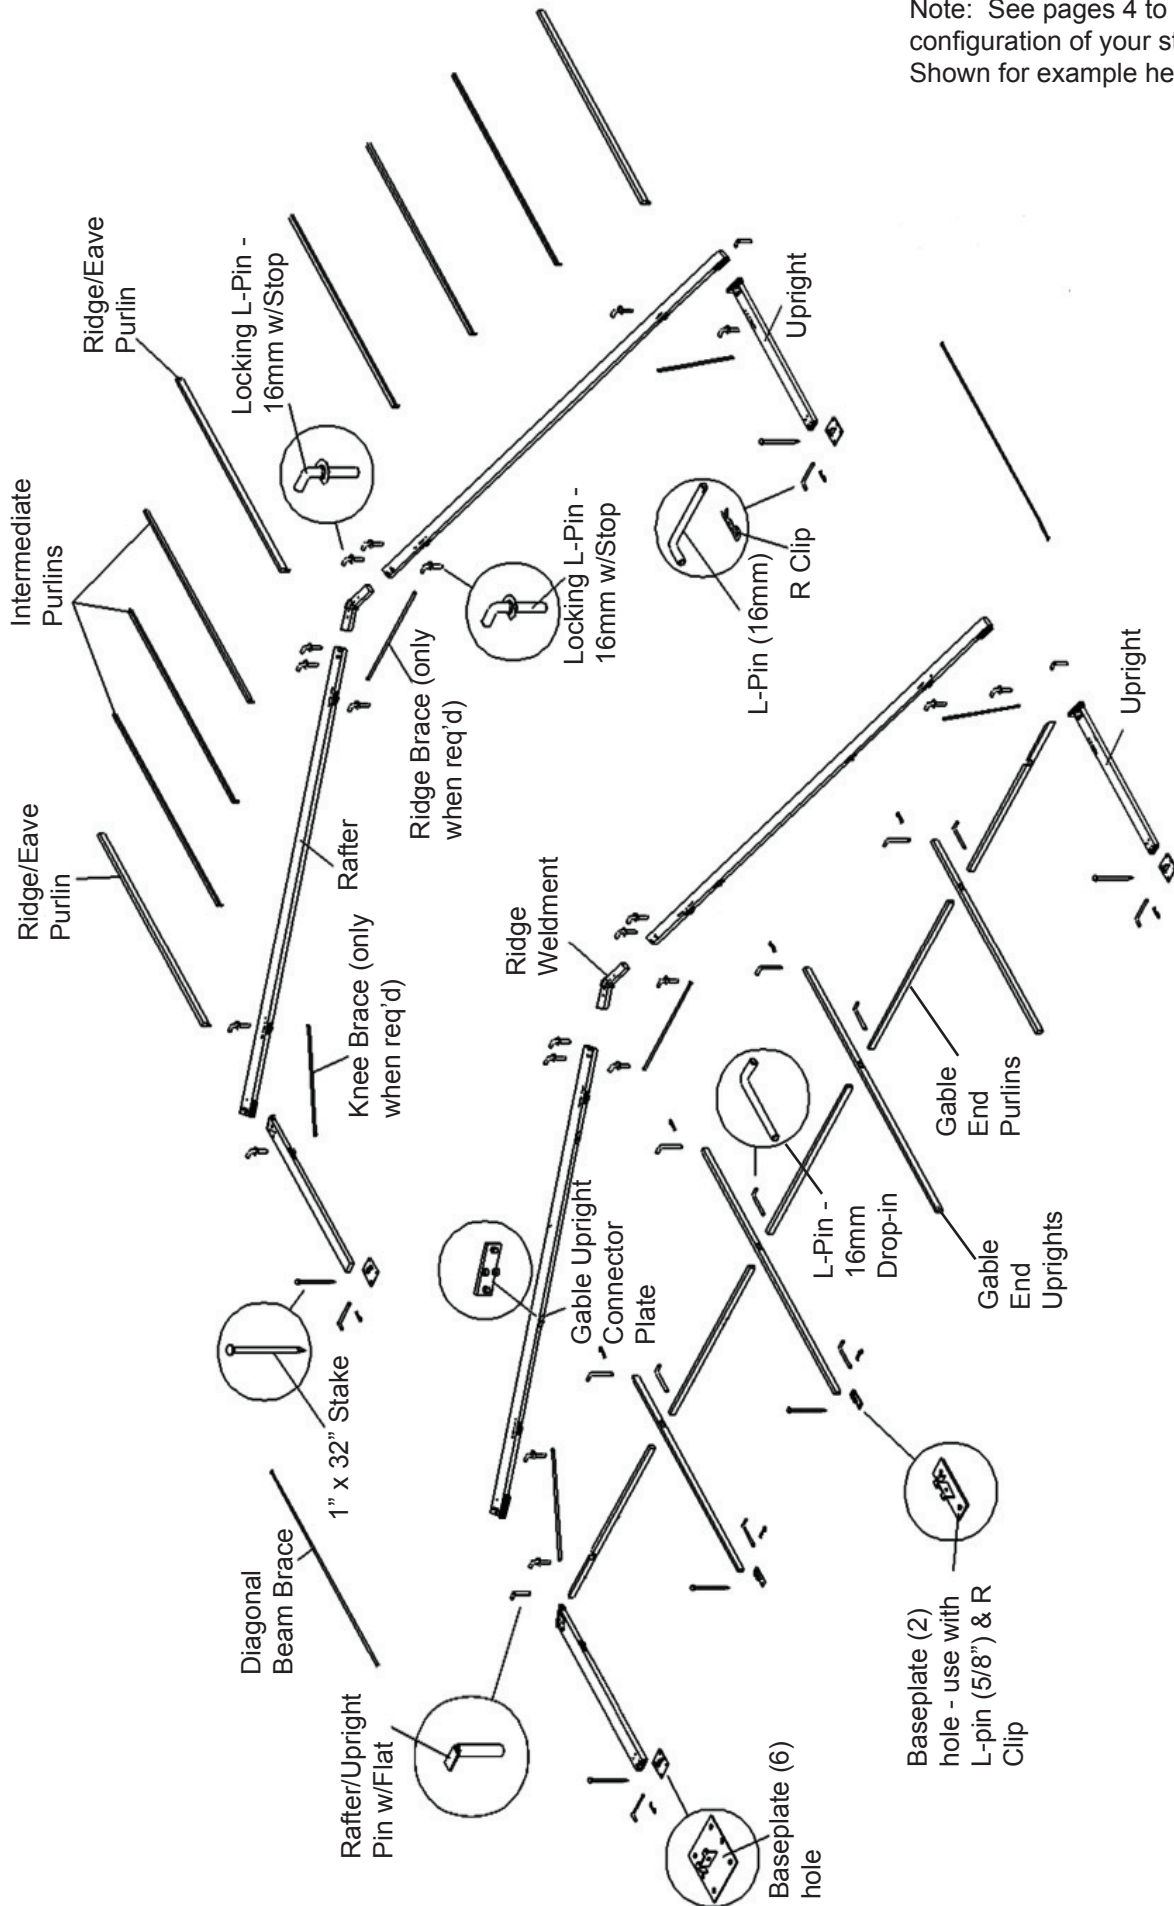


Figure 2.1

Rafter/Upright Pin w/Flat. Place inside end of Rafter and down thru open hole and upright after upright is slid into slide fitting.

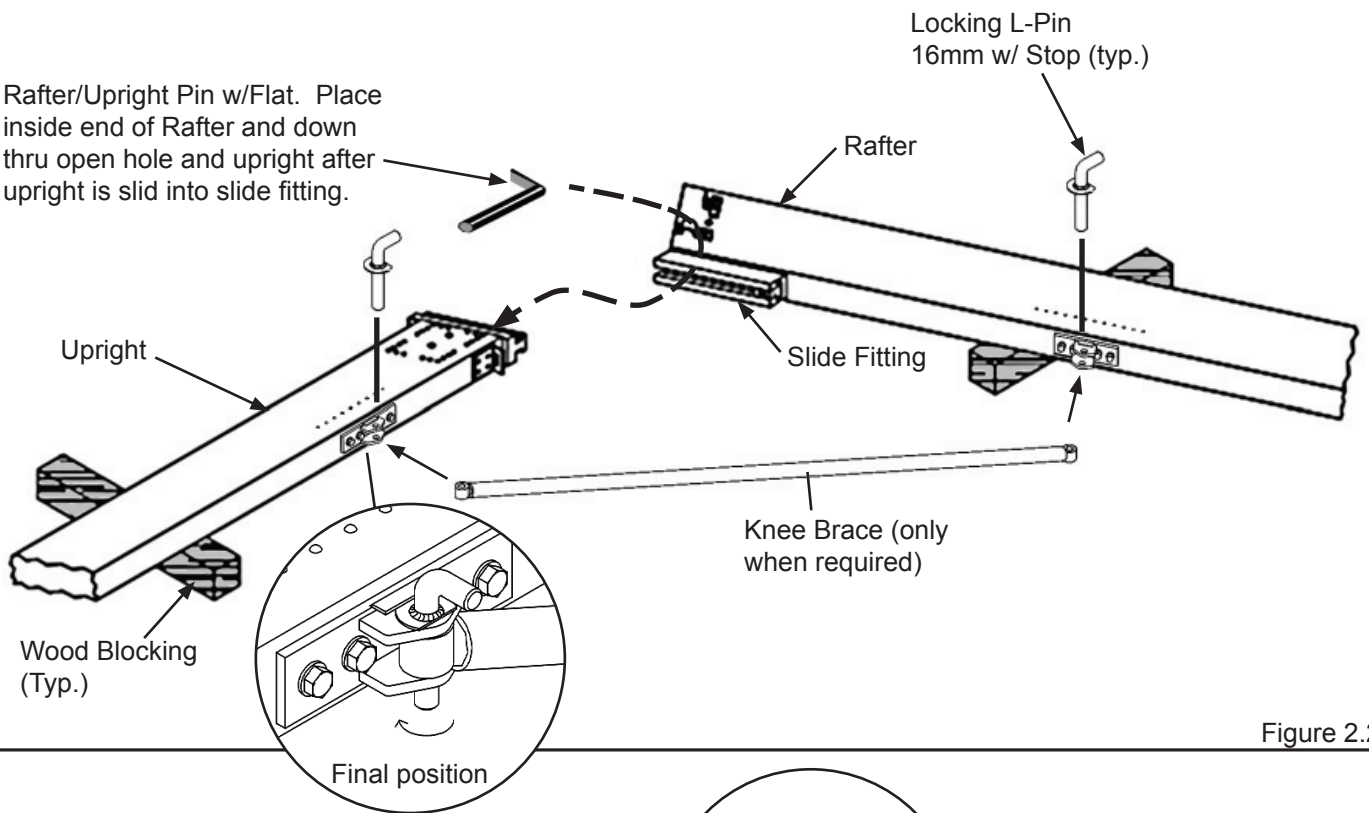


Figure 2.2a

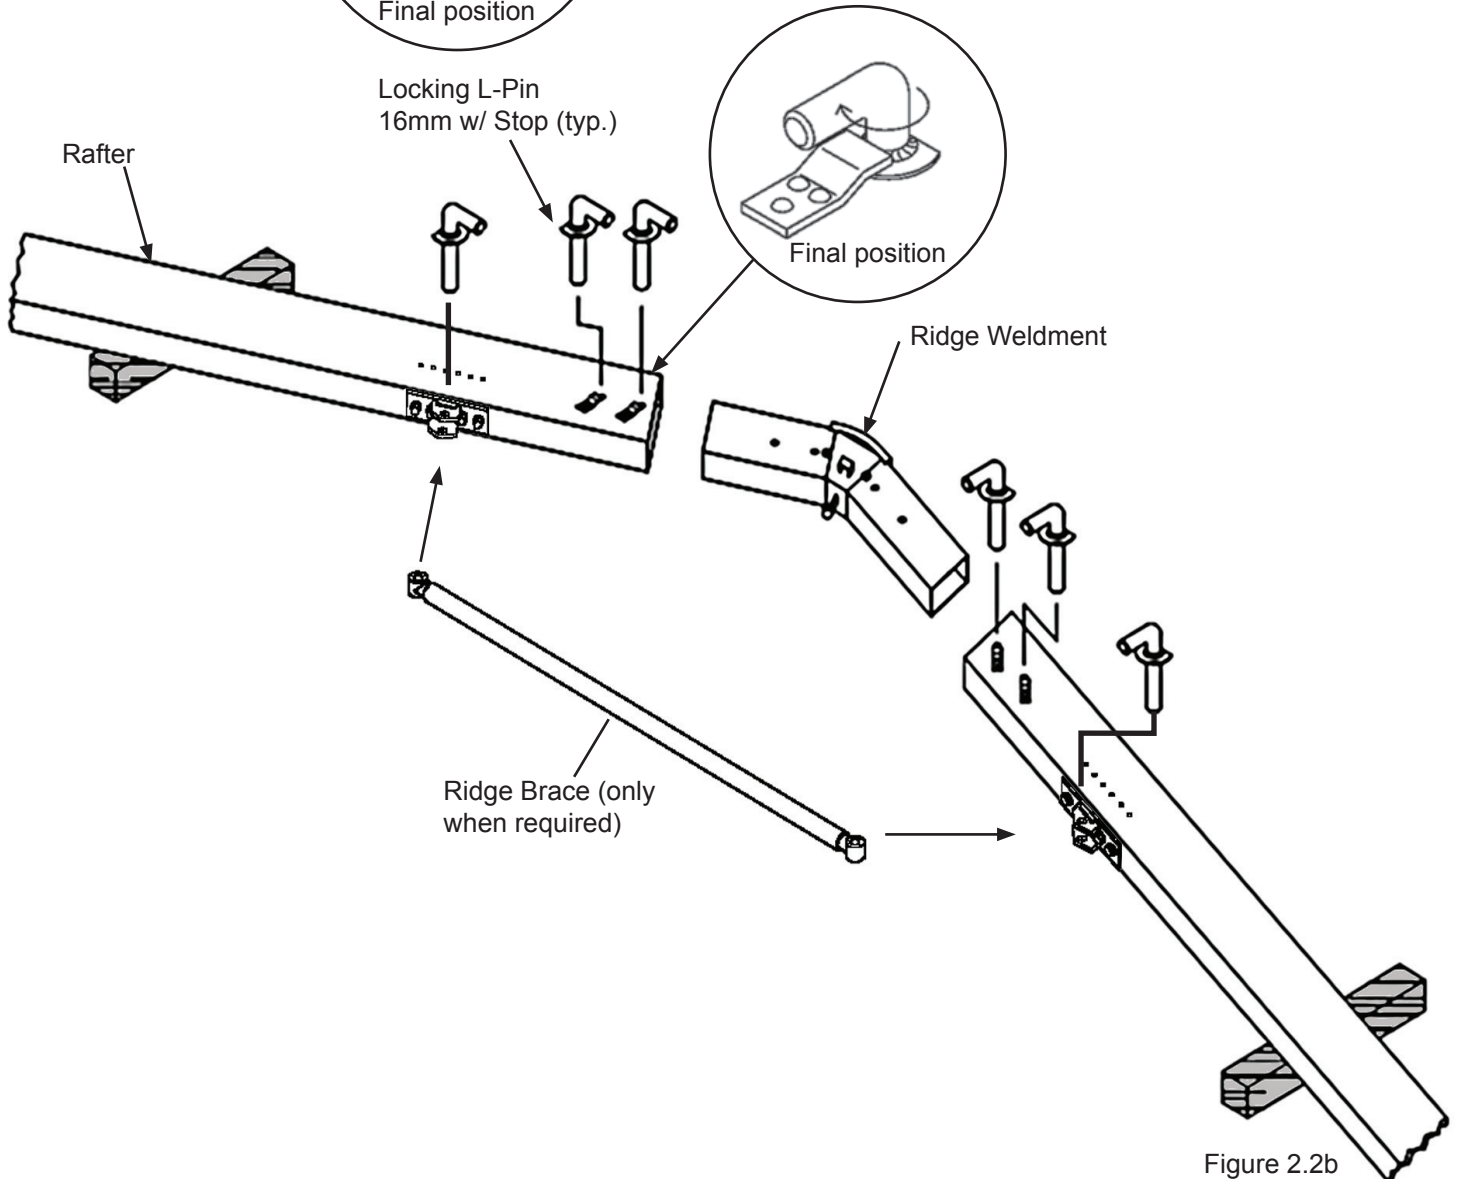


Figure 2.2b

2.3 Assembly of Cable Bracing: See Cable Configurations on page 7. Layout Cables in the appropriate bays. Install the cables so that the turn-buckles at the uprights are closest to the ground and at the roof cables are closest to the eave. For smooth installation, unscrew turnbuckles 3/4 of the way out, and keep threads lubricated. **See Figure 2.3c.** The cables have color coded labels; green labels indicate upright cables and blue labels indicate roof cables.

- 2.3.1 Remove the Eye-bolt from the Upright Cable Assembly (unhook from shackle). At the Upright Assembly on both sides of the cabled bays, insert the eye-bolt into the top hole of the upright. **See Figure 2.3a.** At the End Arch (first arch) the Eye-Bolt must face toward the ground (toward the second arch when raised) and on the second arch the Eye-Bolt must face upward, away from the ground (toward the first arch when raised). At all uprights connect the Upright Cable Assembly (end opposite turn-buckle) to each Eye-Bolt using the shackle provided; typical of four locations. The turn-buckle end must remain free until the arches are raised.
- 2.3.2 Remove the Eye-bolt from the Roof Cable Assembly (unhook from shackle at turnbuckle end). At End of Rafter on both sides of the cabled bays, insert the Eye-Bolt into the outermost hole. **See Figure 2.3a.** At the End Arch (first arch) the Eye-Bolt must face toward the ground (toward the second arch when raised) and on the second arch the Eye-Bolt must face upward, away from the ground (toward the first arch when raised). Do not attach cable until later.
- 2.3.3 Remove the Eye-bolt from the Roof Cable (unhook from shackle at end opposite turnbuckle). At the Ridge Weldment on both sides of the cabled bays, insert the Eye-bolt. **See Figure 2.3b.** At the End Arch (first arch) the Eye-Bolt must face toward the ground (toward the second arch when raised) and on the second arch the Eye-Bolt must face upward, away from the ground (toward the first arch when raised). Connect the Roof Cable Assembly (end opposite turn-buckle) to each Eye-Bolt using the shackle provided; typical of four locations. The turn-buckle end must remain free until the arches are raised.
- 2.3.4 For all cable braced bays the installation sequence will be similar to steps 2.3.1 thru 2.3.3.



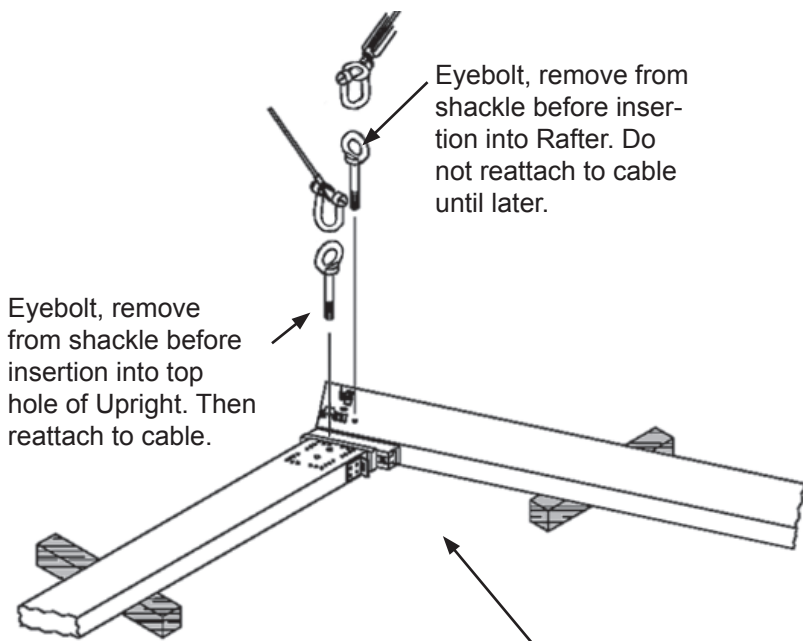


Figure 2.3a

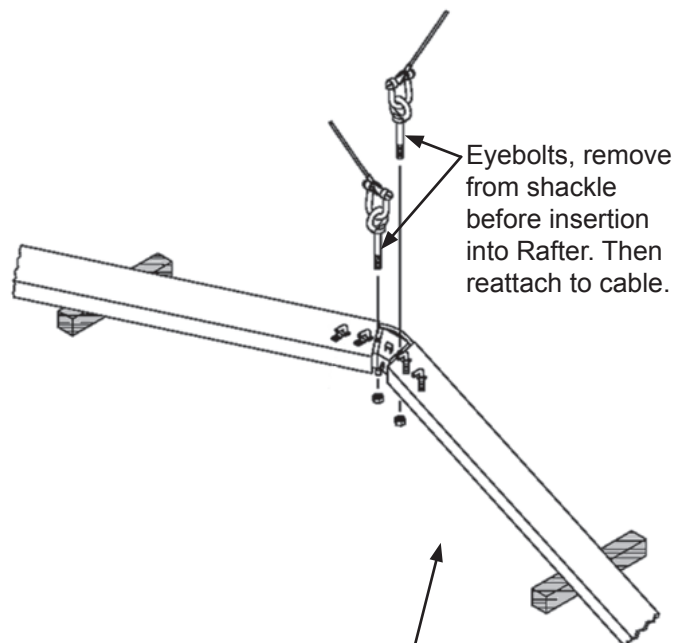


Figure 2.3b

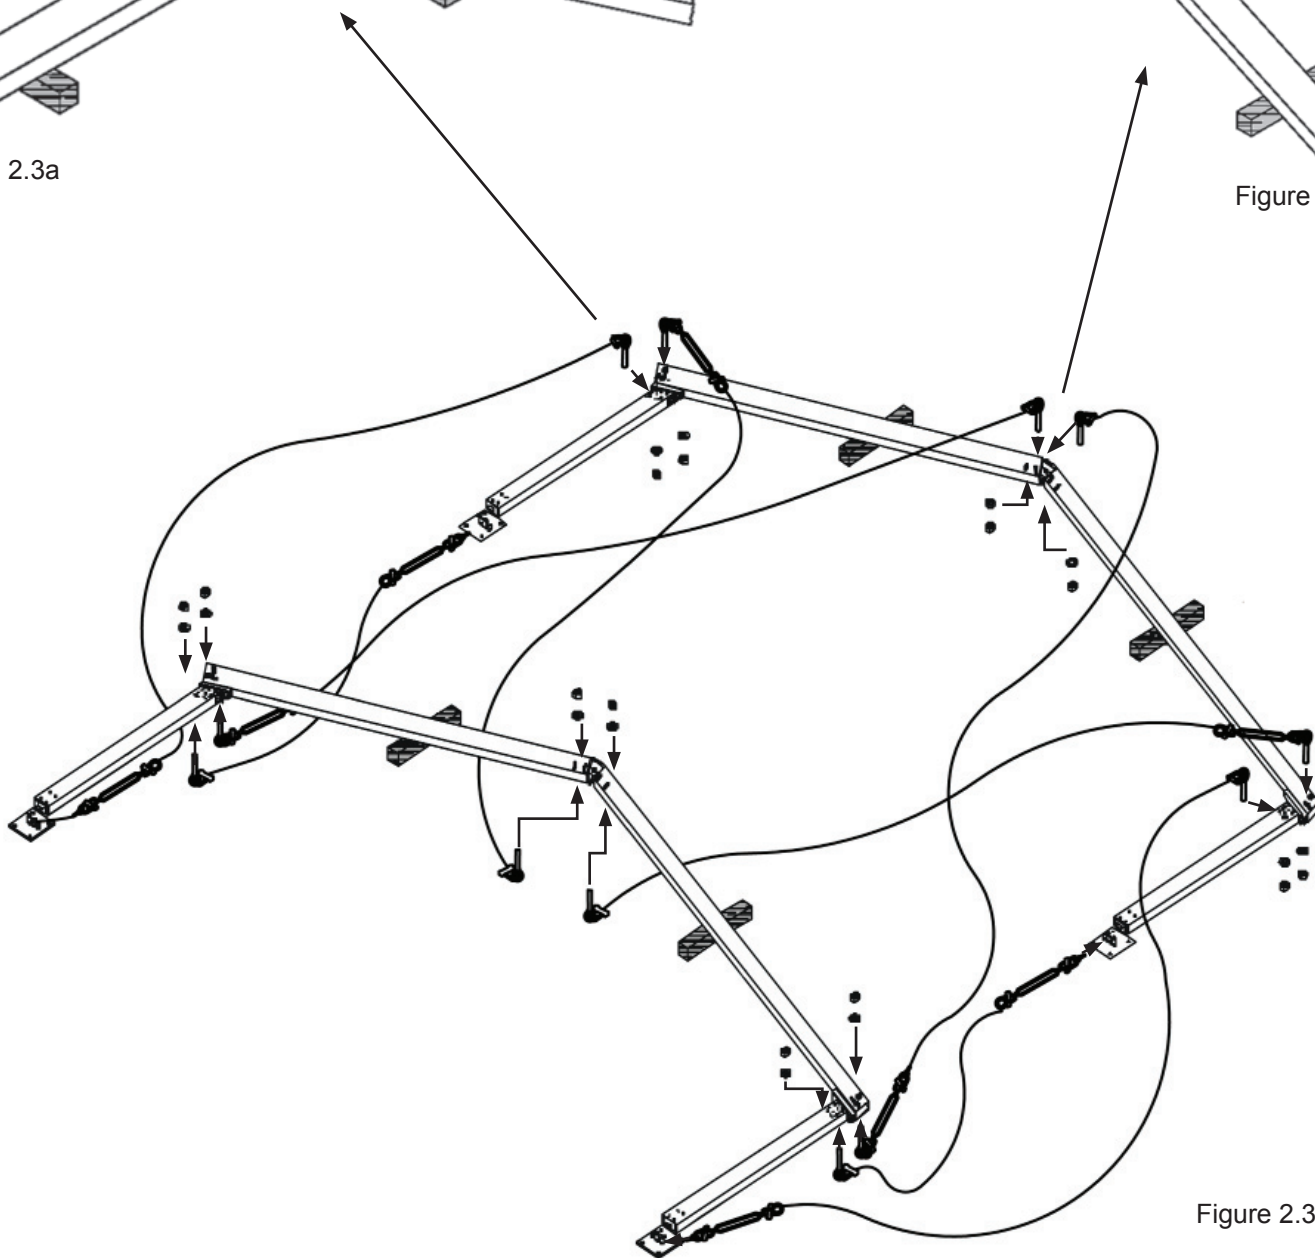


Figure 2.3c

Step 3: Erecting the Structure

3.1 Preparation for Raising Arches: **NOTE:** The Diagonal Beam Braces and the Push Pole supplied in the installation kit will be used during the raising of the first and second arches.

3.1.1 Prior to raising the first arch connect the Diagonal Beam Braces to the uprights by inserting the top pin on the Diagonal Beam Brace up through the second holes at top of the uprights as shown in **Figure 3.1a**. Secure to the upright by using an R-Clip with string attached (R-Clip must have open-end toward top of rafter).

IMPORTANT: Make sure the tube on the pinning end of the Diagonal Beam Brace is pointing upward as shown in **Figure 3.2c**, otherwise the bottom of the upright on the second arch may be damaged.

3.1.2 Lay both of the Diagonal Beam Braces along and outside the second arch base plates as shown in **Figure 3.1c**.

3.1.3 Connect Push pole to Ridge Weldment as shown in Figure 3.1b using R-Clip with string. (Similar to Diagonal Beam Brace Connection as described above).

3.1.4 Verify that the R-Clips for the base plate L-Pins are placed on the second arch base plates so they are readily available to secure the pinning end of the Diagonal Beam Brace to the L-Pins once the first arch is raised.

3.2 Raising the End Arch (First Arch): Position three or more installers along the length of each rafter; one next to the ridge, one or more at push pole on ridge, one at midpoint of rafter and one at the eave as shown in **Figure 3.2a**. Note that more installers may be required for larger width structures. This method of raising the arches requires coordination between workers for a safe installation. Use proper lifting techniques to protect the back by lifting with your legs.

3.2.1 Begin lifting the first arch in unison, being careful not to twist the arch. As the arch is lifted, the installers move toward the uprights while maintaining contact with the arch. **NOTE:** The Diagonal Beam Braces will drag along as the arch is lifted.

3.2.2 When the arch is nearly vertical and stable, one installer on each side can guide the tube on the pinning end of the Diagonal Beam Brace onto the base plate L-Pin of the second arch as shown in **Figure 3.2c**. Secure the Diagonal Beam Brace by installing the R-Clip.

3.2.3 **IMPORTANT:** Ensure that the pinning end of the Diagonal Beam Brace is slid away from under the bottom of the second arch uprights to allow clearance for the upright to pivot vertically when raising the second arch. If the pinning end of the Diagonal Beam Brace is underneath the bottom of the upright, the upright will be damaged when raising the second arch.




3.3 Raising the Second Arch: Position installers as recommended for the first arch. See note in steps 3.2.3 before raising the second arch.



3.3.1 Prior to raising the second arch, layout the eave, roof and ridge purlins in their respective position on the ground adjacent to the first arch. To help expedite the stability of the second arch, connect the curved hook end of the eave purlins to the brackets at the ends of the rafters on the first arch. The opposite end of the eave purlin can rest on the ground until the second arch is in the vertical position.

3.3.2 Raise the second arch as described in steps 3.2.1 for the first arch. When the arch is vertical, one installer on each side must swing the free end of the eave purlin, using the wide cradle purlin fork (supplied in the installation kit), to drop the eave hook into the bracket at the ends of the rafters on the second arch as shown in **Figure 3.3a**. Use the same technique and purlin fork to install the ridge purlin into the brackets at the ridges. Use the roof cables to help sway the arch and align the purlin hook with the ridge bracket.

3.3.3 Using the same technique with the narrow cradle purlin fork (supplied in the installation kit), install the remaining roof purlins, making sure that the curved hook on the roof purlin is properly engaged in the rafter bracket before swinging the opposite end in place as shown in **Figure 3.3b**.

3.3.4 The installation of the remaining arches will utilize the same technique described in steps 3.3.1 thru 3.3.3.

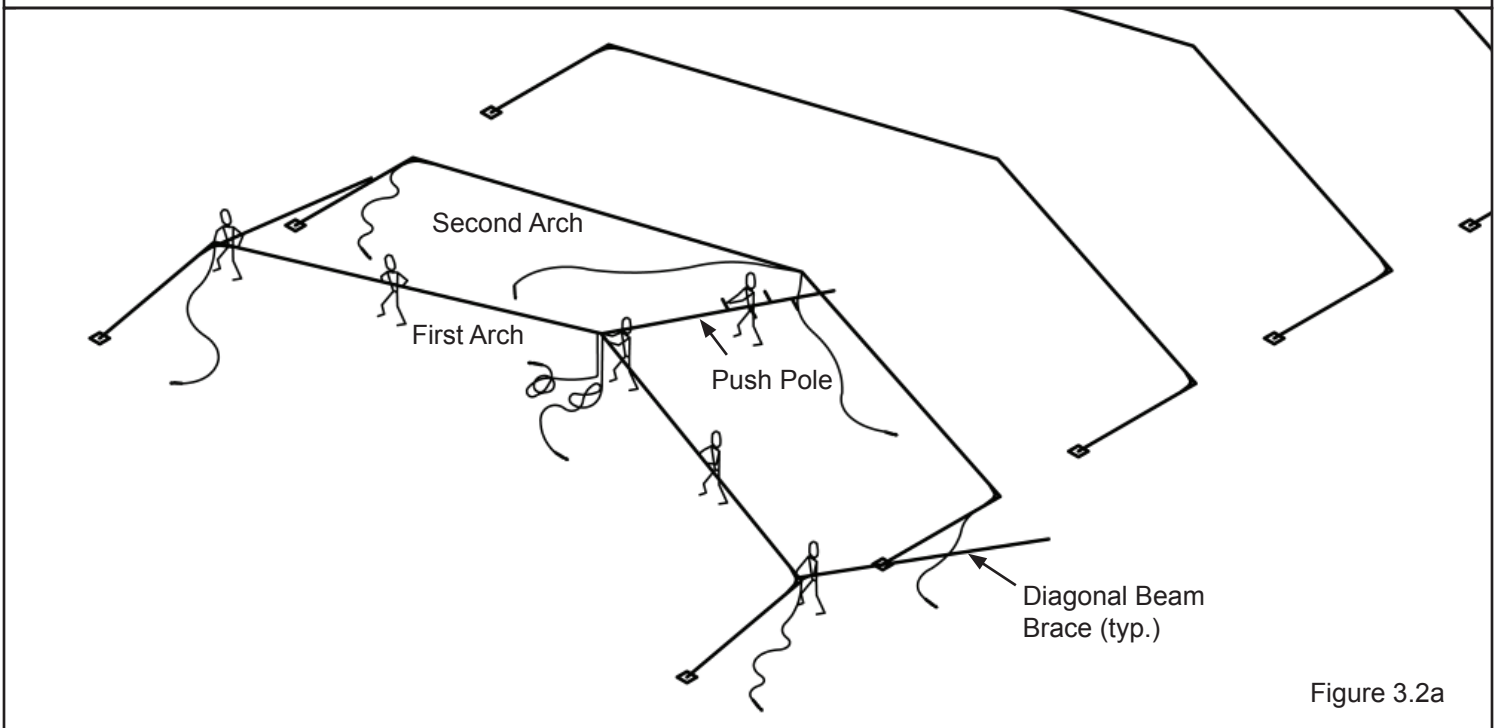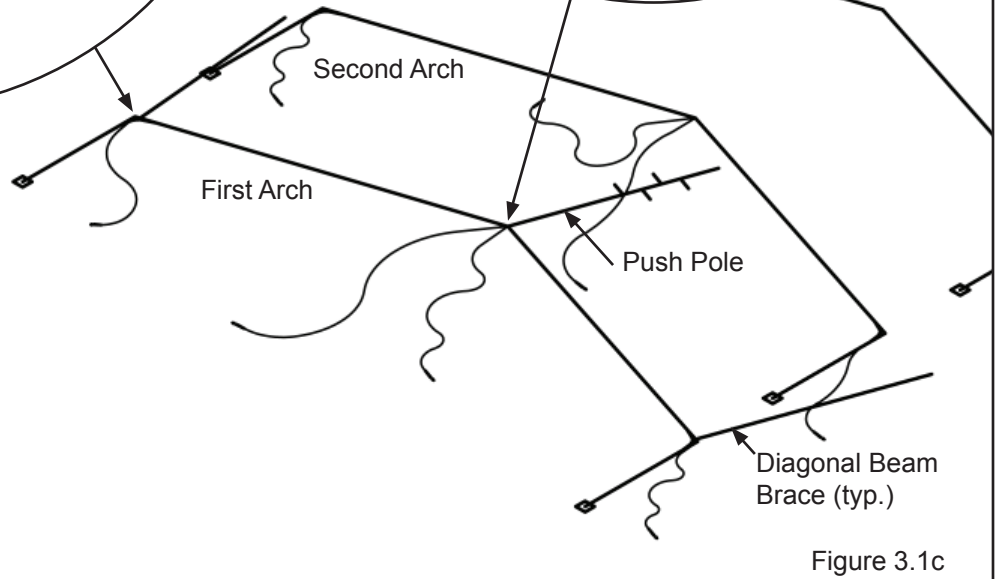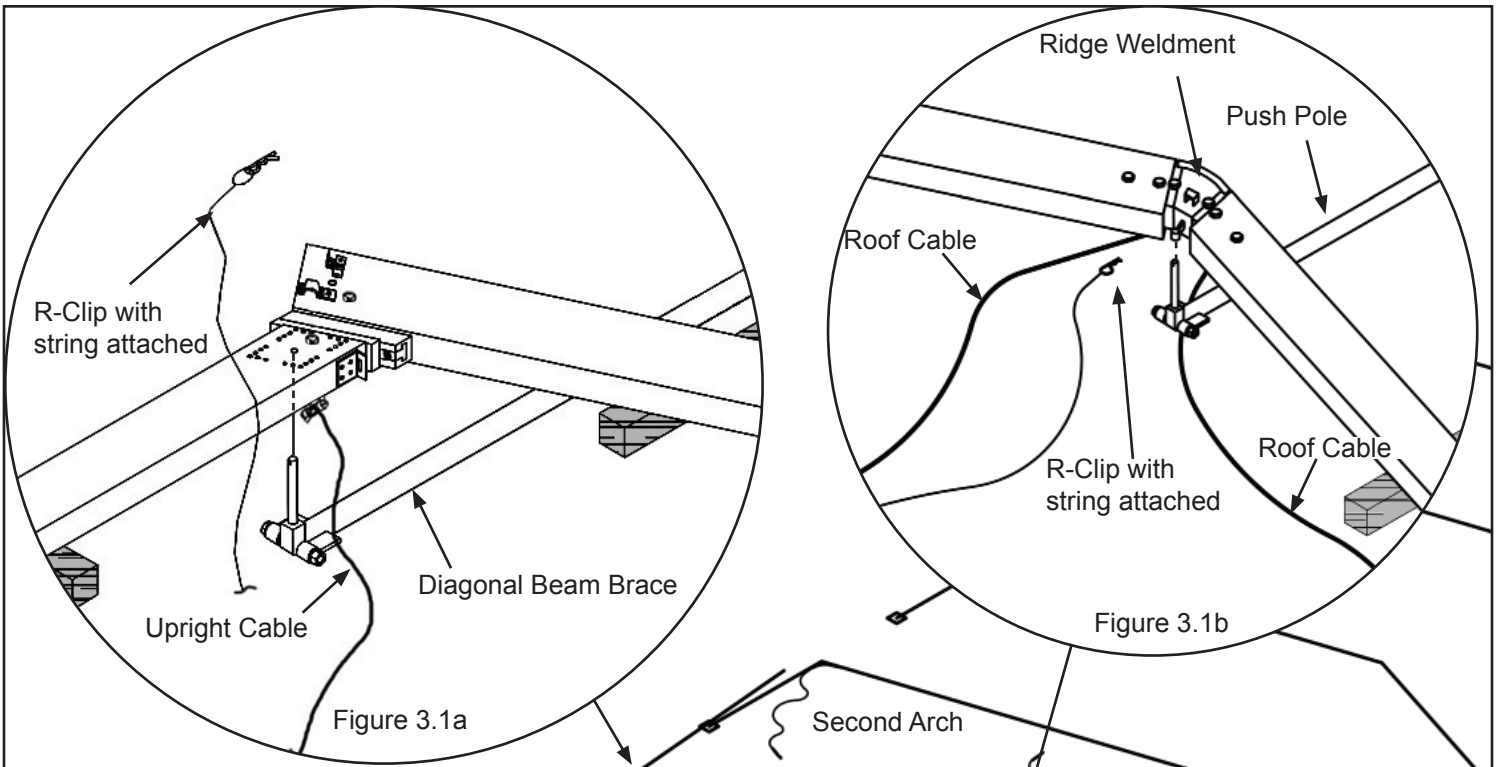

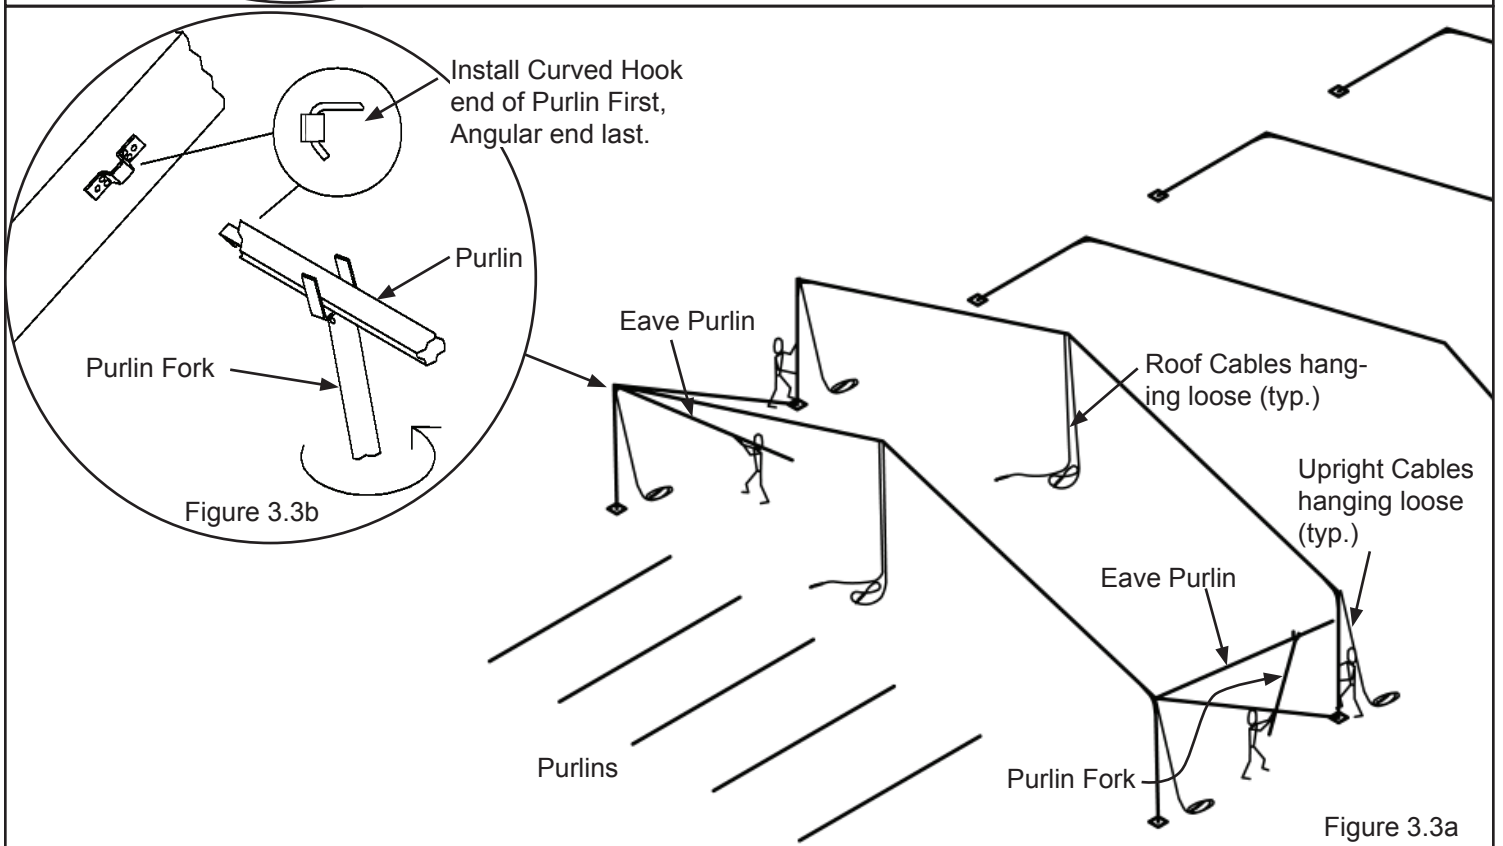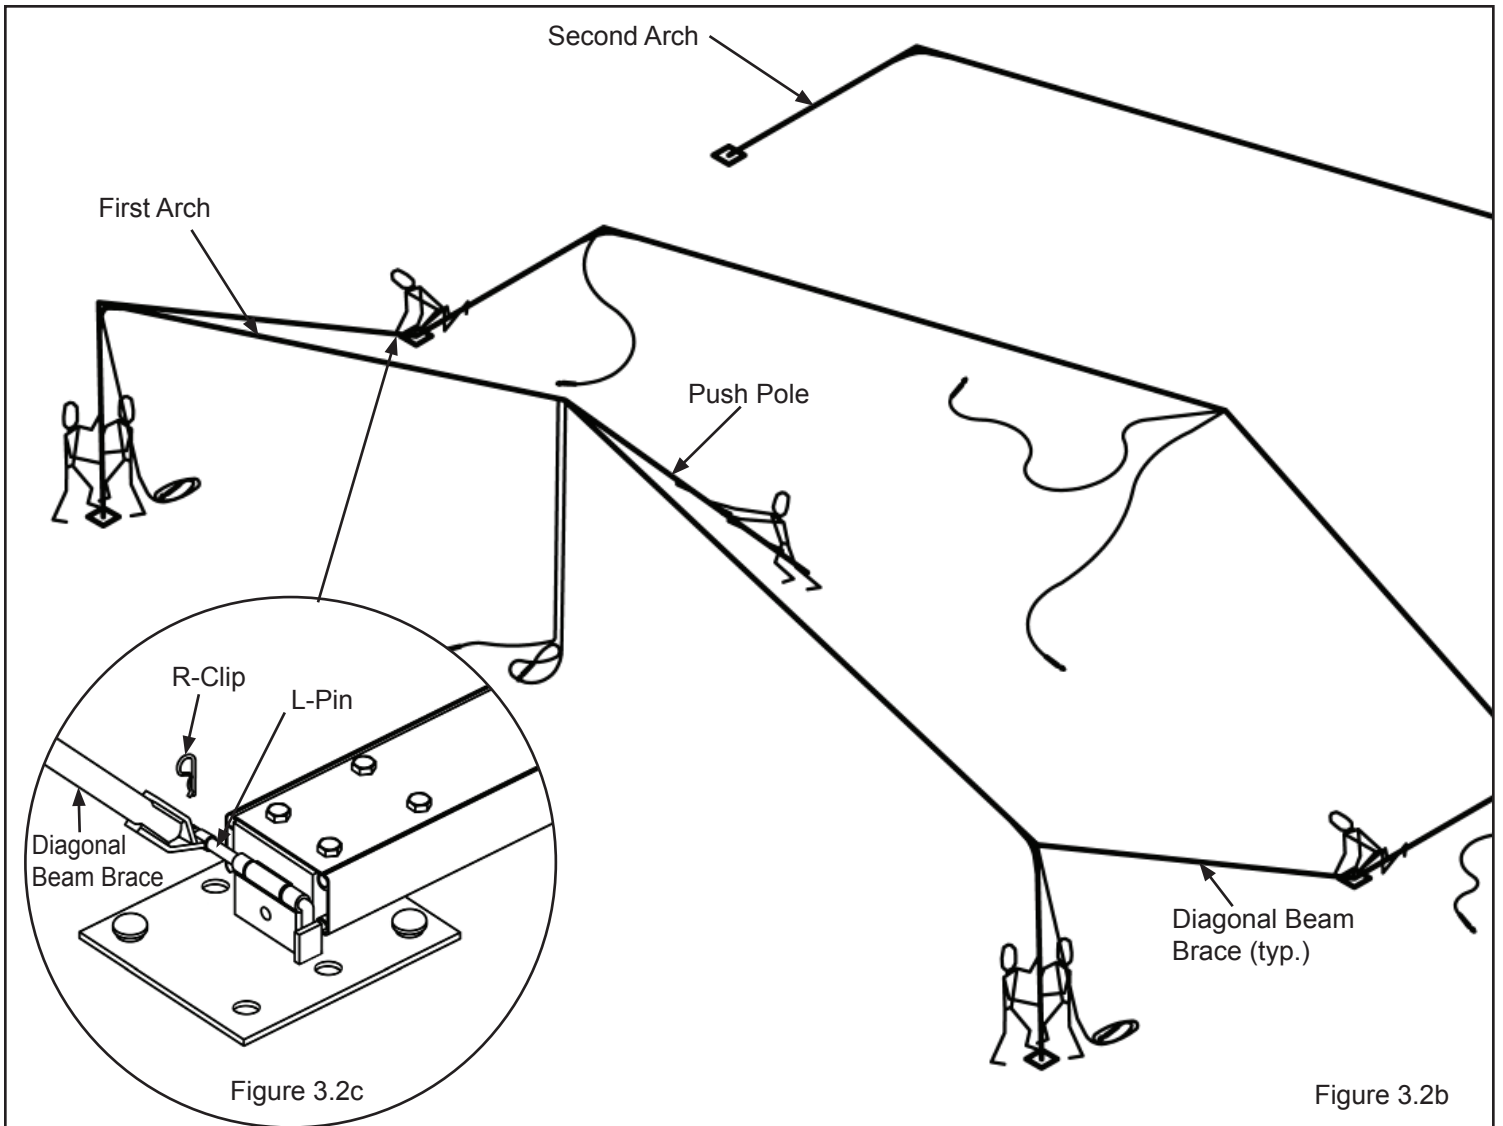

3.4 Completing Installation of Upright and Roof Cable Bracing: Turnbuckles may need to be fully extended to attach cables. Refer to **Figure 3.4** for cable configurations required for the Upright and Roof Cable Bracing.

- 3.4.1 The Upright Cables connect to the base plates by inserting an Eyebolt attached to the loose end of the cable assembly thru the hole in the base plate vertical tab as shown in **Figure 3.4a**. Secure the Eyebolt with the washer and nut provided. NOTE: The R-Clip provided will be used later to secure the wall ground rails at the End Arches if the gable end walls are installed. Adjust the tension of the cables using the turnbuckles, tension only enough to make frame stable. After the Upright Cables have been installed and tensioned, remove the Diagonal Beam Braces.
- 3.4.2 The Roof Cables connect to the Eye-Nuts at the rafter eaves by using the shackle attached to the loose end of the cable assembly. Adjust the tension of the cable using the turnbuckles. **IMPORTANT:** The Roof Cables must be installed below the Roof Purlins.
- 3.4.3 The installation of the remaining cable braced bays will utilize the same technique described in steps 3.4.1 and 3.4.2.
- 3.4.4 Before erecting additional arches, plumb the first bay of uprights by adjusting the tension of the upright cables until the uprights are vertically aligned. Next, adjust the roof cable to align the rafters vertically with the uprights. Once the first bay of framing is plumb, continue erecting remaining arches as described in steps 3.3.1 thru 3.3.3.

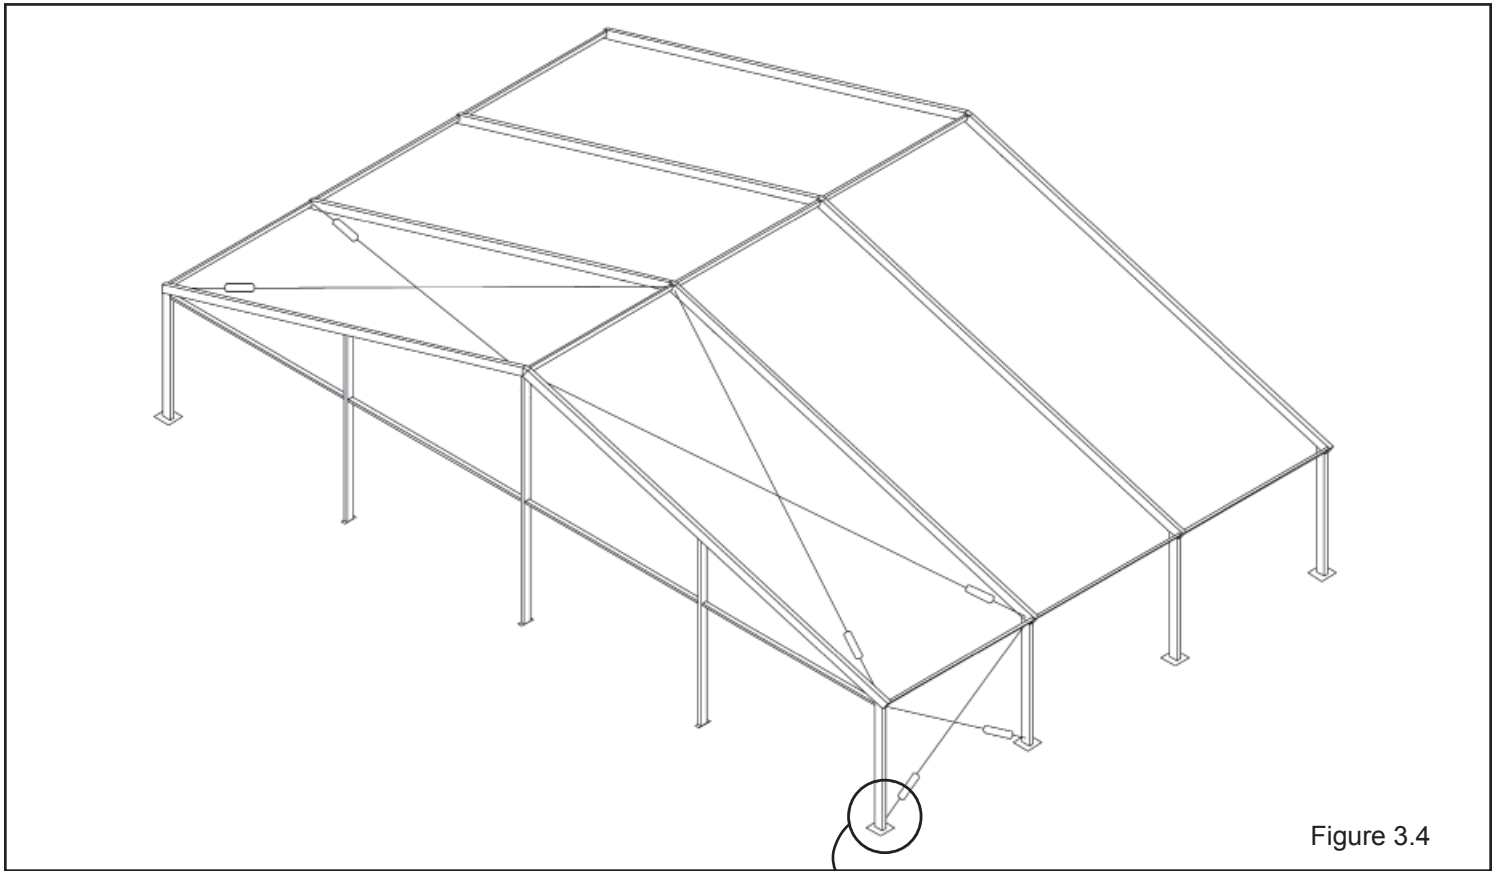


Figure 3.4

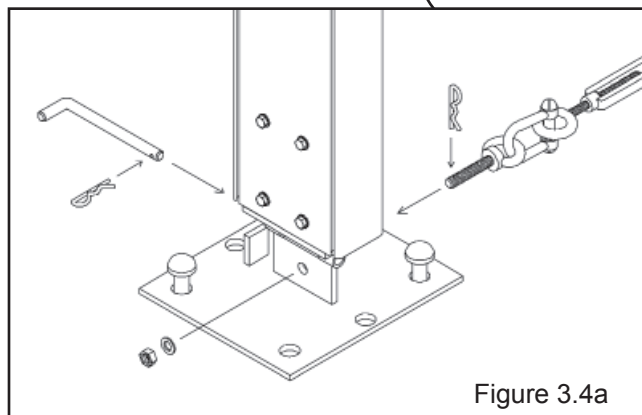


Figure 3.4a

3.5 Installing Gable End Framing: Refer to Event Sizes and Configurations, pages 4 to 6, for layout of Gable End framing for various tent widths and eave heights. **NOTE:** A ladder will be necessary to pin the top of the G.E. uprights to the end arches.

3.5.1 The following is a list of hardware required for each Gable End Upright:

Quantity	Description
1	Locking L-Pin with Stop (16mm x 132mm)
1	Gable End Base Plate L-Pins 5/8" x 200mm (7 7/8") & R-Clip
1	Anchor Structure Gable Upright Base Plate
2	31 1/2" Stakes

- 3.5.2 At the Center Uprights, (where required) connect the insert weldment at the top of the G.E. Upright to the hinge tube at the bottom of the Ridge Weldment using the Locking L-Pin with Stop. See **Figure 3.5a. IMPORTANT:** Pay attention that the collar on the L-pin is engaged in the safety latch bracket at top of upright.
- 3.5.3 At the Intermediate Uprights, first connect the G.E. Upright/Rafter Connecting Bracket to the Rafter as shown in **Figure 3.5b.** The heads of the bolts that are tightened to clamp the bracket to the rafter must be facing toward the interior of the tent. Make sure the bolts are tight. Connect the insert weldment at the top of the G.E. Upright to the hinge tube at the bottom of the G.E. Upright/Rafter Connecting Bracket using the 5/8" Swivel-Lock Pin. See **Figure 3.5b. IMPORTANT:** Pay attention that the collar on the L-pin is engaged in safety latch bracket at top of upright.
- 3.5.4 After the G.E. Uprights are connected to the arches, swing the G.E. Upright out from either side of vertical and insert the G.E. Base Plate into the bottom of the G.E. Upright. Swing the upright back to vertical. Adjust the G.E. Base Plate in or out to suit the adjoining grade and pin using the G.E. Base Plate L-Pin and R-Clip. See **Figure 3.5a. IMPORTANT:** Do not stake at this time.
- 3.5.6 Install the gable end eave purlins by pinning at one end and adjusting the telescoping end(s) so that the purlins fit properly between the G.E. Uprights. Corner Gable Purlin hooks over bracket on side upright bracket. See **Figure 3.5c.**
- 3.5.8 Plumb the G.E. Uprights (both axes) and anchor the base plates. **CAUTION:** Do not damage the uprights or installation hardware when driving the stakes.

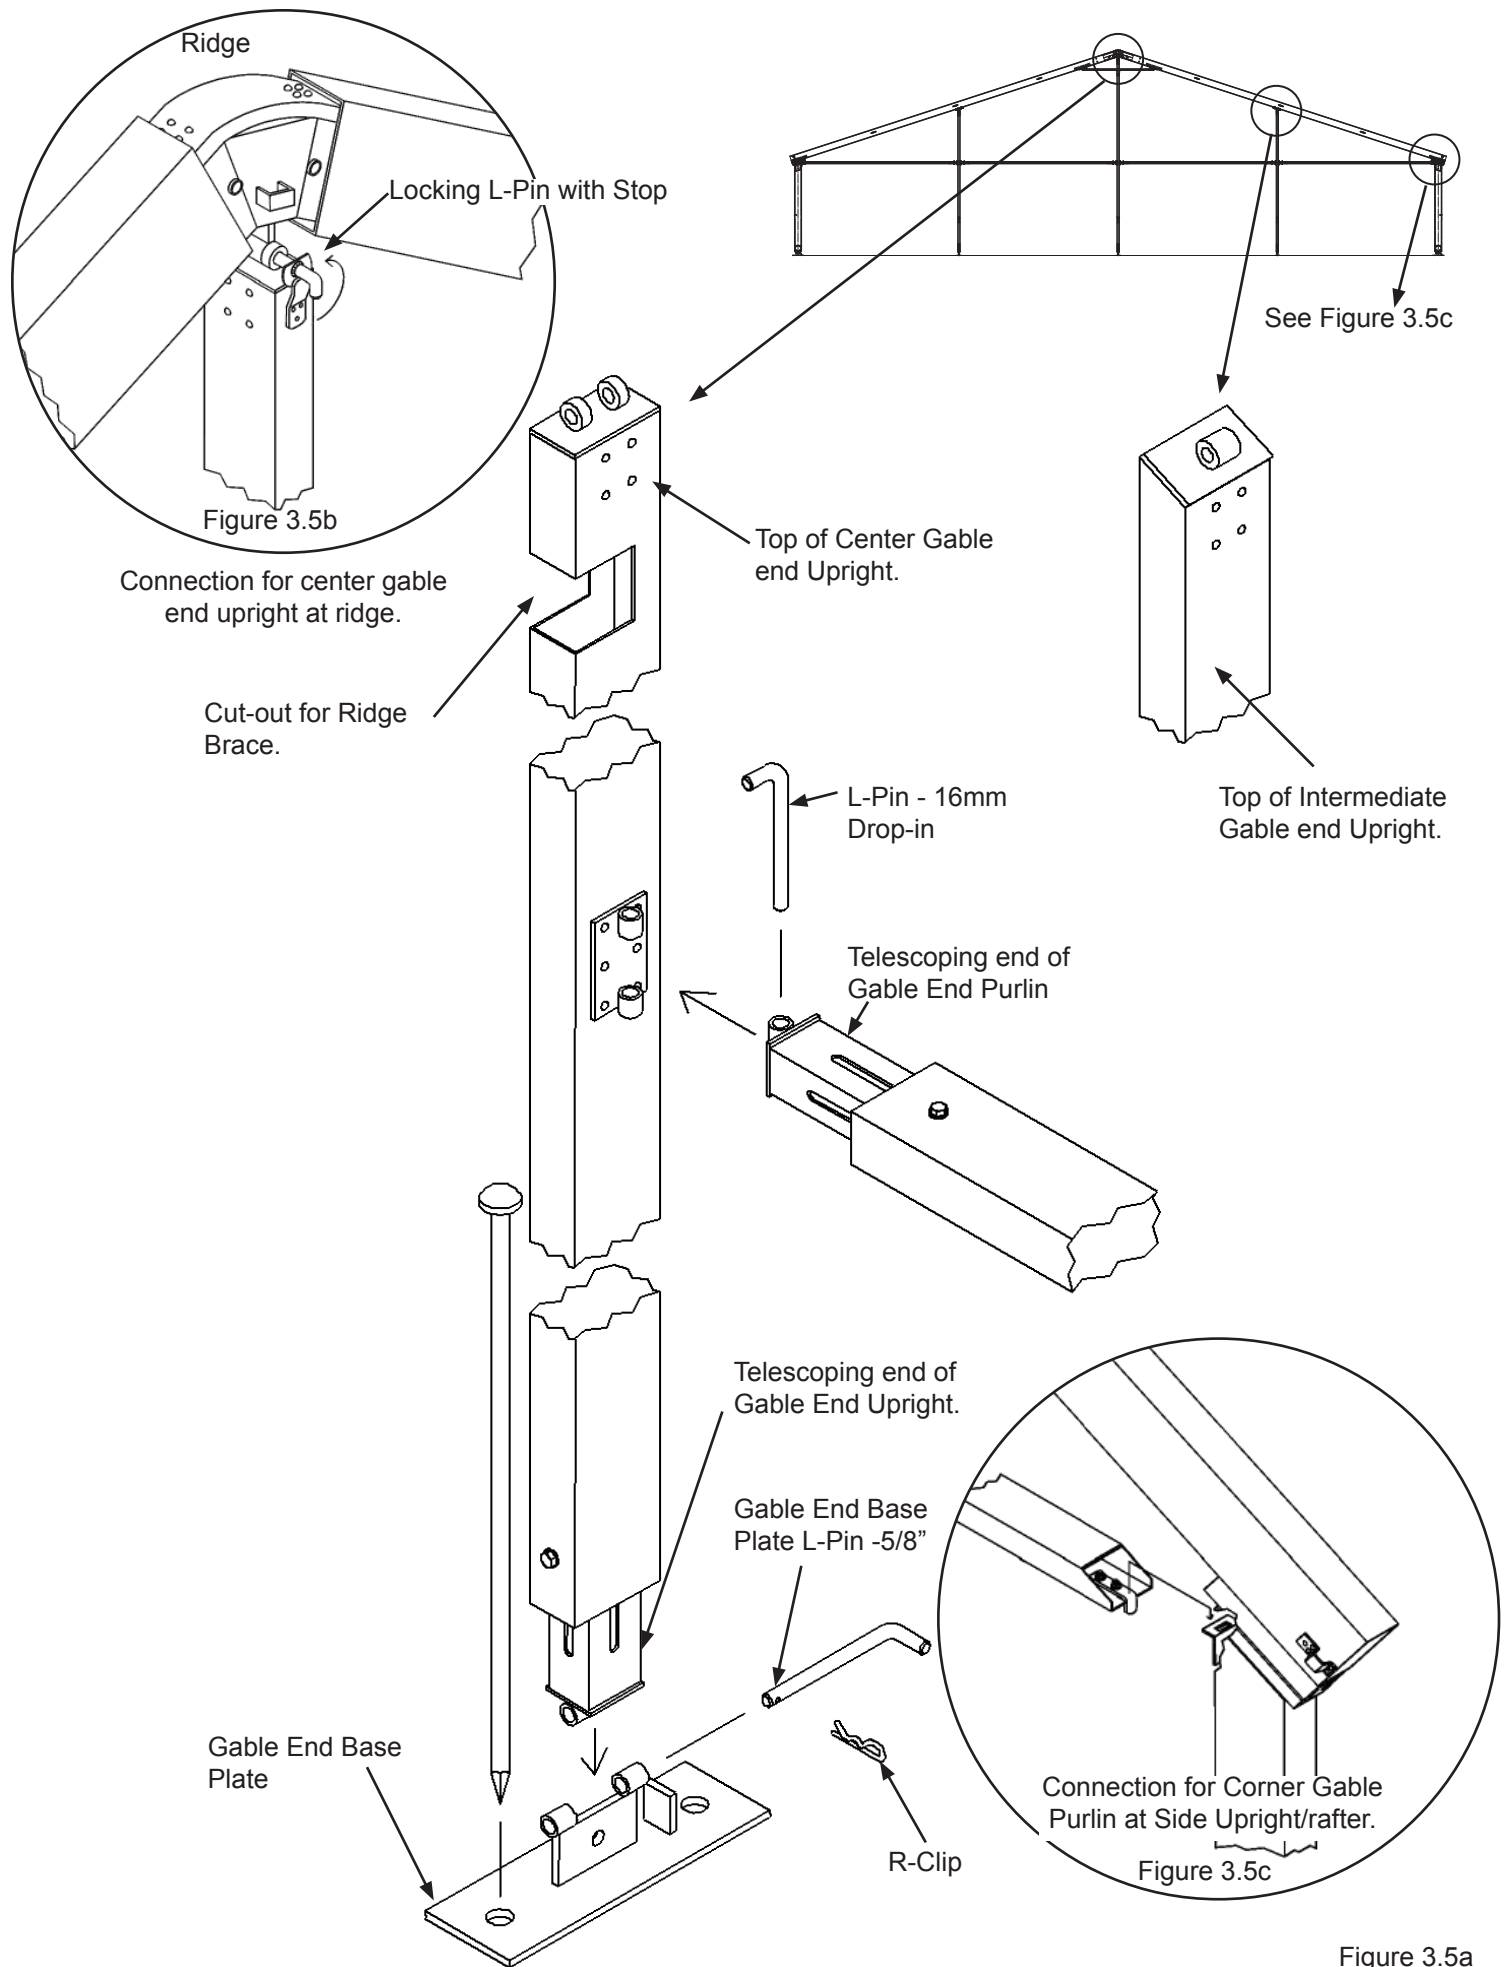


Figure 3.5a

Step 4: Installing Fabric Panels

4.1 Installing Mid Fabric Panels: Install Mid Fabric Panels first. Before installing, verify that all stakes are fully seated and the cable braced bays are lightly tensioned. Use drop cloths (not included), pull ropes (supplied in Installation Kit) and ladders to assist installation. When possible, choose installation side based on wind direction and space around installation area. Installation should be based on safety first.

- 4.1.1 Mid fabric panels should be fed into the rafters on the “downwind” side of the frame (fabric blowing away from the frame). This will prevent fighting the mid blowing against the frame and reduce the effort required to guide the mid into the kedar groove. Throw the snap ends of two pull ropes from the installation kit over the top of frame of one bay. **CAUTION:** Be certain area is clear so as not to strike anyone while throwing the pull ropes over the top.
- 4.1.2 Using a drop cloth, lay the mid fabric next to the bottom of the uprights on the snap side of the mid bay. Snap the pull ropes onto the web loops near each kedar edge. Mid should be loosely stacked to permit easy feeding into the channels. See **Figure 4.1a. IMPORTANT:** Use the third pull-rope as a pull-back rope. Snap this rope to one of the pull straps on the mid along with one of the pullropes. After the mid has been pulled up and over to the other side of the mid, remove this rope from the strap and snap to the other two pull-ropes. Using this pull-back rope, pull the pull-ropes back to the starting side of the frame and slide them over to the next bay. This step will save time in having to throw the pull-ropes over the frame again. **CAUTION:** Be certain at all times that fabric is not caught on any part of the frame to prevent damage to the fabric.
- 4.1.3 Using pull ropes, raise mid until the kedar is near the end of the rafter. With an installer on a ladder at each side of the mid, feed the kedars into the kedar channels of the rafters. Once both kedars are in the channels, continue to feed until the upper ends of the pull loops are even with the edge of the rafter.
- 4.1.4 Flip the tension pocket on top of the mid so it does not get caught on the purlins while pulling the mid through the frame. At this point, the kedars on both sides of the mid should be fed into the channel evenly. Feed each kedar into the channel for just a few more inches. There should be an installer at each installation end of the rafters to guide the kedar into the kedar channel at all times. To prevent a bind, be sure to start and stop pulling both ropes at the same time, and the same speed.
- 4.1.5 Using the pull ropes, slowly pull the mid up the rafter to within 2'-0" of the peak. Have the pullers reset their position to a location near the frame. Begin pulling the ropes at the same time to make sure the mid pulls smoothly over the ridge and down the other side of the frame. Stop pulling the mid before the kedar exits the channel on the rafter. The mid is in place.
- 4.1.6 Repeat steps 4.1.1 thru 4.1.5 for the remaining mids.
- 4.1.7 After all mids are in place, insert tension bars in tension pockets at both ends of all mids. Insert tension bar connector between tension bars and through tension strap loop. Tension mids until tight. Usually kedar will be near the end of the channel when mid is tight. Make sure the bottom pocket line on all mids are level. Add and/or release tension as necessary to adjust.
- 4.1.8 Mids are installed.

4.2 Installing Gable End Fabric Panels: Use drop cloths (not included), purlin fork and ladders to assist installation. Gable ends are made in two pieces and are inserted into the top channel of the gable end rafters.

- 4.2.1 Begin by locating the lace portion (either grommet side or loop side) of one of the two pieces. Be sure that the piece is right side out (pull ring will be on outside, FR/Warning label on inside).
- 4.2.2 Using the purlin fork, grab the ring with the end of the tool and push the kedar up through the channel until it is at the center of the ridge. See **figure 4.2a.** When both pieces of the gable end are installed in the channel and meet at the top, fasten the rings together with the carabiner and begin lacing from the peak down to the bottom of the gable end. Tie off the last loop. See **figure 4.2b.**

- 4.2.3 Insert tension bars into tension pocket at bottom of gable end. Insert tension bar connector between tension bars and through tension strap loop. Insert tension bar corner connectors at corners. See **Figure 4.2c**. Tension fabric until it is tight. Make sure the bottom pocket line on ends are level. Add and/or release tension as necessary to adjust.
- 4.2.4 Repeat steps 4.2.1 thru 4.2.3 for opposite gable end.
- 4.2.5 Gable Ends are installed.
- 4.2.6 **Now Tension all cables fully.**

4.3 Installing Optional Fabric Walls: Use drop cloths (not included) and ladders to assist installation. Walls are made in two pieces with FR/Warning labels on the inside, ground rail pockets on the outside. **NOTE:** Gable end wing walls are used at outer bays of the gable ends and there are right and left versions. Mid walls are used at center gable end bays and at all mid bays.

- 4.3.1 Start installing unlaced walls by inserting top of kedar into outside channel opening and slide upper portion of wall to top of upright. Then insert bottom of kedar into channel opening and slide kedar down to bottom of upright. Gather wall toward upright and start inserting wall tabs into channel of eave purlins. **IMPORTANT:** Gable end wall tabs insert into Outer Channel of the eave purlins and Mid wall tabs insert into Inner Channel.
- 4.3.2 After all tabs are inserted, walls may be laced from top to bottom. Tie off bottom long loop.
- 4.3.3 Insert Ground Rails into bottom pocket of all mid walls and secure to base plate L-Pins at all mid uprights as shown in **Figure 4.3a**.
- 4.3.4 Insert Ground Rails into top pockets of all gable end walls and secure to end of cable bracing eyebolt at base of gable end corner upright (**Fig. 4.3a**) and to Gable End Base Plate L-Pin.

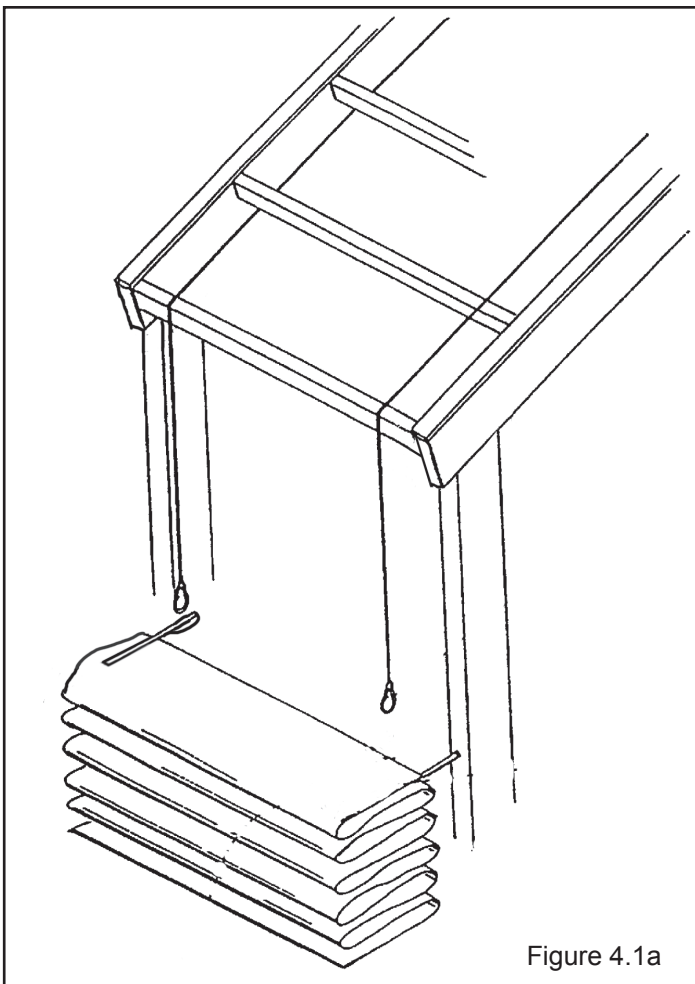


Figure 4.1a

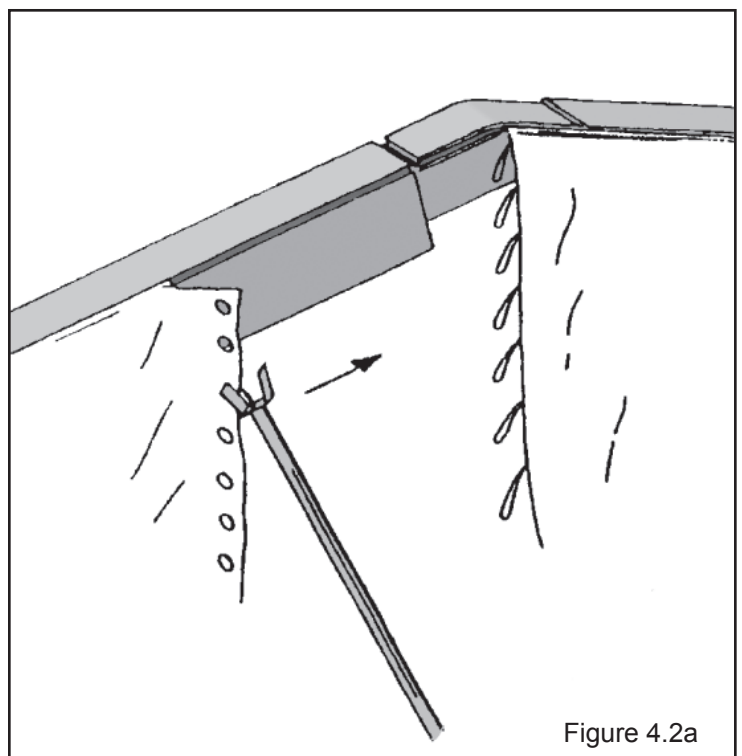


Figure 4.2a

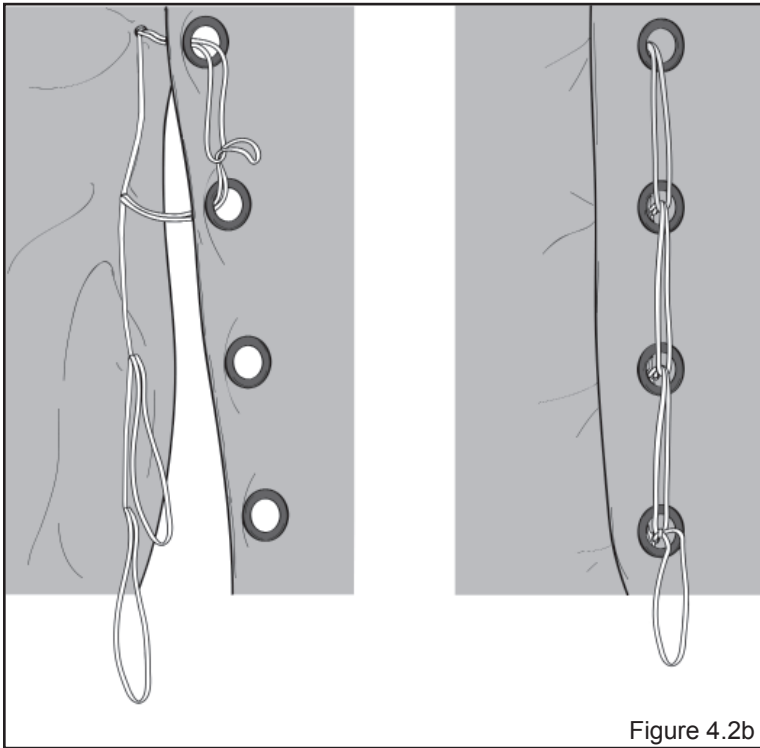


Figure 4.2b

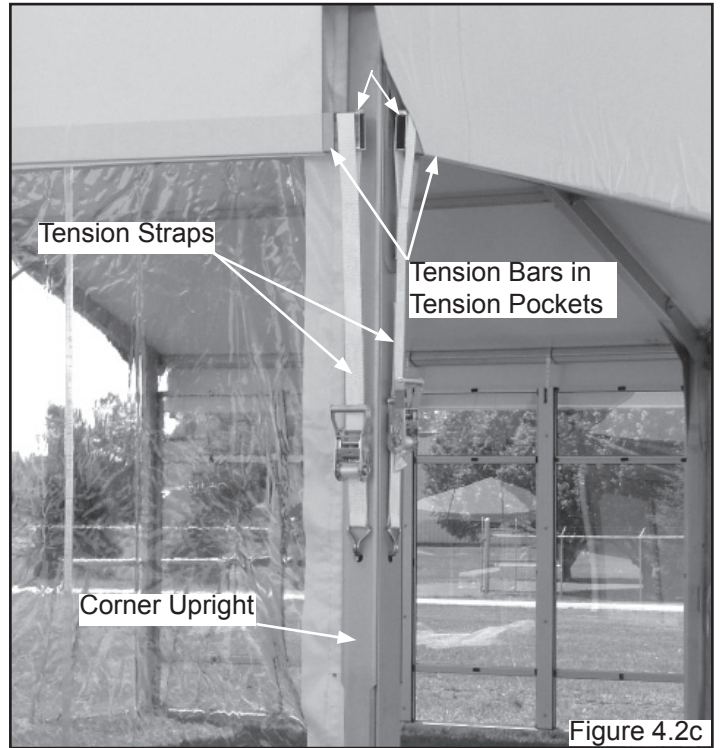


Figure 4.2c

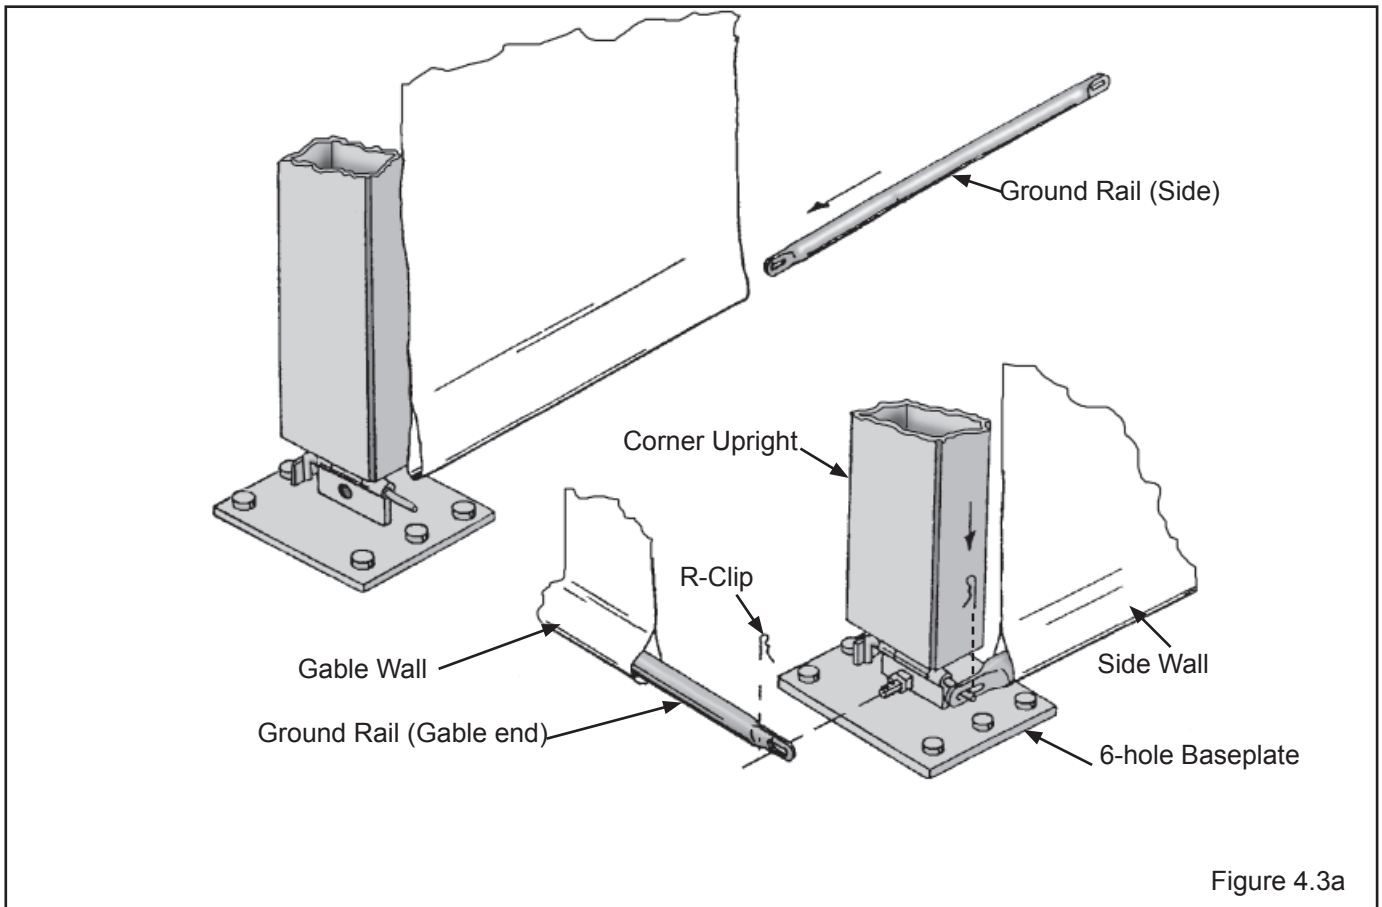


Figure 4.3a

Step 5: Dismantling

For the dismantling of the tent follow the installation instructions in reverse.

The basics of dismantling:

(All fabric panels of the tent must be dry before removing and folding for storage.)

- 5.1 Remove all wall ground rails.
- 5.2 Remove the side and gable end walls, lay them on a drop cloth and fold. Return walls to cloth shipping bags provided.
- 5.3 At the gable ends, release the gable end web tensioners, remove the tension bars, unlace the gable end panels and remove onto a drop cloth and fold. Return to cloth shipping bags provided.
- 5.4 At the mid panels, release the web tensioners, remove the tension bars and pull out the mid panels onto a drop cloth and fold. Return to cloth shipping bags provided.
- 5.5 Pull the gable end upright stakes and remove the gable end purlins and uprights.
- 5.6 Remove upright and roof cables at one end bay. **IMPORTANT:** The cabling in the opposite end braced bay must remain.
- 5.7 Install push pole at peak of end arch. While workers stabilize the end arch, remove all roof, ridge and eave purlins. Lower the arch onto wood blocking to ease pin and bolt removal.
- 5.8 Continue removing purlins and lowering remaining arches until the last bay (two arches) remains.
- 5.9 Install the Diagonal Beam Braces as noted in Step 3.2 to secure the first arch and allow the cabling to be removed.
- 5.10 Once the Diagonal Beam Braces are secure, detach the roof and upright cables at the turnbuckle end. While workers stabilize the second arch, remove the remaining roof, ridge and eave purlins and lower the second arch. **IMPORTANT:** Ensure that the pinning end of the Diagonal Beam Brace is slid away from under the bottom of the second arch uprights to allow clearance for the upright to pivot when lowering the second arch. If the pinning end of the Diagonal Beam Brace is underneath the bottom of the upright, the upright will be damaged when lowering the second arch.
- 5.11 While workers stabilize the last arch, remove the Diagonal Beam Braces from the base plate pins at the second arch and lower the last arch.
- 5.12 Remove bolts and pins from the arch connectors and disassemble the arch components.
- 5.13 Remove L-Pins connecting the uprights to the base plates.
- 5.14 Remove all stakes from the base plates.
- 5.15 After dismantling, sort and load all building components as best integrates with your transportation and storing logistics.
- 5.16 Store fabric in a cool, dry area.

Step 6: Routine Inspection and Maintenance

6.1 Installation Period

- 6.1.1 The entire tent structure system shall be inspected at regular intervals, but not less than two times per permit use period to determine that the installation is maintained in accordance with Chapter 24 of the International Fire Code and as required by the local code official in the jurisdiction of the installation.
- 6.1.2 Re-tension cable bracing , re-tighten bolted connections and re-tension fabric panels as follows:
 - 24-hours after initial installation and every week thereafter
 - after hot periods
 - after periods of heavy rains
 - after periods of strong winds
- 6.1.3 Inspect all stakes to ensure they are fully engaged.
- 6.1.4 Ensure all FR/Warning labels are clearly visible.
- 6.1.5 Do Not allow the accumulation of snow or ice
- 6.1.6 Check for deformation or damage.
- 6.1.7 If there are any damaged parts, replace them immediately with new original parts.

6.2 Visual Inspection of Components

- 6.2.1 Routinely conduct a visual inspection after every use.
- 6.2.2 Inspect purlin hooks and brackets for excessive wear or damage.
- 6.2.3 Inspect cables for kinks or frays.
- 6.2.4 Inspect bolt and pin connections for excessive wear or damage.
- 6.2.5 Inspect kedar cords for excessive wear or damage.
- 6.2.6 Inspect kedar channels to ensure they are open and free of sharp edges and burrs.
- 6.2.7 Inspect wall tabs for excessive wear or damage.
- 6.2.8 Routinely clean all fabric panels. Always thoroughly dry before storing.

Step 7: Specifications

Clearspan Widths (meters):	10.0 / 12.0 / 15.0 / 18.0 / 20.0 / 25.0
Side Heights (meters):	3.0 / 4.0
Minimum Length:	Minimum bays provided in a given structure should ensure that the structure length is greater than the structure width
Maximum Length:	No Limit
Roof Pitch:	18 degrees
Bay Distance (meters):	5.0
Minimum number of Bays:	10M – 3 / 12M – 3 / 15M – 4 / 18M – 5 / 20M - 5 / 25M - 6
Extrusion Profiles (millimeters):	
- Uprights & Rafters	220 x 100
- Gable End Uprights	130 x 70
- Ridge, Eave & G.E. Purlins	130 x 70
- Intermediate Roof Purlins	60 x 60
Rafter Extension Options:	15-12 / 18-15/ 20-15 / 25-20 / 25-15
Longest Components (meters):	9.8 (18.0 One-piece Rafter)
Main Frame Material:	Aluminum 6061 – T6
Main Frame Finish:	Anodized 204 R1
Connection Material:	Steel, zinc plated or galvanized
Connection Type:	
- Ridge	Internal Steel Weldment
- Splice	Internal Aluminum Insert
Engineering Certification:	In compliance with ASCE 7 – 10 for 115 mph, 3 second wind gust



PHONE NUMBER
812 · 867 · 2421

FAX NUMBER
812 · 867 · 0547

Anchor products are of superior design and operate best within the parameters of these instructions. It is imperative that the instructions be carefully read and **COMPLETELY FOLLOWED**. Please read installation instructions before the installation or removal of this product. Installation instructions are available online at www.anchorinc.com or by calling 1-800-544-4445.

CAUTION:

1. For each installation, the installer is solely responsible for evaluating the site and the proper securing method determined. Some soils require different staking or securing than that provided with the tent. Due to this variety of soil conditions, these are the manufacturer's suggested sequence of installation procedures. Anchor's responsibility is limited to the manufacture of the tent parts and materials. We are not responsible for methods that installers may choose to erect and secure the tent to the ground.
2. The number of stakes suggested in the installation instructions do not necessarily meet all or any relevant codes on the site of the tent installation. The number of stakes suggested **will, in many cases, keep the tent erected**, however, due to various soil conditions; these stakes will be insufficient **to keep the tent secure in high winds**. It is the tent installer's responsibility, not the manufacturer, to determine the appropriate number of stakes to meet the necessary wind loads on the site. Regardless of the number of stakes we suggest, we make no representation or warranty as to whether this specific number of stakes will meet the local tent code. Anchor does not, nor can it make any suggestions, representation, or warranties about the adequate staking required at each specific installation site. Staking information provided in the installation instructions **is not a suggestion about what is necessary to meet a site-specific load**.

For additional important information, consult: "The IFAI Procedural Handbook For the Safe Installation and Maintenance of Tentage" and the IFAI Pocket Guide "Pullout Capacity of Tent Stakes", both available from the IFAI Tent Rental Division or on our website.

3. Inasmuch as the weather is unpredictable, good judgment and common sense must be incorporated within installation guidelines. It is the responsibility of the tent installer/maintainer to determine the severity of the weather, proper time and method of installation and/or erection and disassembly. **Note: We recommend that snow and ice be removed from the tent surface as soon as possible because accumulation will damage the tent or fabric structure. Please consult with our Engineering Department about the maximum loads for each product.**

This product has been manufactured for use as a temporary structure. For the safety of all occupants, evacuation is recommended if threatening weather occurs, or if there is any doubt concerning the safe use of this product.

4. Proper safety equipment should be used at all times to insure a safe installation and take down. We suggest a careful evaluation be made to determine safety equipment needed, such as hard hats, steel-toe shoes, safety glasses and other as required. It is our desire that all installations are safe. Please be aware of hidden dangers both underground, i.e., gas lines, water lines, electrical lines, etc. and above the tent such as power lines and telephone lines.
5. Anchor stands behind its products in accordance with its standard Terms and Conditions of sale. A copy of our Terms and Conditions of Sale can be obtained by contacting Anchor at the telephone number and/or address on this document.