
Installation Instructions Fiesta® Frame Tent 8' through 16' Wide Systems with Expandable Kits




Please read all assembly / installation instructions before the installation or removal of this product.

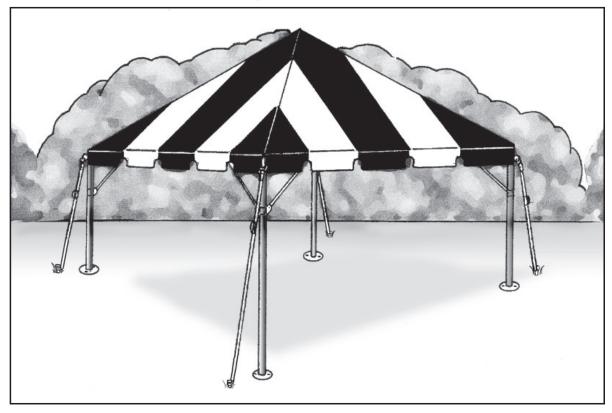


7701 Highway 41 N Evansville, IN 47725 Phone: 812-867-2421 Fax: 812-867-1429 1-800-544-4445

email: tents@anchorinc.com www.anchorinc.com

EC 5549 FI816 919

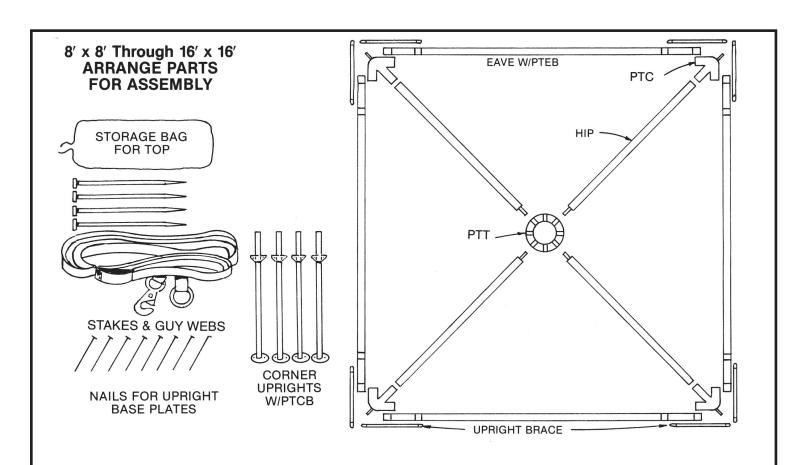

PARTS LIST

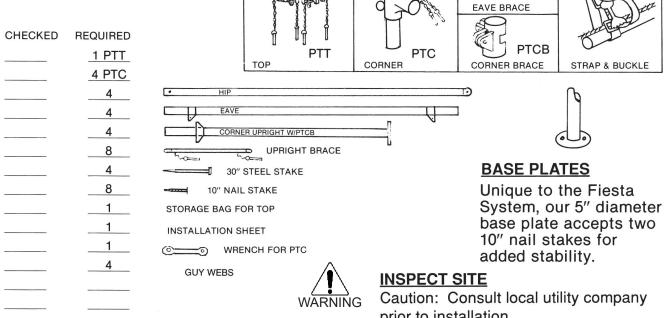

CHECKED BY: _____

DATE: _____

Caution: Consult local utility company prior to installation.

PTEB

STRAP & BUCKLE

Prior to actual frame assembly be sure to look up, down, above & below for obstacles, pipes, wires, trouble, etc.


LAYOUT & CHECK

Utilize parts list for a quick I.D. and a check list to ensure that you have all the parts.

1

EAVE ASSEMBLY

Insert eaves into PTC castings and hand tighten PTC nut. Nut holding PTEB must be on top of bar. Use Fiesta wrench for one more turn. Do not over tighten.

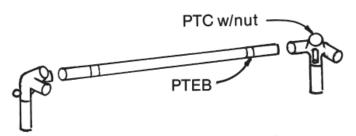



HIP & PEAK

Insert hip bar into PTC corner castings. Fasten with short pin. Insert opposite end into PTT peak casting and fasten with pin.

Notice: <u>Do not drag</u> fabric tent top across hard or rough surfaces as abrasion from tent hardware is possible.





PUT TOP ON


After upper framework is completed, put top on. Lay folded top on frame and pull over peak to opposite side. Fasten over eye bolts on corners. Keep top off ground to prevent soiling (we suggest the use of drop

soiling (we suggest the use of drop cloths to reduce soiling).

* For 10'-0" Starter and Extension parts and instructions, see pages 6 and 7.

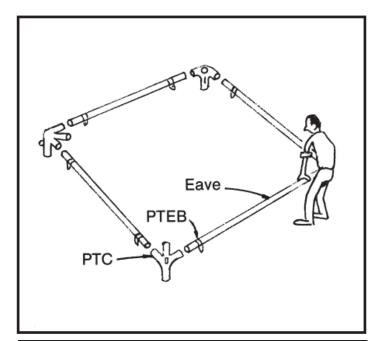

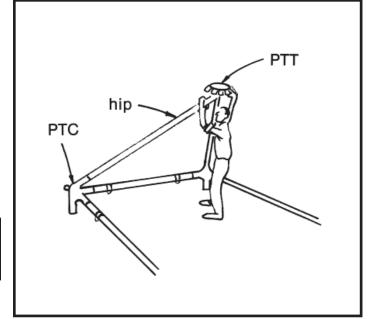

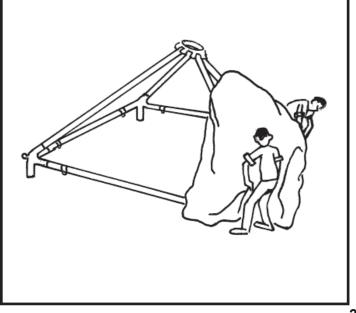

4


LIFT ONE SIDE

Lift one side of frame and insert both corner uprights into PTC corner castings and fasten with long pin.



CAUTION:

Braces at both corners "MUST" be WARNING in position before lifting other side.

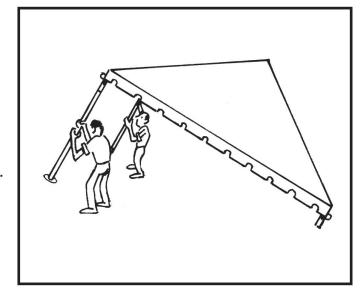

5


LIFT OTHER SIDE

Lift other side of frame and insert both corner uprights into PTC corner casting and fasten with long pin.



CAUTION:


Braces at both corners should be WARNING fastened into position.

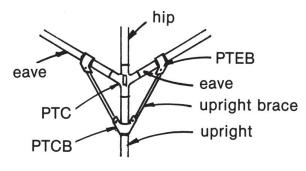




SECURE TOP TO FRAME

Starting at center of opposite sides, fasten Fiesta buckles to frame. Wrap web strap around eave bar and wall rope, then tension with buckle.

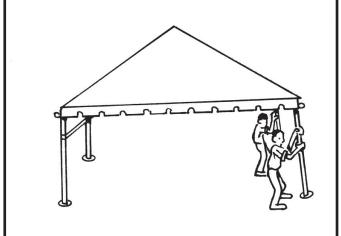

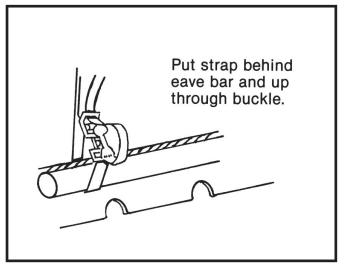

7

ROPES & STAKES

Position tent as desired. (If uprights adjustable, raise to proper height.) Attach guy web and stakes as shown. Periodically check to make sure all are secure and taut. Protective covers are recommended for all stakes.

"See caution on back page."



Guy webs must be in place at all times.



TAKE DOWN

- 1. Release straps & buckles.
- 2. "Loosen" all guy ropes.
- Starting on one side remove all braces.



Do not remove braces from opposite side until first side is lowered to ground.

- 4. Remove (2) corner uprights and lower one side to ground.
- 5. Repeat assembly steps #1 #4 in reverse for disassembly.


Note: Tent must be dry prior to folding for storage to prevent damage.


MANPOWER REQUIRED:

Two experienced installers should be able to assemble in less than one half hour.


TOOLS REQUIRED:

Sledge Hammer Fiesta Wrench (supplied)

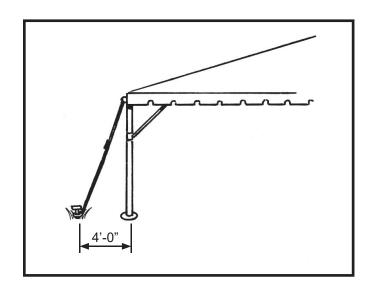

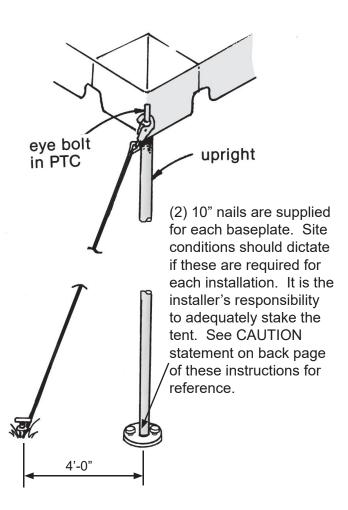

SUPPLEMENTAL INSTRUCTIONS TO EXTEND FRAME LENGTH

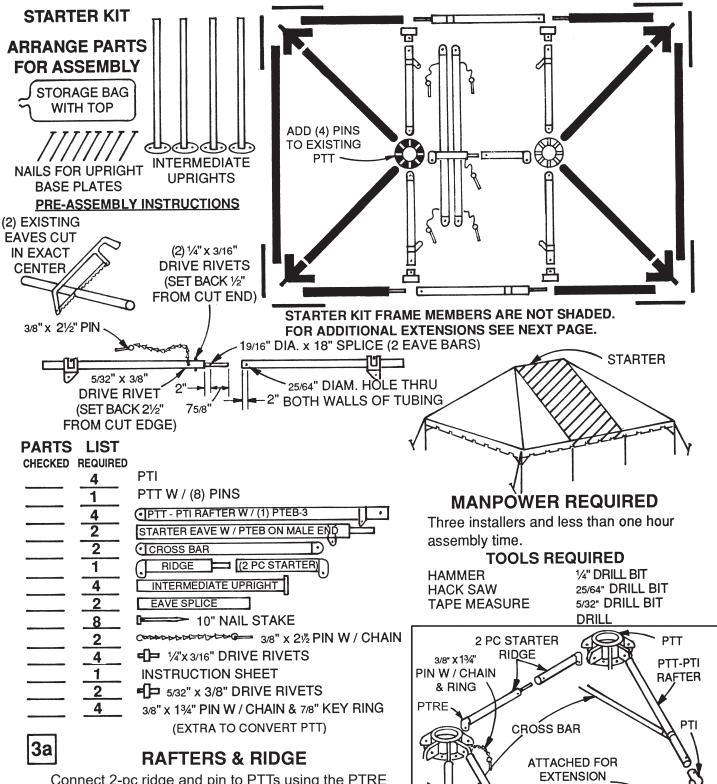


Connect 2-pc ridge and pin to PTTs using the PTRE pointed downward so that the ridge is elevated.

Pin cross bars together and attach to frame as shown.

Attach Cross Bars to Frame as shown.

SUPPLEMENTAL INSTRUCTIONS TO EXTEND FRAME LENGTH

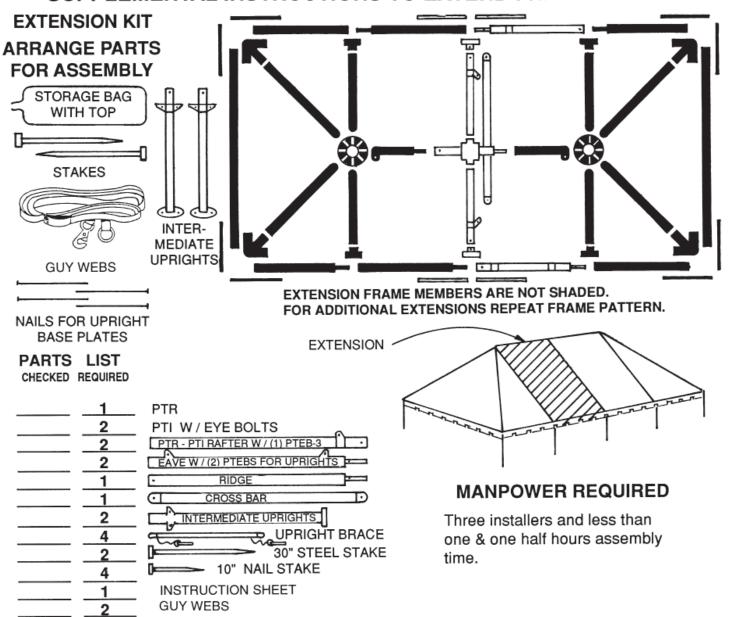


3a RIDGE & CROSS BAR

Slide PTR onto Ridge. Align with hole at center and pin. Repeat for each Ridge. Pin Ridges together and add existing ridges to each end. Lift and pin assembled Ridges to PTTs, using the PTRE pointed downward so that ridges are elevated.

Insert Ptr-PTI Rafters into Ptrs and PTIs and pin.

Attach Cross Bars to Frame as shown.

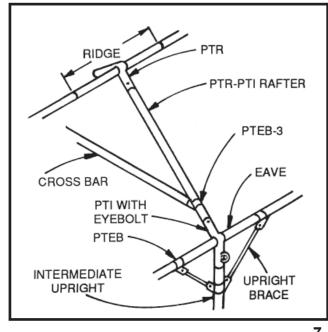



PHONE NUMBER 812 · 867 · 2421

FAX NUMBER 812 · 867 · 1429

Anchor products are of superior design and operate best within the parameters of these instructions. It is imperative that the instructions be carefully read and **COMPLETELY FOLLOWED**. Please read installation instructions before the installation or removal of this product. Installation instructions are available online at www.anchorinc.com or by calling 1-800-544-4445.



- 1. For each installation, the installer is solely responsible for evaluating the site and the proper securing method determined. Some soils require different staking or securing than that provided with the tent. Due to this variety of soil conditions, these are the manufacturer's suggested sequence of installation procedures. Anchor's responsibility is limited to the manufacture of the tent parts and materials. We are not responsible for methods that installers may choose to erect and secure the tent to the ground.
- 2. The number of stakes suggested in the installation instructions do not necessarily meet all or any relevant codes on the site of the tent installation. The number of stakes suggested will, in many cases, keep the tent erected, however, due to various soil conditions; these stakes will be insufficient to keep the tent secure in high winds. It is the tent installer's responsibility, not the manufacturer, to determine the appropriate number of stakes to meet the necessary wind loads on the site. Regardless of the number of stakes we suggest, we make no representation or warranty as to whether this specific number of stakes will meet the local tent code. Anchor does not, nor can it make any suggestions, representation, or warranties about the adequate staking required at each specific installation site. Staking information provided in the installation instructions is not a suggestion about what is necessary to meet a site-specific load.

For additional important information, consult: "The IFAI Procedural Handbook For the Safe Installation and Maintenance of Tentage" and the IFAI Pocket Guide "Pullout Capacity of Tent Stakes", both available from the IFAI Tent Rental Division on their website (www.ifai.com).

3. Inasmuch as the weather is unpredictable, good judgment and common sense must be incorporated within installation guidelines. It is the responsibility of the tent installer/maintainer to determine the severity of the weather, proper time and method of installation and/or erection and disassembly. Note: We recommend that snow and ice be removed from the tent surface as soon as possible because accumulation will damage the tent or fabric structure. Please consult with our Engineering Department about the maximum loads for each product.

This product has been manufactured for use as a temporary structure. For the safety of all occupants, evacuation is recommended if threatening weather occurs, or if there is any doubt concerning the safe use of this product.

- 4. Proper safety equipment should be used at all times to insure a safe installation and take down. We suggest a careful evaluation be made to determine safety equipment needed, such as hard hats, steel-toe shoes, safety glasses and other as required. It is our desire that all installations are safe. Please be aware of hidden dangers both underground, i.e., gas lines, water lines, electrical lines, etc. and above the tent such as power lines and telephone lines.
- 5. Anchor stands behind its products in accordance with its standard Terms and Conditions of sale. A copy of our Terms and Conditions of Sale can be obtained by contacting Anchor at the telephone number and/or address on this document.