


Installation Instructions

L-Shaped Fiesta® Marquee

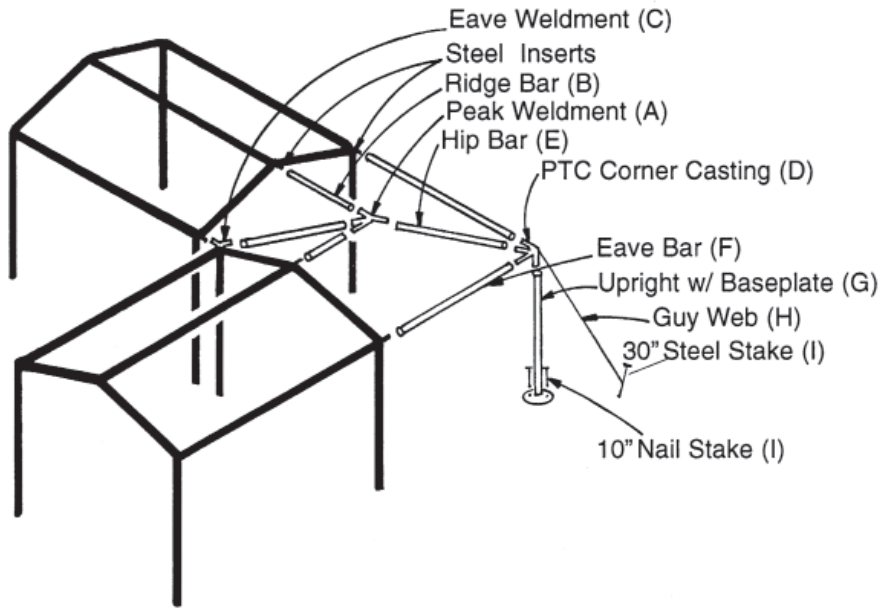

UNIT ASSEMBLY PACKING LIST

Description		Qty
(A) Peak Weldment w/4 Valco Buttons		1
(B) Ridge Bar		2
(C) Eave Weldment w/1 Valco Buttons		1
(D) PTC Complete Assembly		1
(E) Hip Bar		2
(F) Eave Bar		2
(G) Upright w/ Base Plate		1
(H) Guy web		1
(I) 30\" Steel Stake		1
(J) 10\" Nail Stake		2

L-Shaped Fiesta® Marquee Frame

1. Insert (1) Steel insert with Valco button into both the ridge casting and eave casting on completed Marquee Frame #1.
2. Insert eave weldment (C) into eave casting for inside corner on completed Marquee frame #1 then attach onto inserts from Step 1, eave bar (F), ridge bar (B) and hip bar (E) onto eave weldment (C).
3. Insert peak weldment (A) onto opposite end of ridge bar (B) and insert (2) hip bars (E) onto peak weldment (A).
4. Insert PTC casting (D) into upright (G) and insert hip bar (E) into PTC castings and pin (D) then clamp (2) eave bars (F) in between jaws of PTC castings (D).
5. Insert (1) steel insert w/ valco button into both the ridge castings and eave casting on completed Marquee frame #2.
6. Insert other ridge bar (B) into peak weldment (A) then attach opposite ends of eave bar (F), ridge bar (B) and remaining end of eave weldment (C) to completed Marquee frame #2.
7. Spread top over frame mating spring strips together and adjust tension on straps.
8. Snap on guy webs (H) to eye bolt.
9. Use (2) nail stakes (J) to keep upright vertical (drive nail stakes through holes in base plates). Drive large stake (I) near upright base plate (when applicable) and tension guy web.

Anchor Industries Inc.
 7701 Highway 41 N
 Evansville, IN 47725
 Phone: 812-867-2421
 Fax: 812-867-1429
 1-800-544-4445
 email: tents@anchorinc.com
 www.anchorinc.com



PHONE NUMBER
812- 867- 2421

FAX NUMBER
812- 867- 0547

Anchor products are of superior design and operate best within the parameters of these instructions. It is imperative that the instructions be carefully read and **COMPLETELY FOLLOWED**. Please read installation instructions before the installation or removal of this product. Installation instructions are available online at www.anchorinc.com or by calling 1-800-544-4445.

CAUTION:

1. For each installation, the installer is solely responsible for evaluating the site and the proper securing method determined. Some soils require different staking or securing than that provided with the tent. Due to this variety of soil conditions, these are the manufacturer's suggested sequence of installation procedures. Anchor's responsibility is limited to the manufacture of the tent parts and materials. We are not responsible for methods that installers may choose to erect and secure the tent to the ground.
2. The number of stakes suggested in the installation instructions do not necessarily meet all or any relevant codes on the site of the tent installation. The number of stakes suggested **will, in many cases, keep the tent erected**, however, due to various soil conditions; these stakes will be insufficient **to keep the tent secure in high winds**. It is the tent installer's responsibility, not the manufacturer, to determine the appropriate number of stakes to meet the necessary wind loads on the site. Regardless of the number of stakes we suggest, we make no representation or warranty as to whether this specific number of stakes will meet the local tent code. Anchor does not, nor can it make any suggestions, representation, or warranties about the adequate staking required at each specific installation site. Staking information provided in the installation instructions **is not a suggestion about what is necessary to meet a site-specific load**.

For additional important information, consult: "The IFAI Procedural Handbook For the Safe Installation and Maintenance of Tentage" and the IFAI Pocket Guide "Pullout Capacity of Tent Stakes", both available from the IFAI Tent Rental Division or on our website.

3. Inasmuch as the weather is unpredictable, good judgment and common sense must be incorporated within installation guidelines. It is the responsibility of the tent installer/maintainer to determine the severity of the weather, proper time and method of installation and/or erection and disassembly. **Note: We recommend that snow and ice be removed from the tent surface as soon as possible because accumulation will damage the tent or fabric structure. Please consult with our Engineering Department about the maximum loads for each product.**

This product has been manufactured for use as a temporary structure. For the safety of all occupants, evacuation is recommended if threatening weather occurs, or if there is any doubt concerning the safe use of this product.

4. Proper safety equipment should be used at all times to insure a safe installation and take down. We suggest a careful evaluation be made to determine safety equipment needed, such as hard hats, steel-toe shoes, safety glasses and other as required. It is our desire that all installations are safe. Please be aware of hidden dangers both underground, i.e., gas lines, water lines, electrical lines, etc. and above the tent such as power lines and telephone lines.
5. Anchor stands behind its products in accordance with its standard Terms and Conditions of sale. A copy of our Terms and Conditions of Sale can be obtained by contacting Anchor at the telephone number and/or address on this document.