
# Installation Instructions 51' Aurora Tent Non-Certified Installation

Modified from Fully Certified Version



Please read all assembly / installation instructions before the installation or removal of this product.

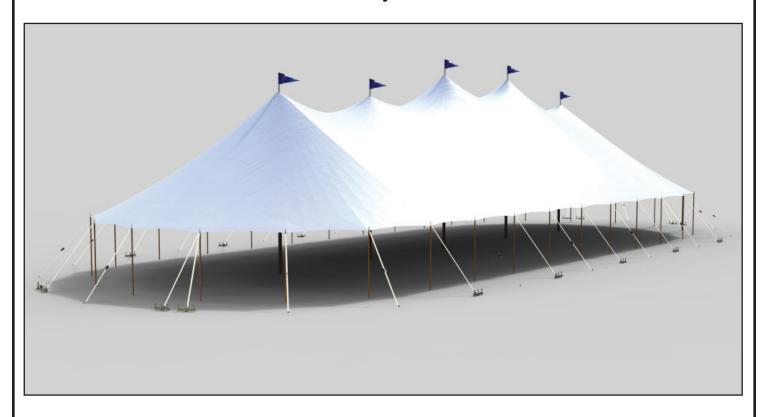

7701 Highway 41 N Evansville, IN 47725 Phone: 812-867-2421 Fax: 812-867-1429 1-800-544-4445

email: tents@anchorinc.com www.anchorinc.com

EC 6067 AU51NC-623

# <u>Index</u>

ntro	duction	.3
	Safety Notes	3
	Parts Illustrations	4
	Part Numbers Chart	5
	Stake and Pole Layout	5
	Tent Layout	6
	Stake Bars	.6
	Lacing	. 6
	Lace Flap	.7
	Attach Guys	. 7
	Raise Poles	8
	Winch Tensioning	. 8
	Final Adjustment	9
	Take Down	. 9
	Walls	.9
	Flag Pole Installation	10
	More Staking Layouts1	1
	Queen/King Mids - Left, Right Designation	12
	Caution Statement	13

# Introduction

The installation of this Aurora Tent should be performed/supervised by knowledgeable tent installers with a clear understanding of safety issues as well as the methods of anchoring. The requirements as specified must be followed. The installer/owner must read the assembly instructions completely prior to any installation. Particular attention must be given to anchoring! See Caution Statement on back page of this manual

Work from step to step.

Before erecting any tents or membrane structures, first obtain permits and approvals as required from the local building and fire code officials on the jurisdiction of your installation.

### PLEASE PAY SPECIAL ATTENTION TO SAFETY WARNINGS AND CAUTIONS FOR PREVENTION OF ACCIDENTS.

Regarding the contents of this document:

The illustrations and photos are made to show clearly the construction and dismantling procedures and also for identification of the components. Not all illustrations/photos correspond to the actual dimensions and size. Explanations and/or notes have been added to these illustrations/photos.

If you have questions, please call your sales representative at the phone number listed on the front of this manual.

# **Safety Notes**

- Please read through this assembly manual completely before beginning your installation. Be sure the proper equipment and safety precautions are in place. We hope that you enjoy the design features of the tent each time the unit is installed.
- Consult your local <u>utility locator service</u> or the <u>National Utility Locating Contractors Association (NULCA)</u> prior to installation.
- Prior to actual tent assembly, be sure to look up, down, above & below for obstacles, pipes, wires, trouble, etc.
- Be alert to avoid contact of Tent poles with any overhead power lines near the site.
- Keep site clear of debris to avoid tripping, especially while carrying tent poles or bundle of fabric.
- When moving tent sections by hand, use proper lifting techniques to protect the back.
- The installation method described here requires coordination of tasks between workers. A safe installation is dependent on that coordination. Work cooperatively as a team.
- Replace used or damaged components with original new ones.
- To prevent injuries, wear suitable protective clothing such as hard hats, steel toed shoes, etc.
- Do not drag bundle of fabric on concrete, asphalt, or ground as this can cause damage to the fabric from abrasion through the bag.
- This tent is manufactured for use as a temporary structure. Evacuation is recommended if threatening or windy weather occurs. See caution on back page of this manual.
- Anchor uses a nominal safety factor of at least 2 when figuring staking guidelines.
- \* IMPORTANT NOTE: REFER TO CAUTION STATEMENT #2 ON THE BACK PAGE OF THIS MANUAL FOR IMPORTANT WARNING ABOUT NUMBER OF STAKES SUPPLIED.

THE INSTALLER MUST USE THE LOCAL SOIL CONDITIONS TO CALCULATE THE ACTUAL NUMBER OF STAKES REQUIRED AND IS RESPONSIBLE FOR THE STAKING PATTERN AND CONFIGURATION. THE STAKING LAYOUT AS SHOWN IN THIS MANUAL IS FOR "HARD" SOIL.

THIS REPRESENTS 1 OF 6 SOIL CONDITIONS REFERENCED IN THE IFAI GUIDE: "PULLOUT CAPACITY OF TENT STAKES". YOUR SOIL CONDITION MAY DIFFER. THEREFORE, DIFFERENT STAKING REQUIREMENTS WILL RESULT. ANCHOR INDUSTRIES RECOMMENDS ERECTING TENTS ONLY IN SOIL CONDITIONS LISTED IN THIS MANUAL.

### **IMPORTANT:**

The installation of this Tent should be performed/supervised by knowledgeable tent installers with a clear understanding of safety issues as well as the methods of anchoring. The installer/owner must read the assembly instructions completely prior to any installation. Particular attention must be given to anchoring! See Caution Statement on back page of this manual.

### **MANPOWER REQUIRED**

Five experienced installers should be able to assemble a 51' x 71' tent in approximately four hours.

## **TOOLS REQUIRED**

Sledge Hammers Stake Driver 2 Measuring Tapes


### **INSPECT SITE**

### Caution:

Consult your local utility locator service or the National Utility Locating Contractors Association (NULCA) prior to installation. Prior to actual tent assembly, be sure to look up, down, above & below for obstacles, pipes, wires, trouble, etc.

## **LAYOUT & CHECK**

Utilize parts list for a quick I.D. and a check list to ensure that you have all the parts.

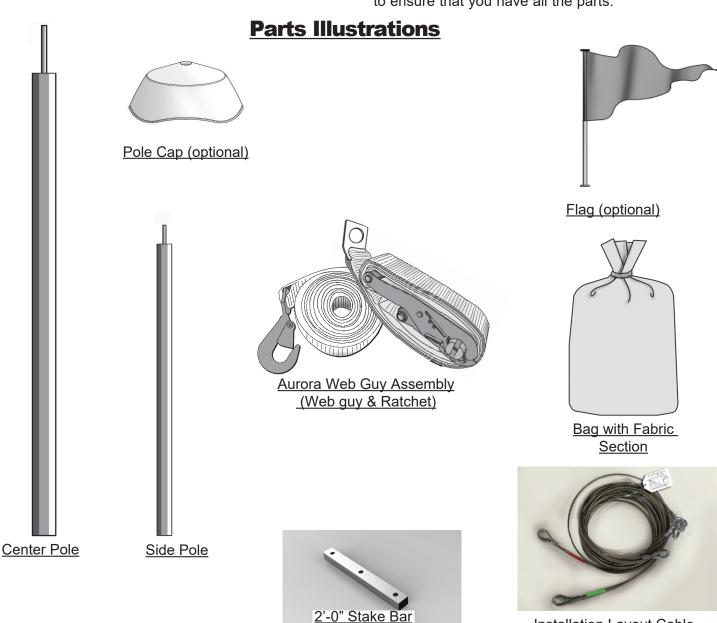

Part of Installation Layout Cable


Part of Installation Kit

(Req'd for first purchase,
optional after that)

# **Part Numbers Chart**

l l	PART NUMBERS AND DESCRIPTIONS	PART NUMBERS AND DESCRIPTIONS	
Number	Description	Number	Description
65740	24' Center Pole - 4" Alum. Schedule 40 Pipe - (Qu-7')	8049371	51' W x 25-8" End Loop Sheer White
65750	25' Center Pole - 4" Alum. Schedule 40 Pipe - (Qu-8')	8049370	51' W x 25'-8" End Hole Sheer White
8128038C	28' Center Pole - 4" Alum. Schedule 40 Pipe - (King-7')	8049372	51' W x 20' Mid QQ Sheer White
65749	29' Center Pole - 4" Alum. Schedule 40 Pipe - (King-8')	8049374	51' W x 20' Mid QK Right Sheer White
65730	7' Side Pole - 2" Alum. Sched. 40 Pipe	8049373	51' W x 20' Mid QK Left Sheer White
65732	7' Side Pole - 3" Alum. Fluted Anodized	8049375	51' W x 20' Mid KK Sheer White
65560	7' Side Pole - 3 1/2" Octagonal Wood	8048627	Aurora Weathershield Wall 7' X 10' Sheer White
65720	8' Side Pole - 2" Alum. Sched. 40 Pipe	8048628	Aurora Weathershield Wall 7' X 10' Clear Vinyl
65723	8' Side Pole - 3" Alum. Fluted Anodized	8048629	Aurora Weathershield Wall 8' X 10' Sheer White
65550	8' Side Pole - 3 1/2" Octagonal Wood	8048630	Aurora Weathershield Wall 8' X 10' Clear Vinyl
33000	2' Stake Bar	8048618	Aurora Flag Pole Kit (no fabric)
8048617	Aurora Web Guy Assembly	8048624	Aurora Flag Ass'y 18" x 120" Blue w/ PVC
3704242	Stake 1 1/8" x 42" - Double Head (Bulk Pack)	8048626	Aurora Flag Ass'y 18" x 120" White w/ PVC
8048613	Install. Kit (Layout Cable, 4 Web Loops, 4 Web Guys)	8048623	Aurora Flag Ass'y 18" x 54" Blue w/ PVC
8049376	51' W Installation Layout Cable only	8048625	Aurora Flag Ass'y 18" x 54" White w/ PVC

# **STAKING LAYOUT**

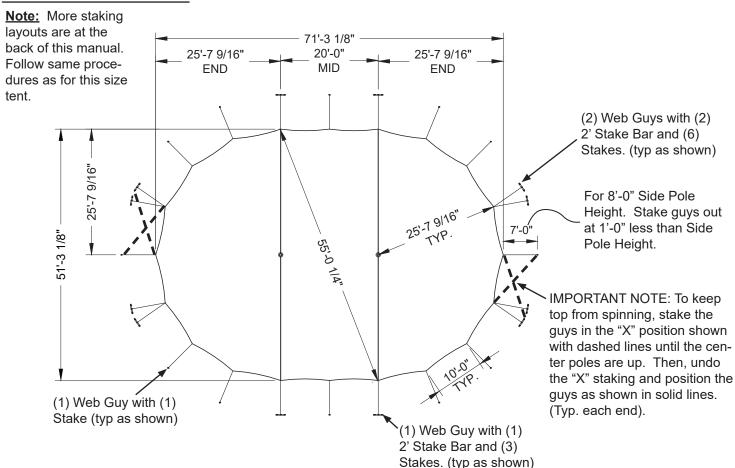

**Stake and Pole Layout for Tent:** Using the Installation Layout Cable and/or the staking layout appropriate for your size tent, mark placement of Center Poles, Side Poles and Stakes. See separate instructions for Installation Layout Cable use.

# **2** Tent Layout:


Lay Ground Cloth over the area to be covered by the tent. Unfold the tent top fabric over the ground cloth, with right side up. Unfold and stretch fabric out so that side pole plates match placement marked on ground.




Place Stakes: See step one for where single guys and stake bars are used. For stake bars, place stakes through stake bar and winch plate where shown.

For single guys with stakes, place stake through web guy ring.


Drive stakes.

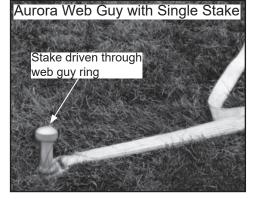

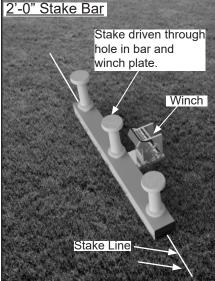

Lacing: Starting at Center Pole Hole, install the flag poles and flags at the peaks of the tent. Lace down to Eave Line.

<u>Note:</u> Flag pole is installed at center pole hole. For flag pole instructions, see page 10.

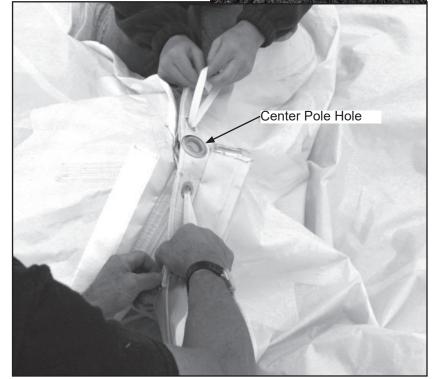

**Finishing Lace:** At bottom of Lace, Tie off long loop to bottom loop as shown. Fasten snap to web loop.




**Fastening Lace Flap:** Go back up to center pole hole and begin fastening flaps together. Walk on tent with stocking feet for protection of fabric.

Insert flap on loop side between flaps of hole side.



7 Attach Guys: Attach snaps of guys thru both plates at lace. Keep guys very loose. Attach the rest of the guy snaps around tent. Be sure that guys on ends are in the "X" position as shown in the staking layout on page 2.

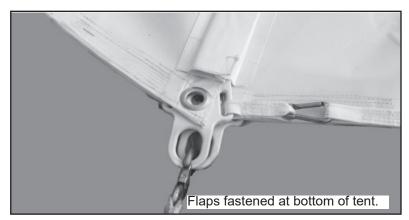


# **Raise Side Poles:**

Insert the sidepoles into the grommets and plates around the perimeter. Stand up to nearly vertical and apply just enough tension on guys to keep poles in position.



# **Raise Center Poles:**

From underneath the tent, insert the pin of the centerpole through the grommet at the peak and push the pole with the fabric up until the centerpole is vertical. The bottom of the pole should be positioned on the mark made in step one.

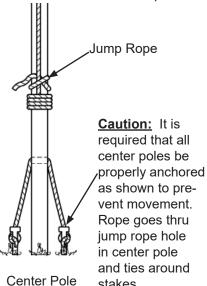



# Winch for Tension:

stakes.

Straighten the side poles around the tent so that bottom of poles are positioned on their respective marks. Tension guy webs with ratchets all around tent until poles are vertical and plumb. Do not over-tension.

The following tensioning sequence is recommended for the best overall appearance:

- 1. Tension webs at the lace lines
- 2. Tension webs at the rounded corners.
- 3. Tension webs at the ends.
- 4. Tension webs at the valleys last.



**11 Final Adjustment:** Due to changes in climactic conditions, periodic inspection and adjustment should be made.

Protective covers are recommended for all stakes and stake bars.

**Important:** Check guys periodically for tightness and maintenance of good condition.

Proper installation suitable to site conditions is the responsibility of the installer.

# 12 Take Down:

Use extreme caution removing all poles.


- 1. Spread ground cover.
- 2. Loosen tension on all web winches.
- 3. Slant side poles inward.
- 4. Remove center and side poles.
- 5. Reverse installation steps.

6. Store tent in a cool, dry area. Never store while wet or damp.

# 3 Walls:

**Standard walls:** Install top of walls by clipping the top hooks of wall to wall-rope around the eave of the tent.

WeatherShield walls: Slide the Aurora WeatherShield Rail onto the wall keder and use snap straps on each end of wall to lock the rail in place. Then slide the Weather-Shield Rail onto eave keder of tent.

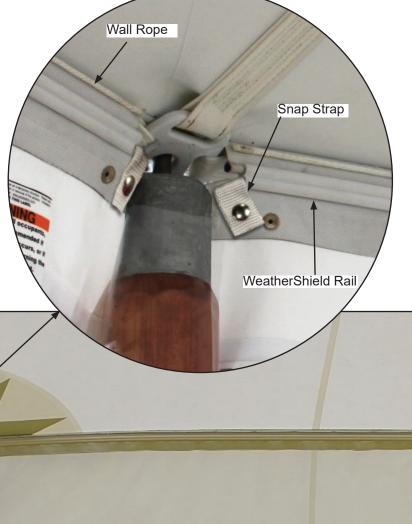


# **Aurora Flag Pole Installation Instructions**




### **STEPS**


- 1. Fit center pole holes of mating fabric pieces together and lace a couple of holes each side.
- 2. Underneath tent, slide flag pole up thru both top hole rings.
- 3. Slide collar with knob set screw down over flag pole this will sit on top of top hole rings.
- 4. Tighten knob set screw onto flag pole until snug so flag pole cannot slide back thru tent pole holes.
- 5. Slide flag PVC assembly down over top of flag pole.
- 6. Insert top knob into top hole of pvc assembly and screw until snug.

# **MORE STAKING LAYOUTS**

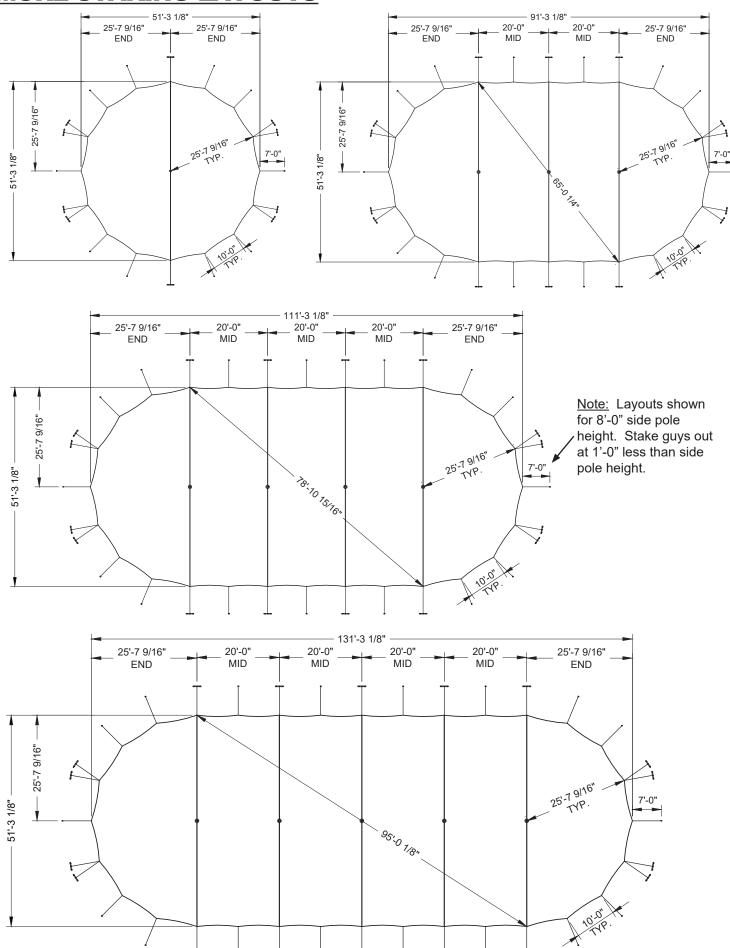

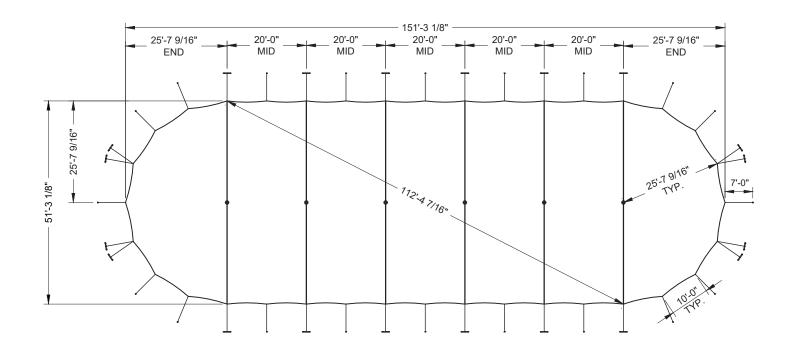

# **QUEEN/KING MIDS - LEFT RIGHT DESIGNATION**

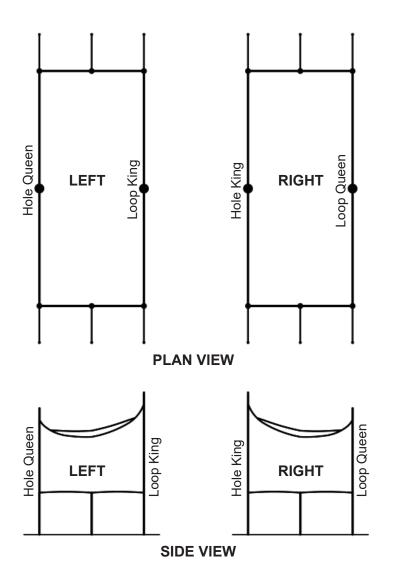



PHONE NUMBER 812 · 867 · 2421

**FAX NUMBER** 812 · 867 · 1429

Anchor products are of superior design and operate best within the parameters of these instructions. It is imperative that the instructions be carefully read and **COMPLETELY FOLLOWED**. Please read installation instructions before the installation or removal of this product. Installation instructions are available online at <a href="https://www.anchorinc.com">www.anchorinc.com</a> or by calling 1-800-544-4445.



- For each installation, the installer is solely responsible for evaluating the site and the proper securing method determined. Some soils require different staking or securing than that provided with the tent. Due to this variety of soil conditions, these are the manufacturer's suggested sequence of installation procedures. Anchor's responsibility is limited to the manufacture of the tent parts and materials. We are not responsible for methods that installers may choose to erect and secure the tent to the ground.
- 2. The number of stakes suggested in the installation instructions do not necessarily meet all or any relevant codes on the site of the tent installation. The number of stakes suggested will, in many cases, keep the tent erected, however, due to various soil conditions; these stakes will be insufficient to keep the tent secure in high winds. It is the tent installer's responsibility, not the manufacturer, to determine the appropriate number of stakes to meet the necessary wind loads on the site. Regardless of the number of stakes we suggest, we make no representation or warranty as to whether this specific number of stakes will meet the local tent code. Anchor does not, nor can it make any suggestions, representation, or warranties about the adequate staking required at each specific installation site. Staking information provided in the installation instructions is not a suggestion about what is necessary to meet a site-specific load.

For additional important information, consult: "The IFAI Procedural Handbook For the Safe Installation and Maintenance of Tentage" and the IFAI Pocket Guide "Pullout Capacity of Tent Stakes", both available from the IFAI Tent Rental Division on their website (<a href="https://www.ifai.com">www.ifai.com</a>).

3. Inasmuch as the weather is unpredictable, good judgment and common sense must be incorporated within installation guidelines. It is the responsibility of the tent installer/maintainer to determine the severity of the weather, proper time and method of installation and/or erection and disassembly. Note: We recommend that snow and ice be removed from the tent surface as soon as possible because accumulation will damage the tent or fabric structure. Please consult with our Engineering Department about the maximum loads for each product.

This product has been manufactured for use as a temporary structure. For the safety of all occupants, evacuation is recommended if threatening weather occurs, or if there is any doubt concerning the safe use of this product.

- 4. Proper safety equipment should be used at all times to insure a safe installation and take down. We suggest a careful evaluation be made to determine safety equipment needed, such as hard hats, steel-toe shoes, safety glasses and other as required. It is our desire that all installations are safe. Please be aware of hidden dangers both underground, i.e., gas lines, water lines, electrical lines, etc. and above the tent such as power lines and telephone lines.
- 5. Anchor stands behind its products in accordance with its standard Terms and Conditions of sale. A copy of our Terms and Conditions of Sale can be obtained by contacting Anchor at the telephone number and/or address on this document.